

 **agama**

www.agama-rc.com

**agama Racing**

LEAD YOU TO THE NEW GENERATION

www.agama-rc.com

ABEVO

Instruction Manual


AGAMA 1/8-scale 4WD Nitro Buggy designed with the whole new concept. No matter you are the top driver or fans of RC car, it will let you feel satisfied.

Made in Taiwan


INTRODUCTION	01
CAUTION	02
BAG A Front Diff Installation	03
Rear Diff Installation	04
Center Diff Installation	05
BAG B Shock Install (Front & Rear)	06-07
BAG C Front Spindle & CV Installation	08
BAG D Front End Installation	09-12
BAG E Rear Hub & CV Installation	13
BAG F Rear End Installation	14-17
BAG G Center Diff/Brake Installation	18-19
BAG H Switch/Antenna tube Installation	20-23
BAG I Clutch Assembly	23-24
Clutch Bell Assembly	24
Engine Mount Assembly	25
BAG J Servo Saver Installation	26
Steering Servo Link Assembly	26
Steering Post & Front Chassis Support Assembly	27
Steering Saver & Front Chassis Brace Assembly	27
Completed Steering Assembly	28
BAG K Chassis Guard Installation	28
BAG L Throttle/Brake Linkage Assembly	29
Completed Throttle/Brake Assembly	29
BAG M Air Filter Assembly	30
CHASSIS INSTALLATION	31-37
FACTORY SETUP SHEET	38-39
PART LIST	40-42

Notice: The following items are needed for completion of the PRO KIT, They are not included with this kit (unless noted), and should be obtained from your local hobby shop.
Be sure to read the instructions completely prior to assembly.


ADDITIONAL ITEMS NEEDED FOR COMPLETION

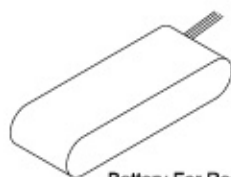


Battery For Receiver

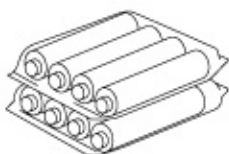


Battery For Transmitter

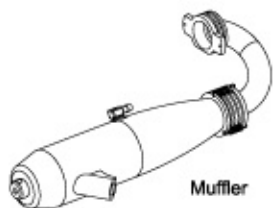

Muffler

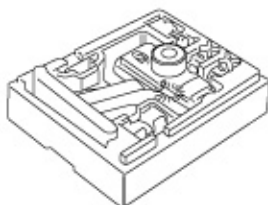

2 Channel Radio

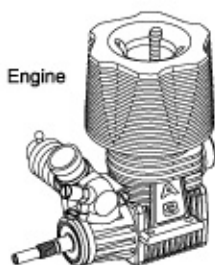

Engine

 


Body

TOOLS NEEDED TO ASSEMBLE



Hex Wrenches



Needle Nose Pliers



Phillips Type Screw Driver



Scissors



Box Wrench(5.5mm / 7mm / 10mm)



Hobby Knife



 
Instant Glue



Pliers




Screw (Sement)



Utility Wrench




 Glass or Vinyl Tape



Rubber Glue

 
ADDITIONAL ITEMS NEEDED FOR STARTING ENGINE




Air Filter Oil



Fuel Pump

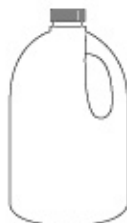


Fuel

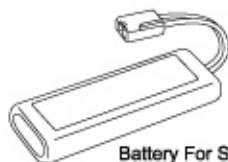

Battery For Starter Box




Glow Plug Ignitor

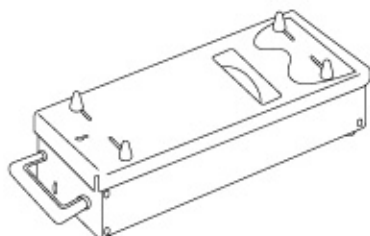


Starter Box

ITEMS NEEDED TO CONTROL CAR

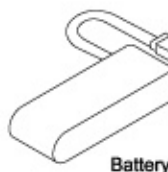

Battery

Switch

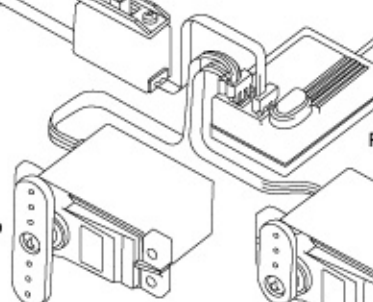

Receiver

Engine Control Servo


Steering Servo



Transmitter


STEP A-1

Front Diff Installation

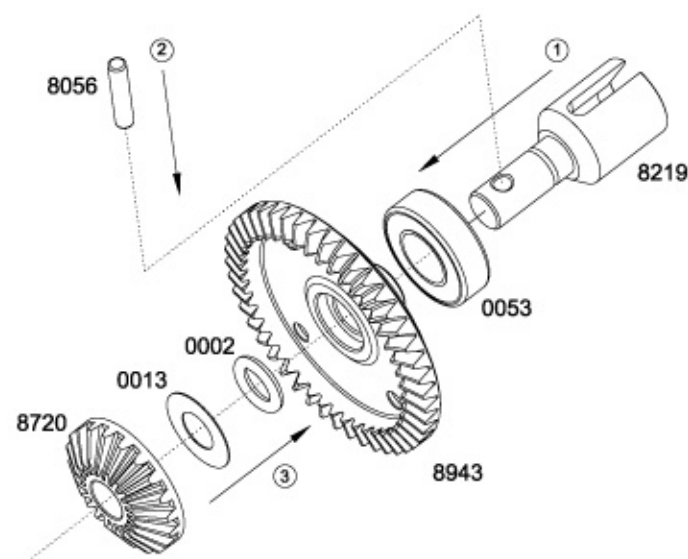



STEP A-2

Front Diff Installation

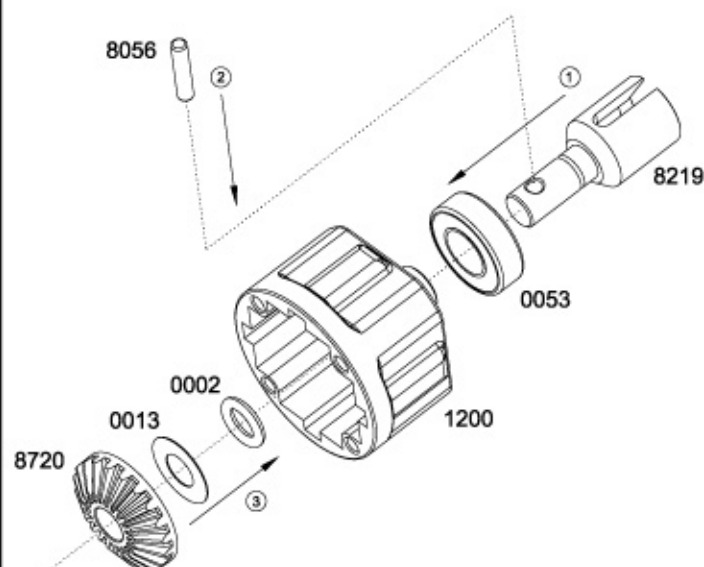


STEP A-3

Front Diff Installation

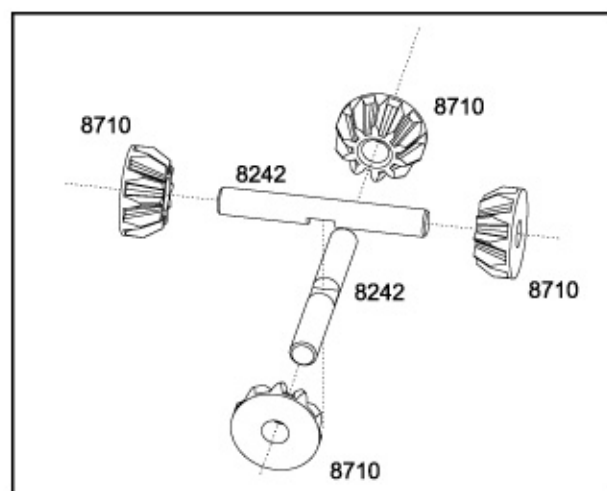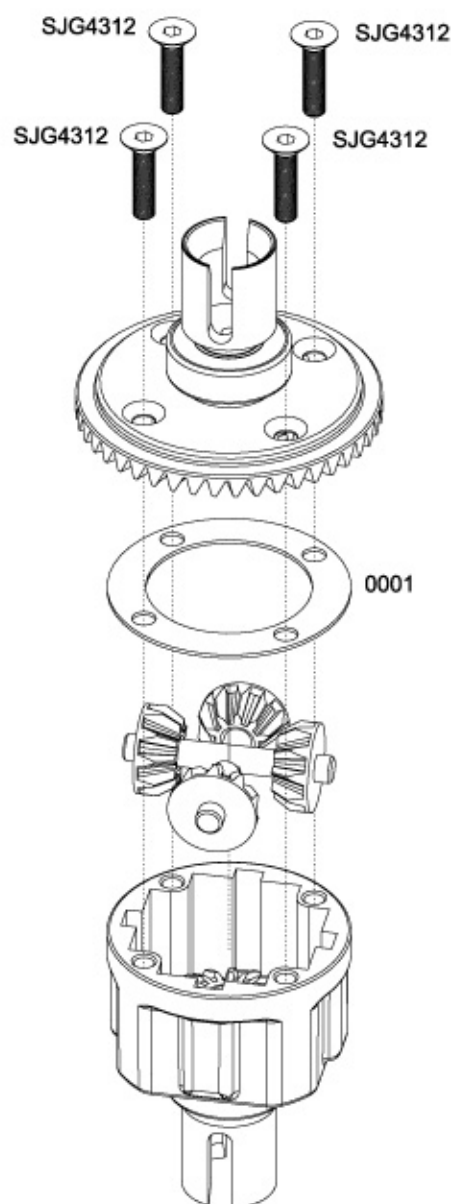


STEP A-4

Rear Diff Installation

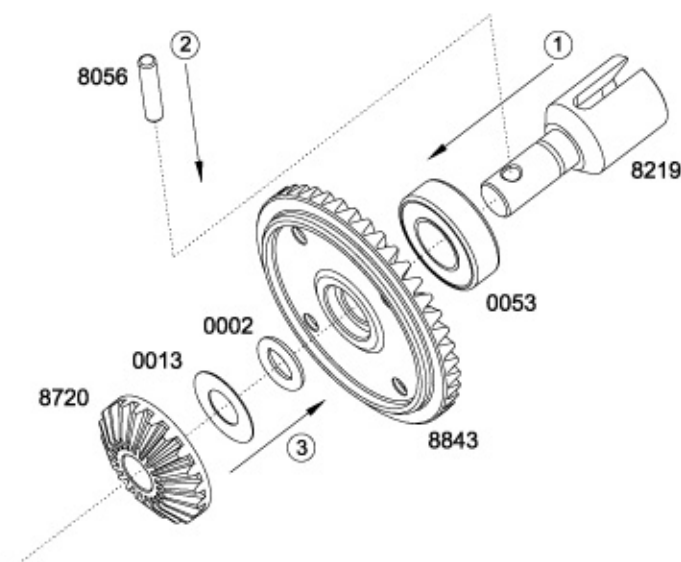



STEP A-6

Rear Diff Installation

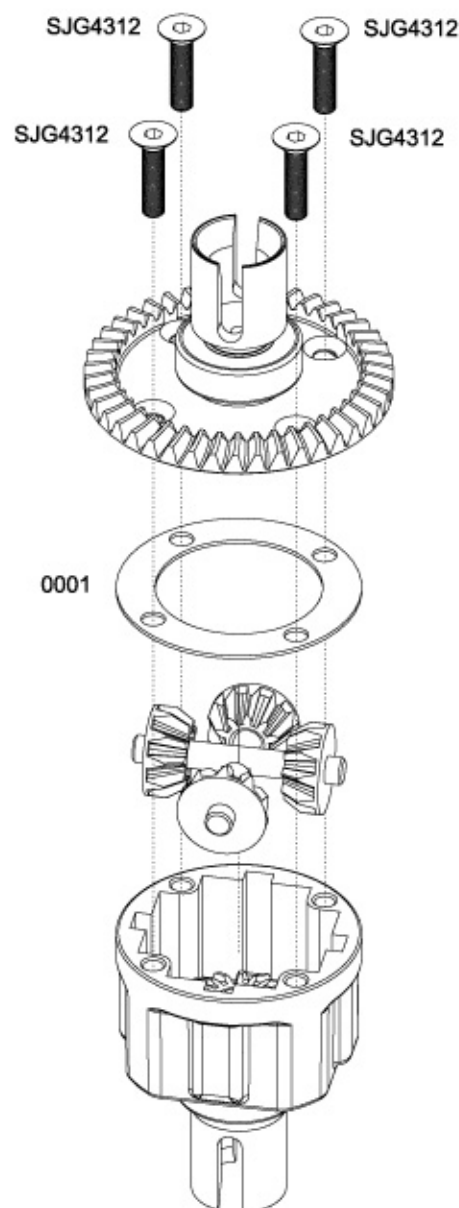


STEP A-5

Rear Diff Installation

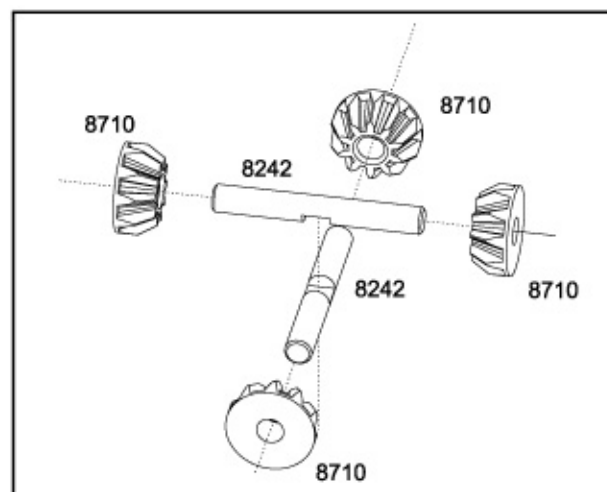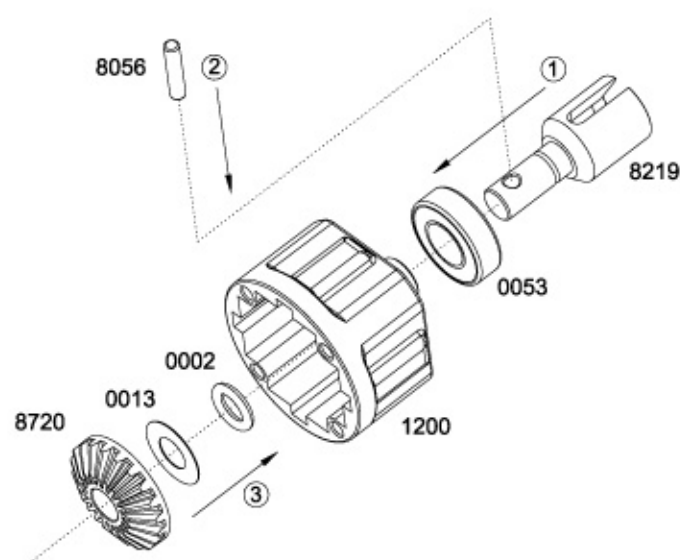


STEP A-7

Center Diff Installation

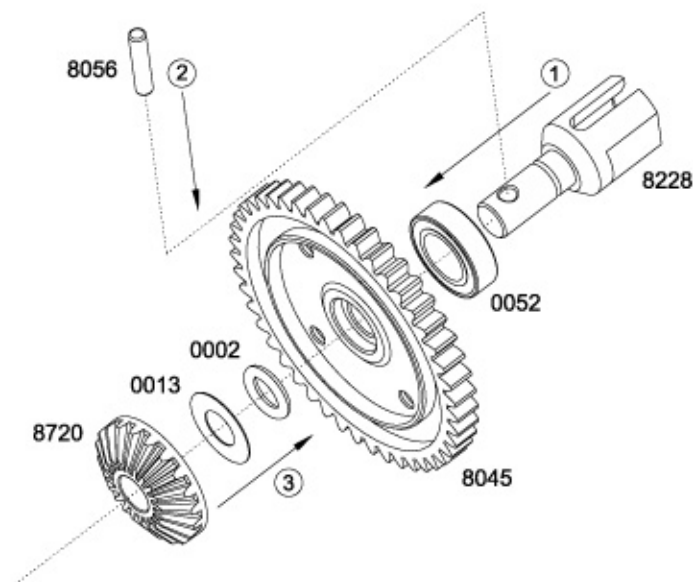



STEP A-9

Center Diff Installation

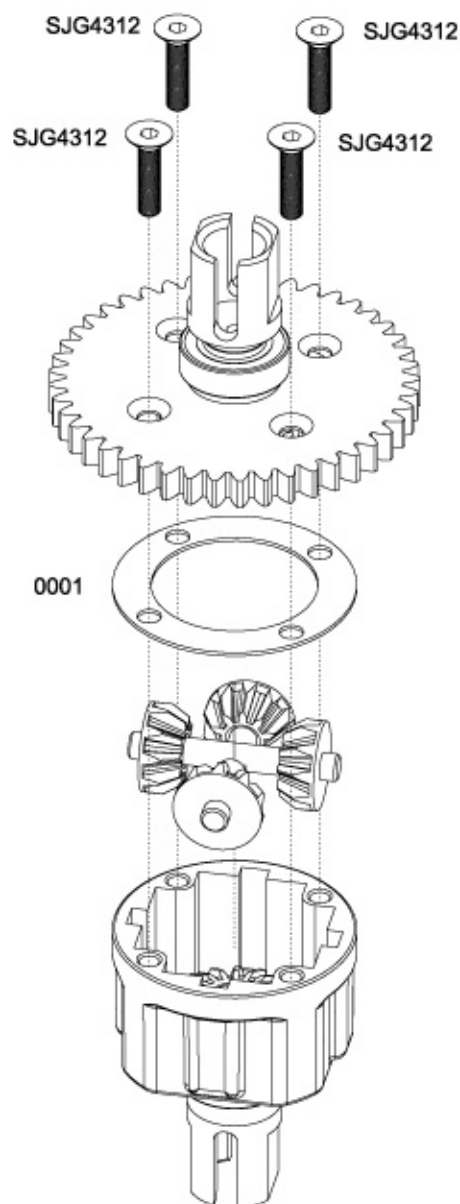


STEP A-8

Center Diff Installation

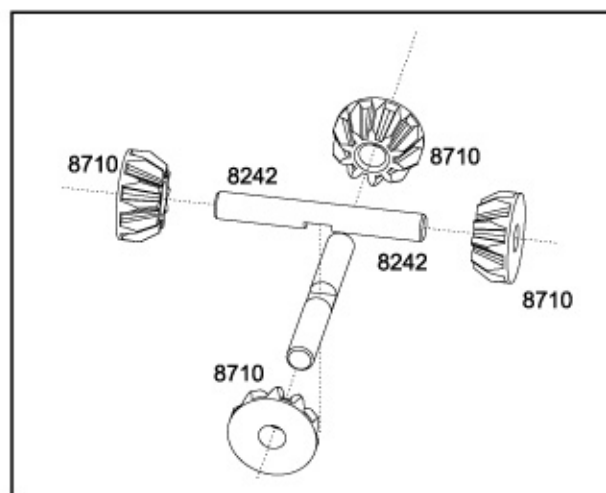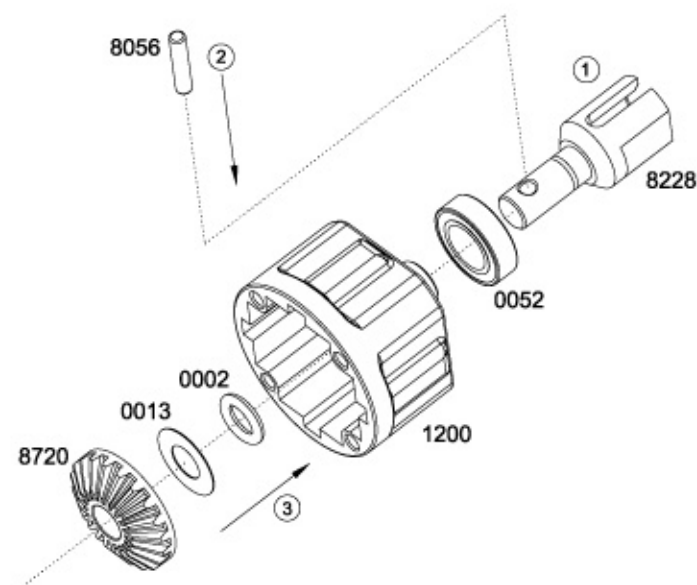

STEP B-1

Shock Install (Front & Rear)

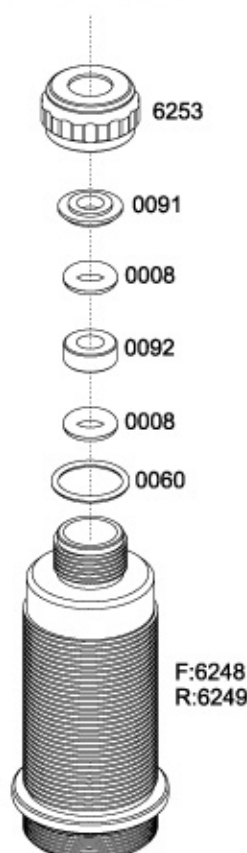


STEP B-2

Shock Install (Front & Rear)




STEP B-3

Shock Install (Front & Rear)

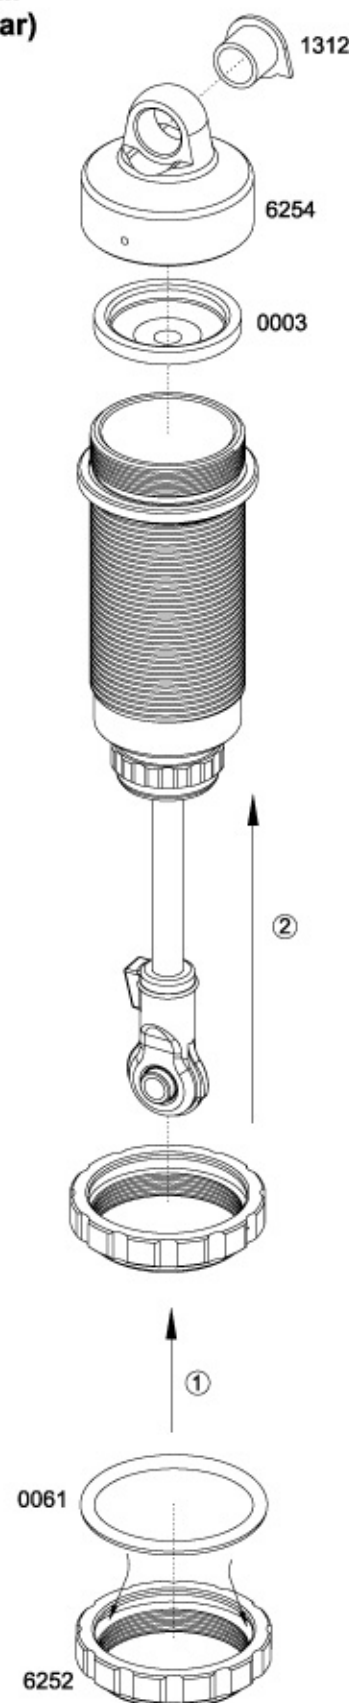


STEP B-4

Shock Install (Front & Rear)

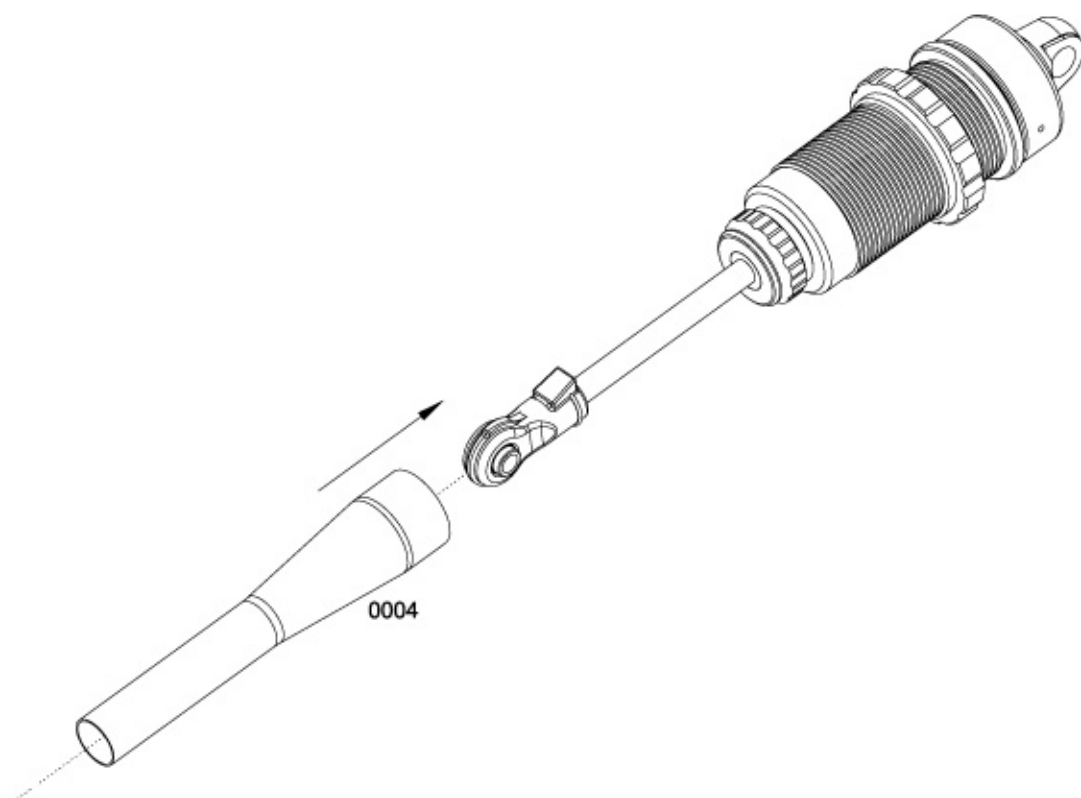


STEP B-5

Shock Install (Front & Rear)

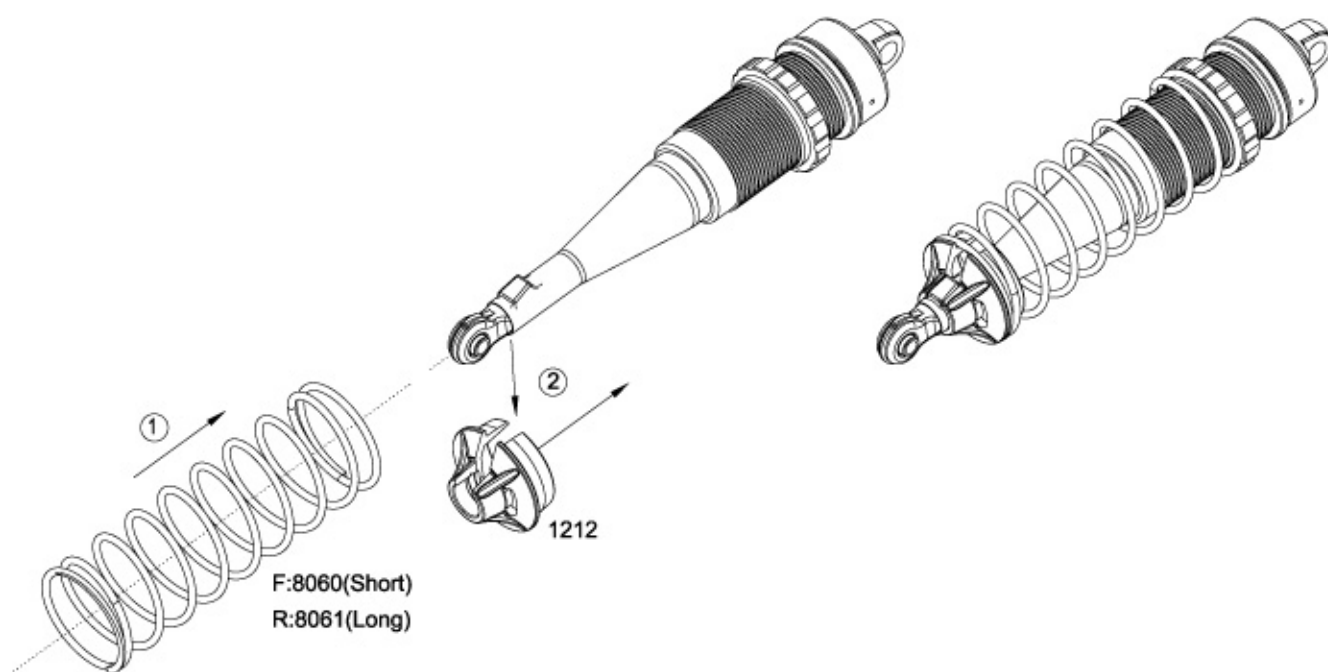


STEP C-1

Front Spindle & CV Installation

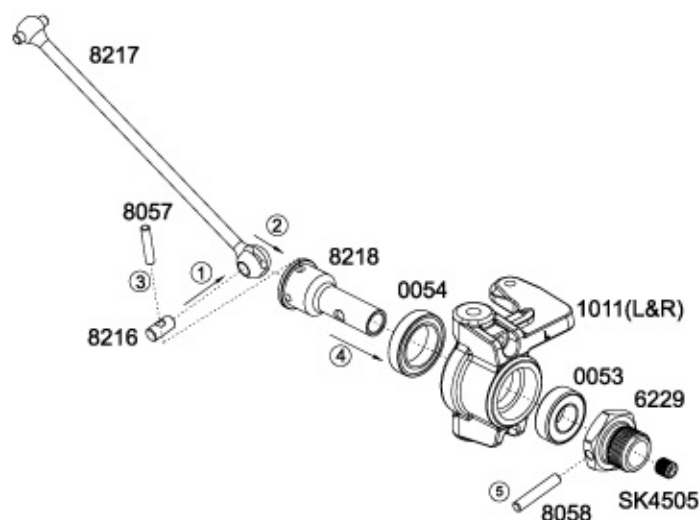


STEP C-2

Front Spindle & CV Installation

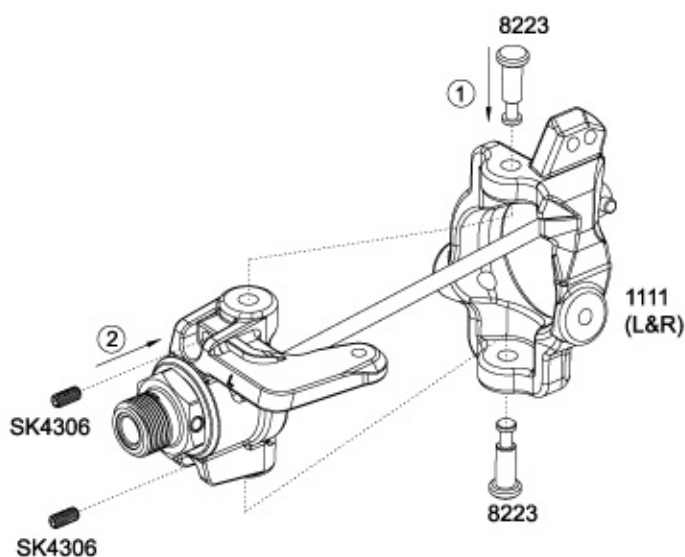


STEP C-3

Front Spindle & CV Installation

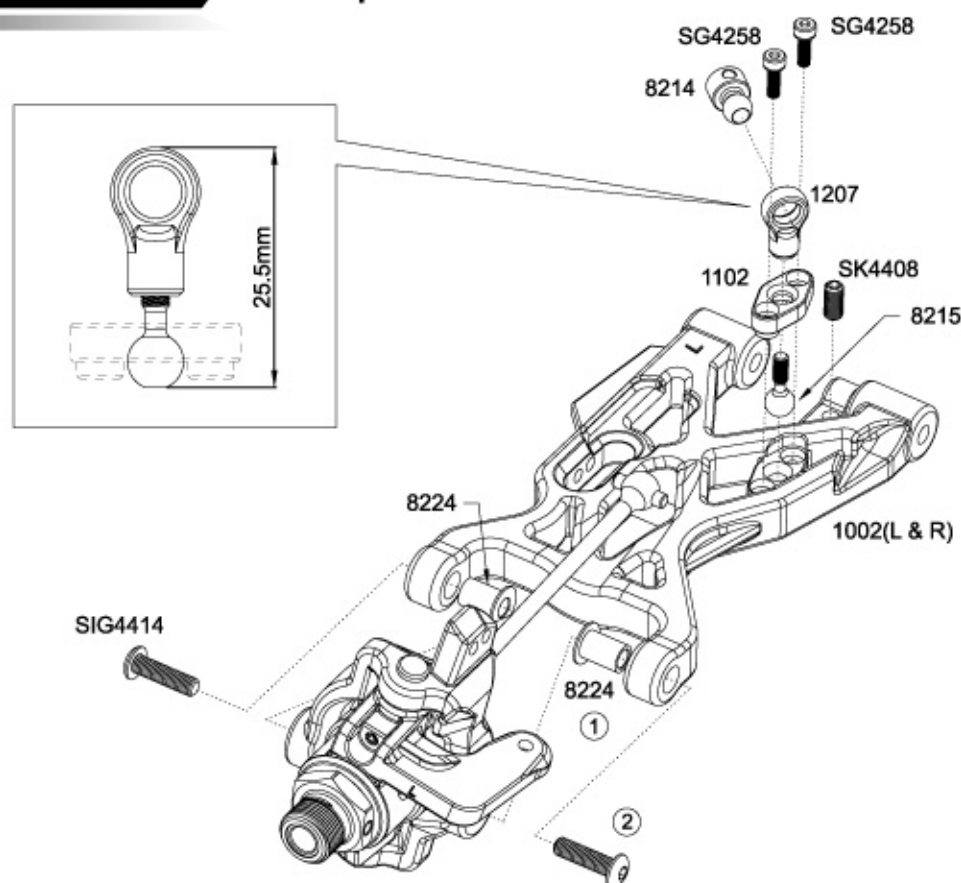


STEP D-1

Front End Installation

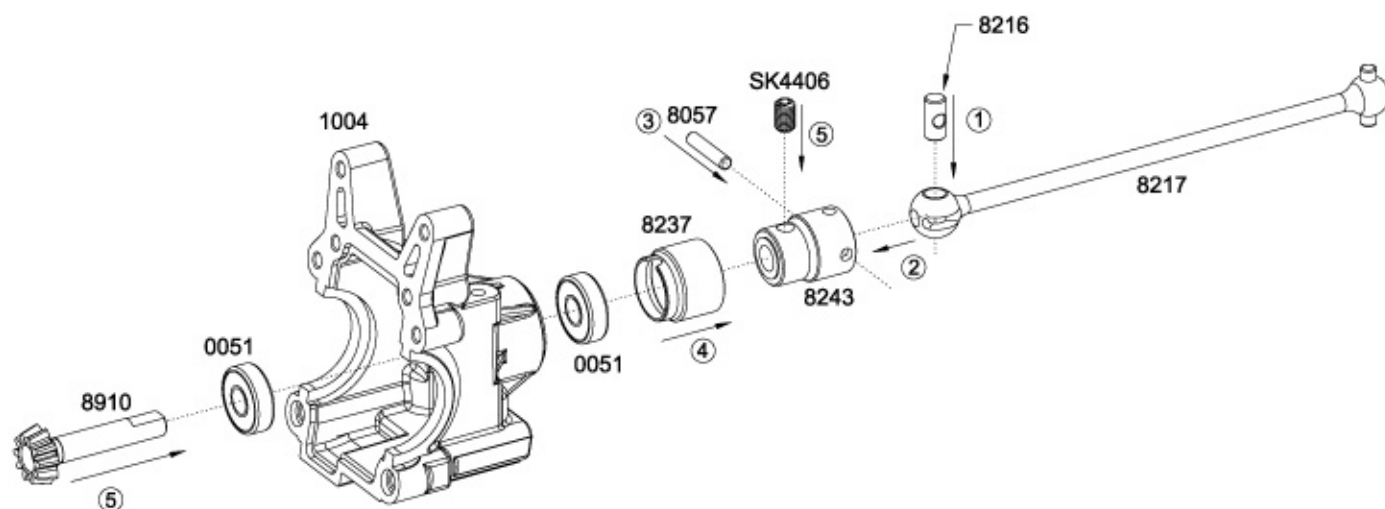


STEP D-2

Front End Installation

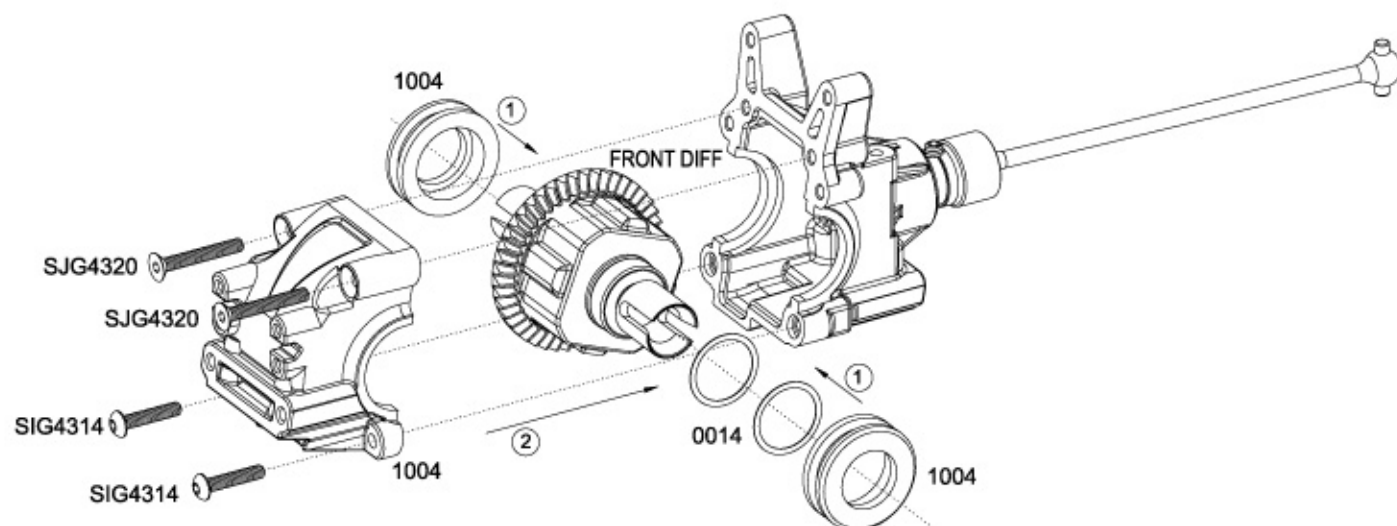


STEP D-3

Front End Installation

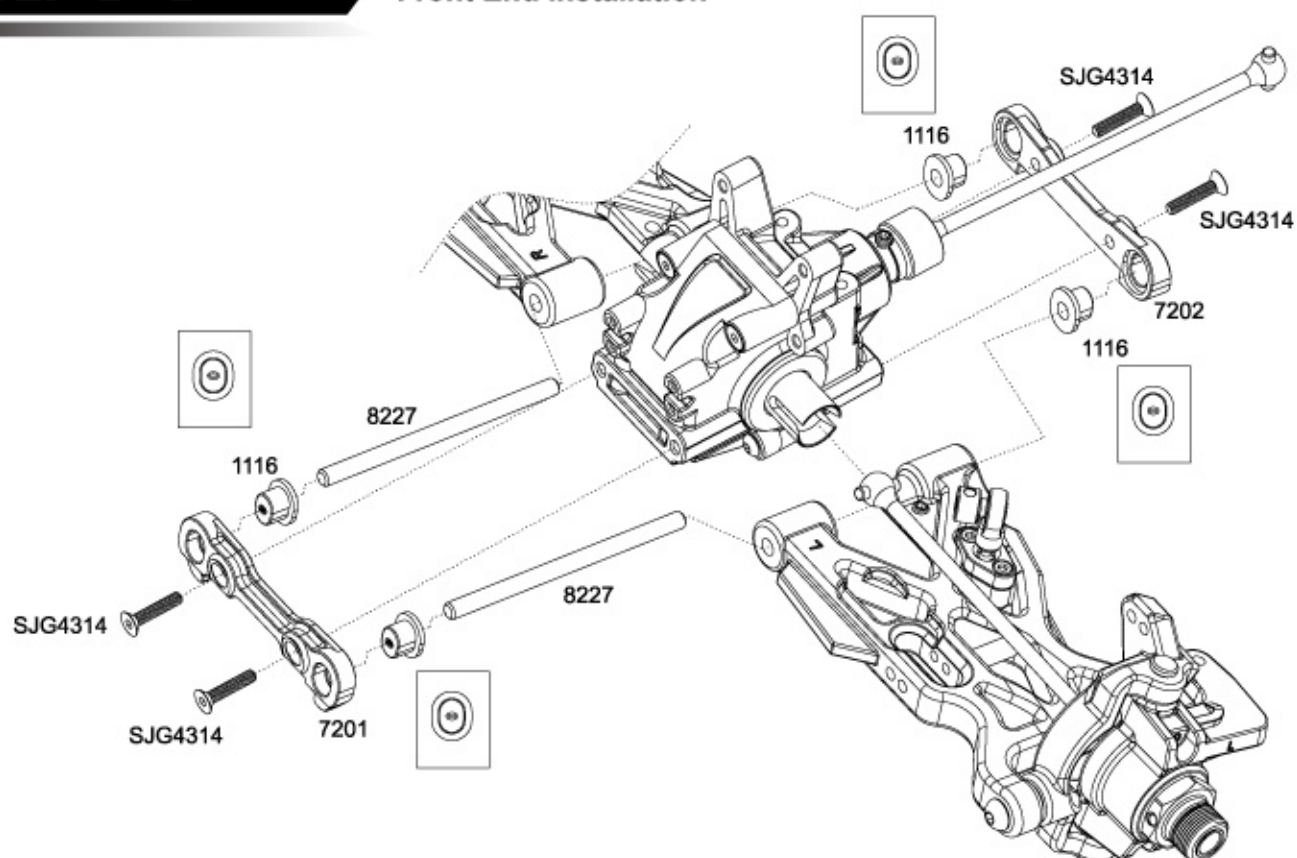


STEP D-4

Front End Installation

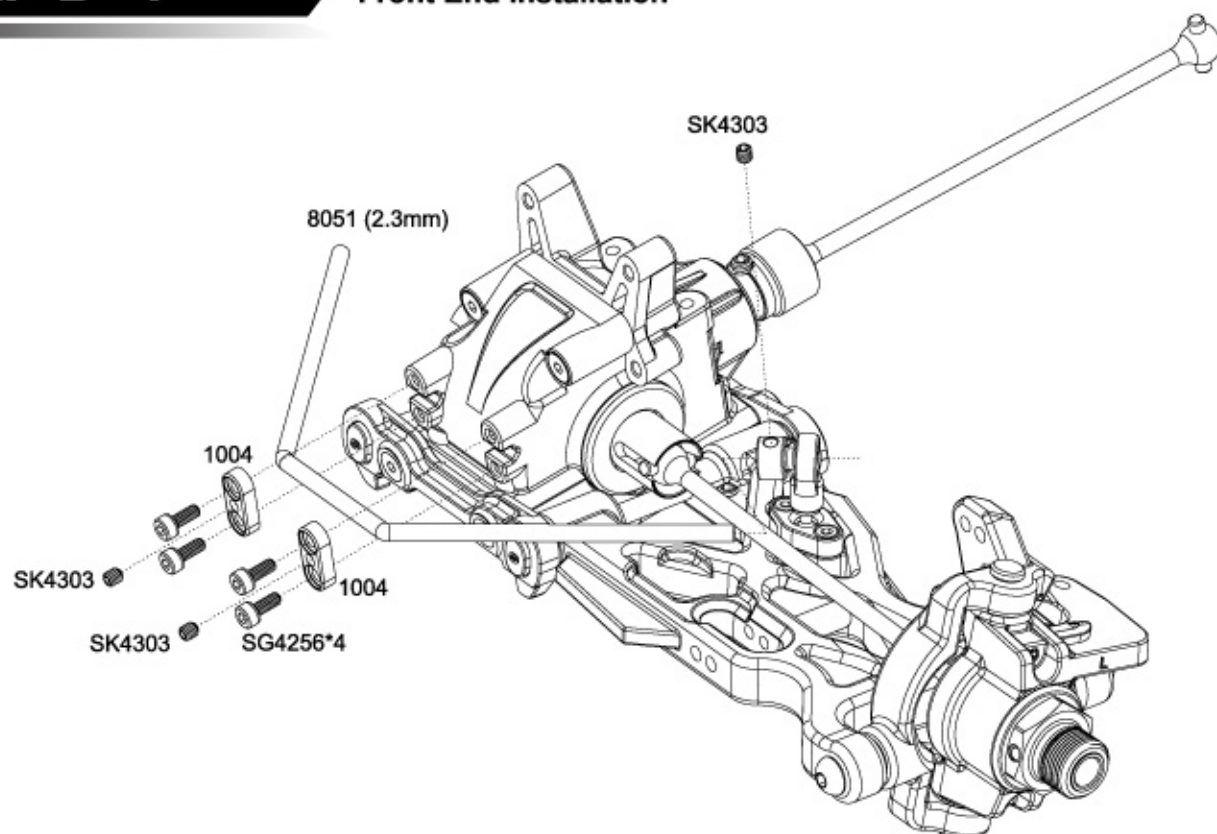


STEP D-5

Front End Installation

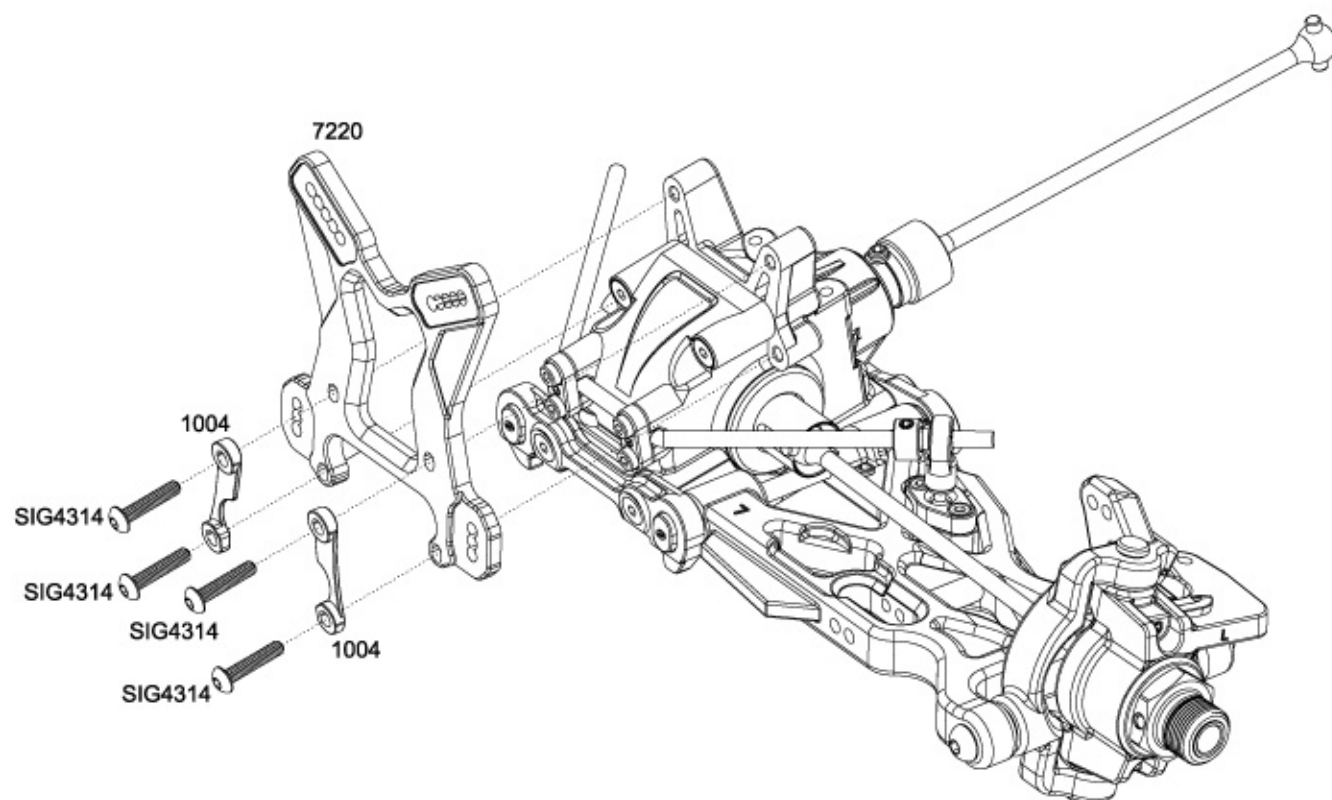


STEP D-6

Front End Installation

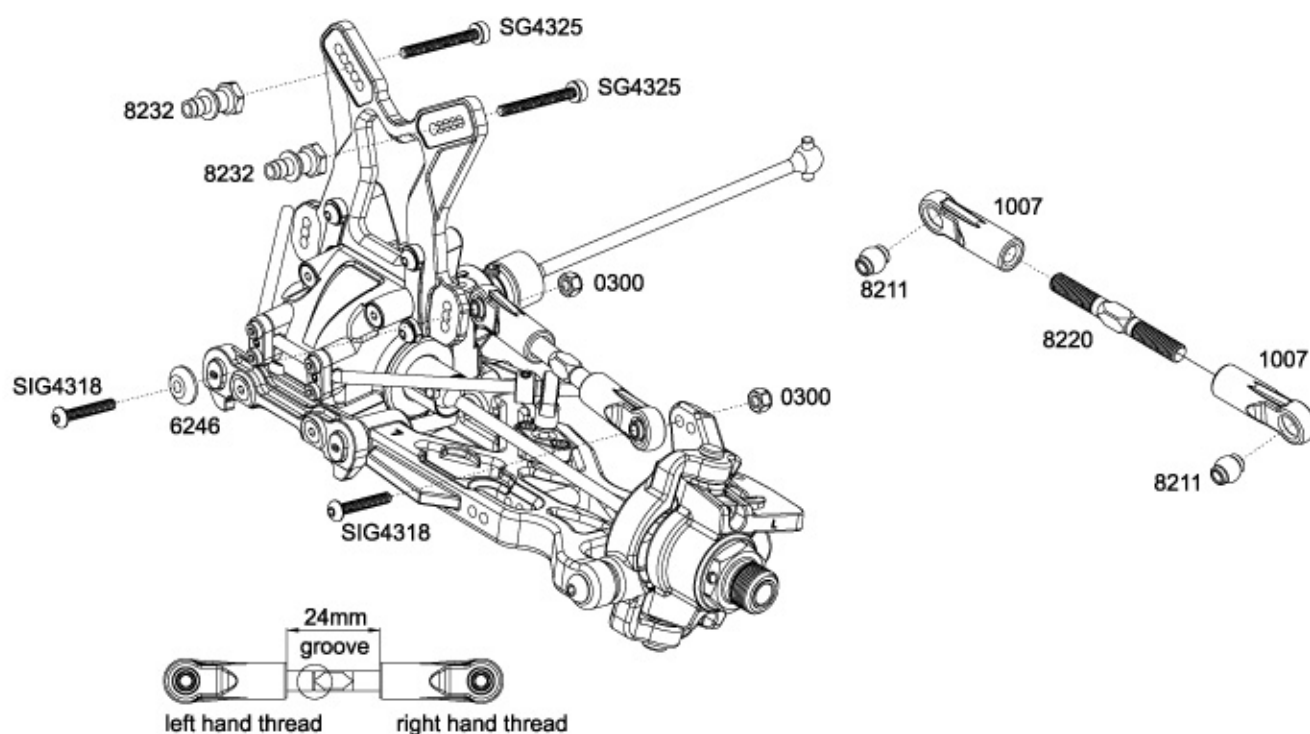

STEP D-7



Front End Installation

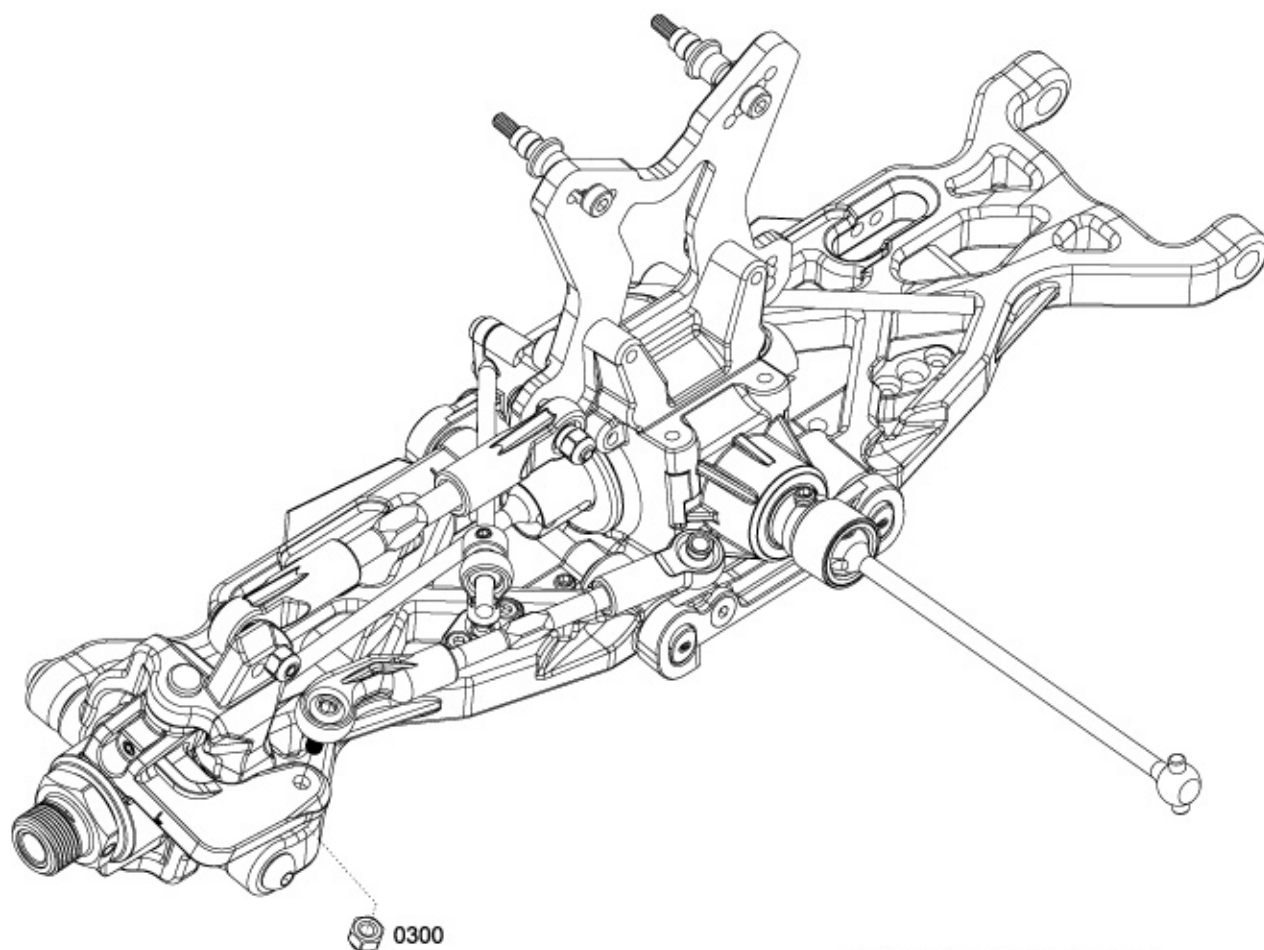

Bump Steer




Down

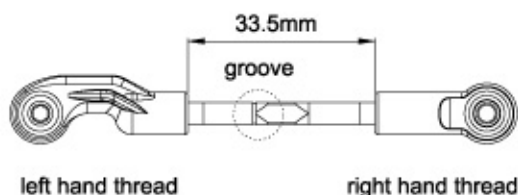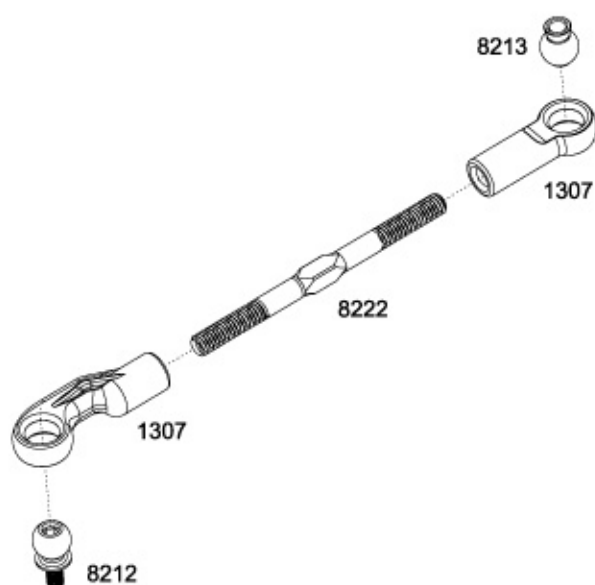


STEP E-1

Rear Hub & CV Installation

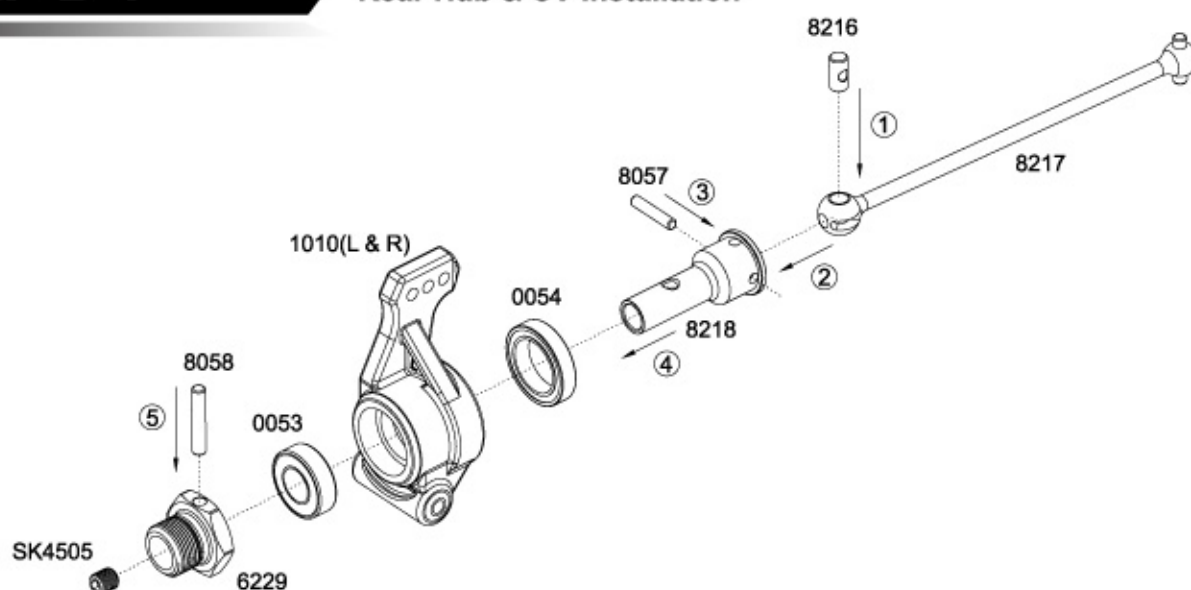


STEP E-2

Rear Hub & CV Installation

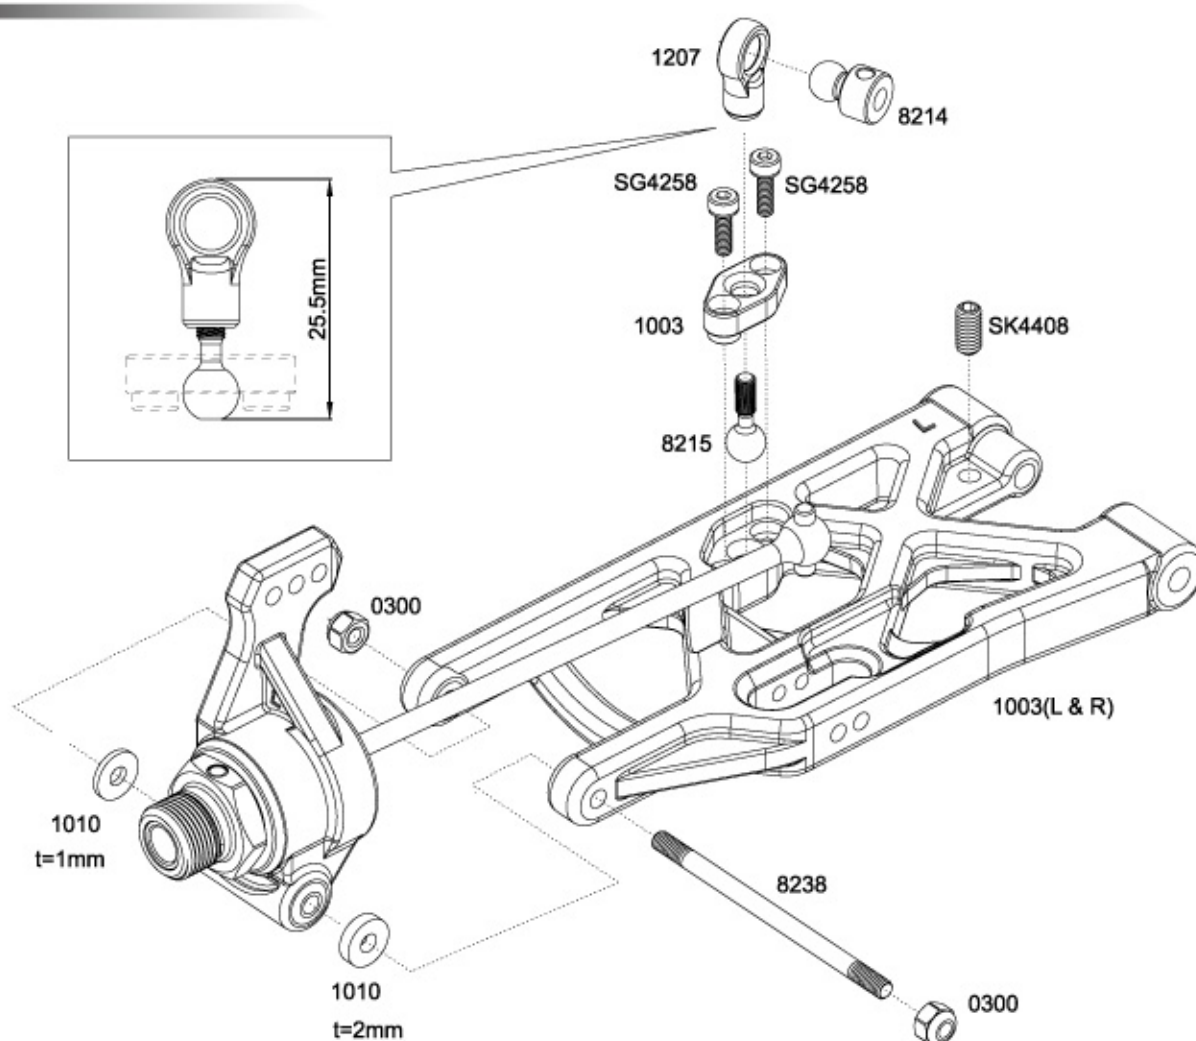


STEP F-1

Rear End Installation

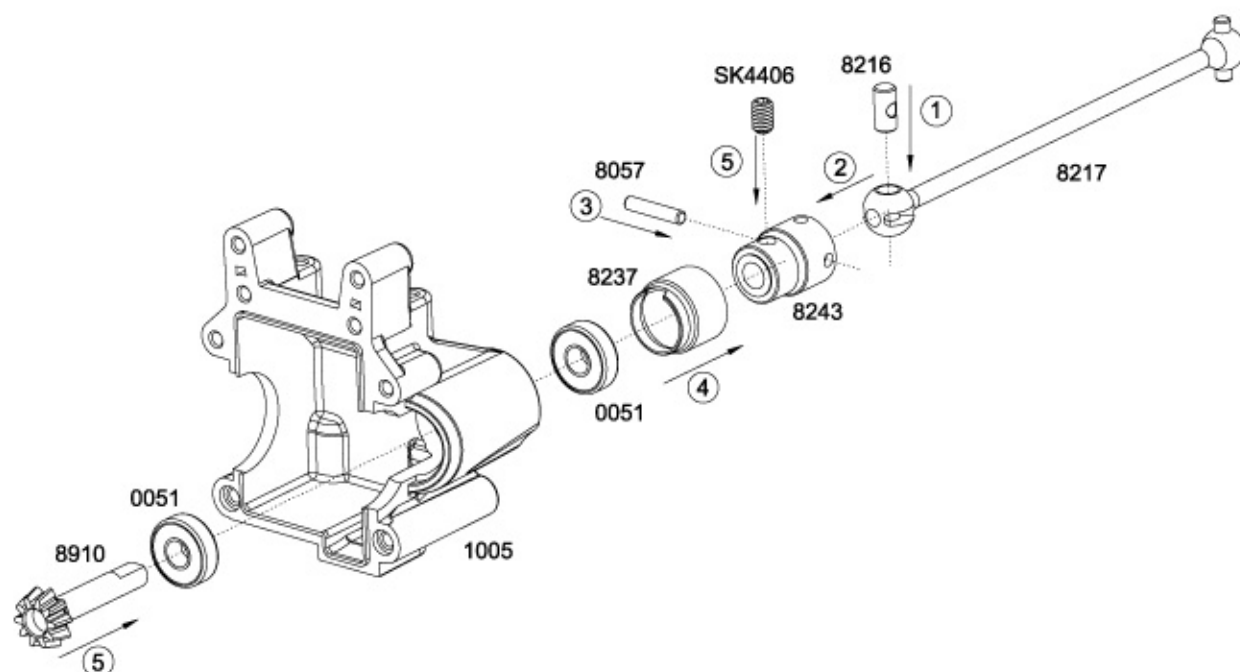


STEP F-2

Rear End Installation

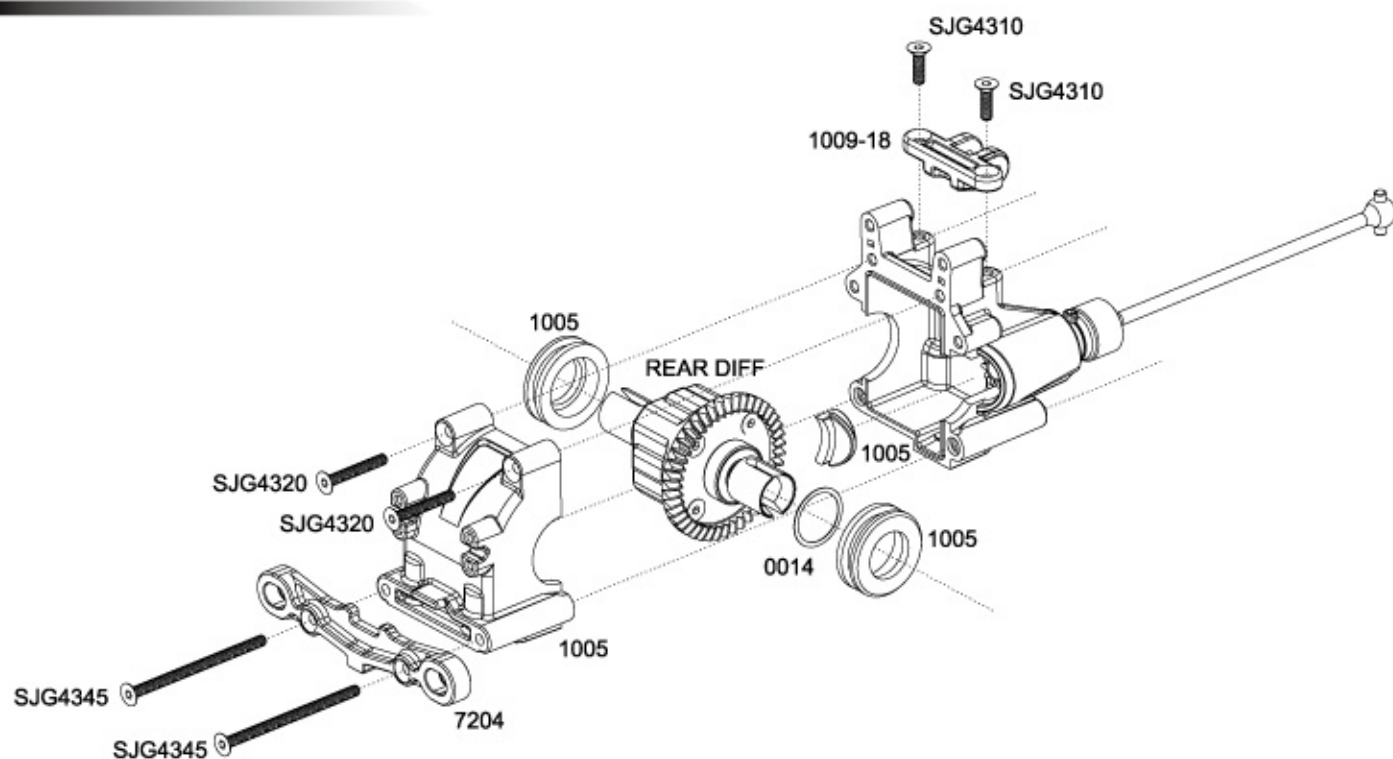


STEP F-3

Rear End Installation

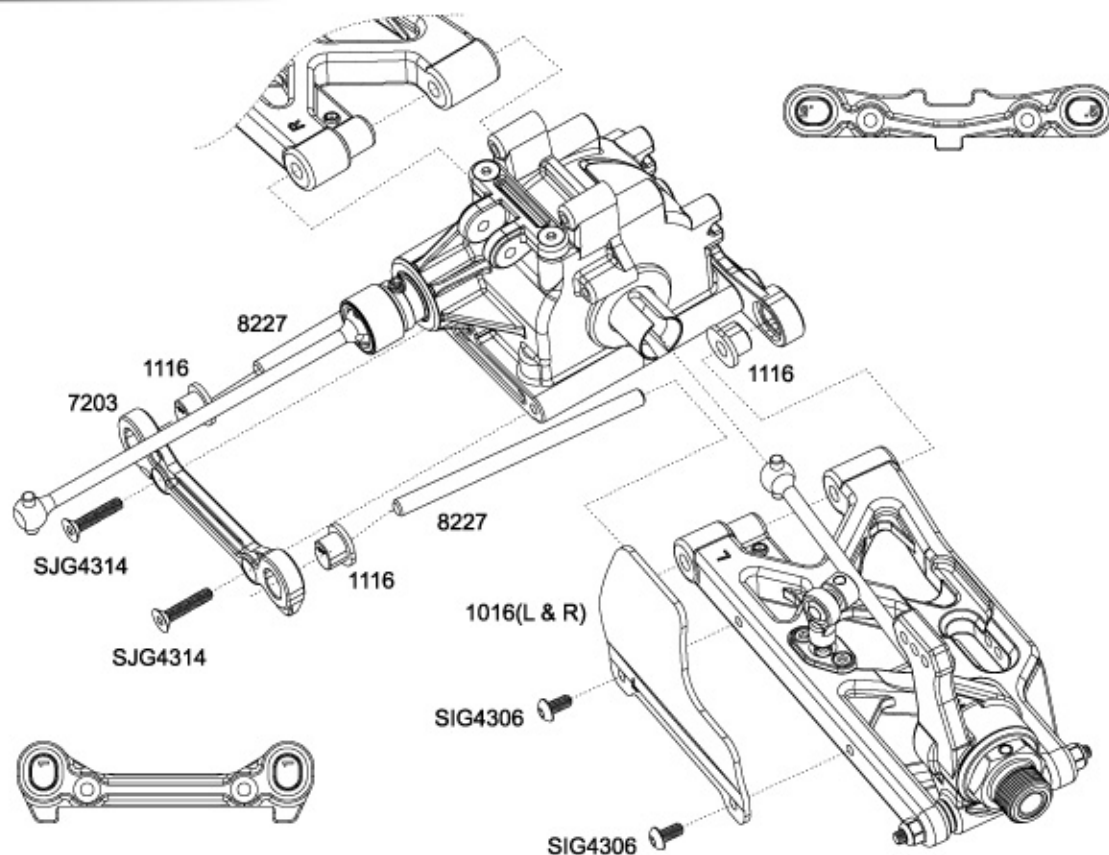


STEP F-4

Rear End Installation

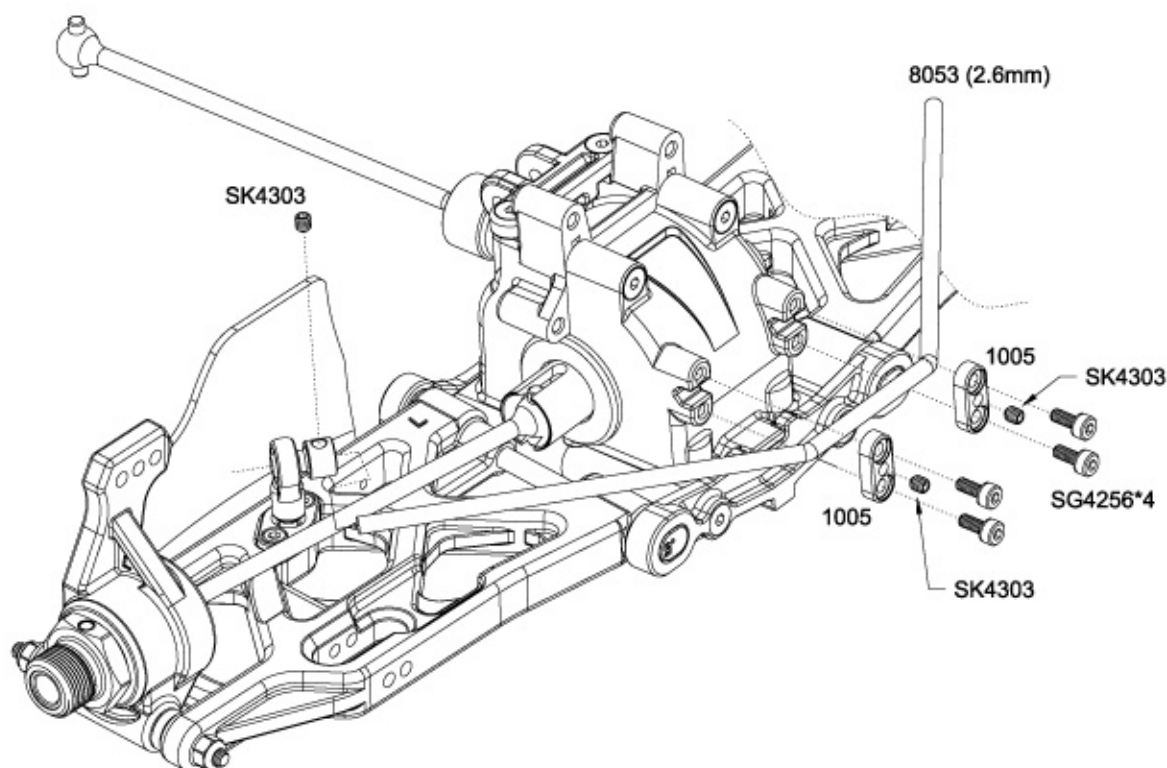


STEP F-5

Rear End Installation

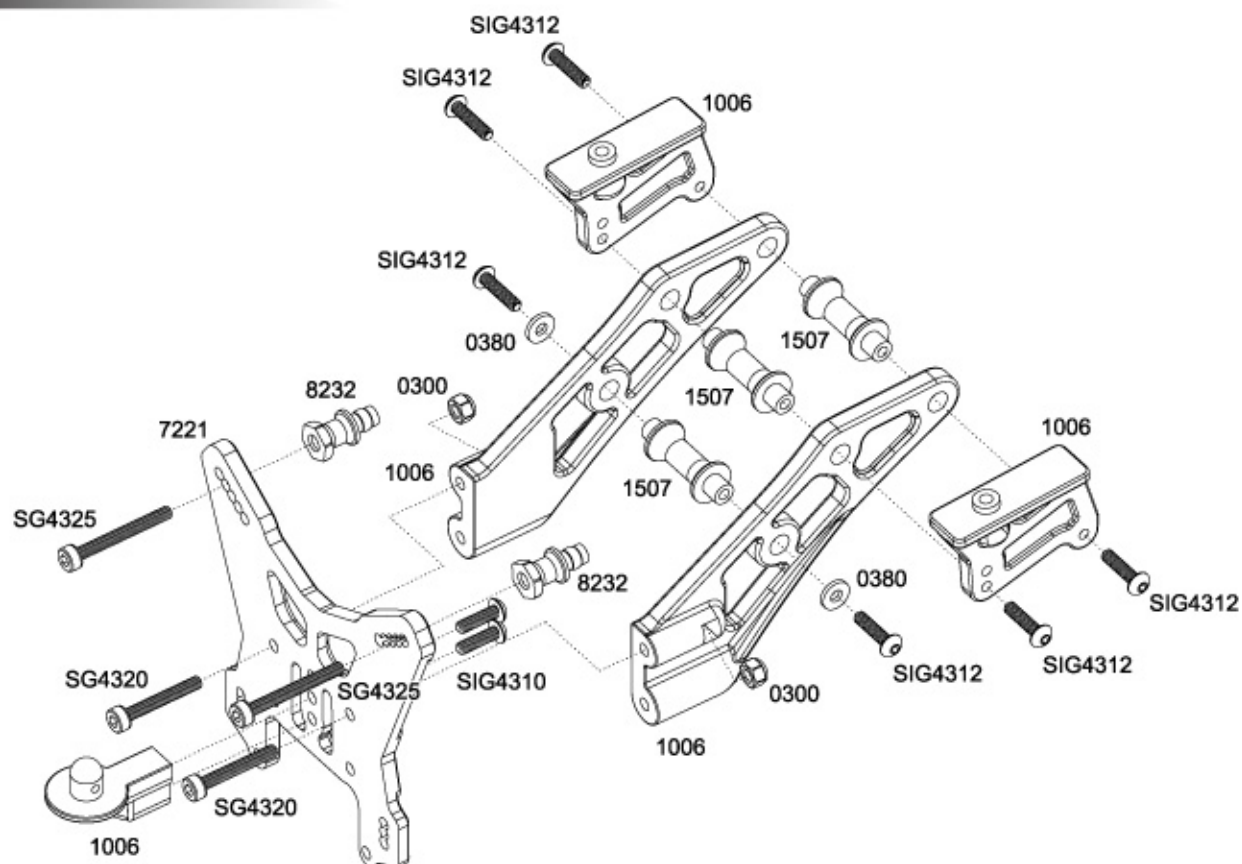


STEP F-6

Rear End Installation

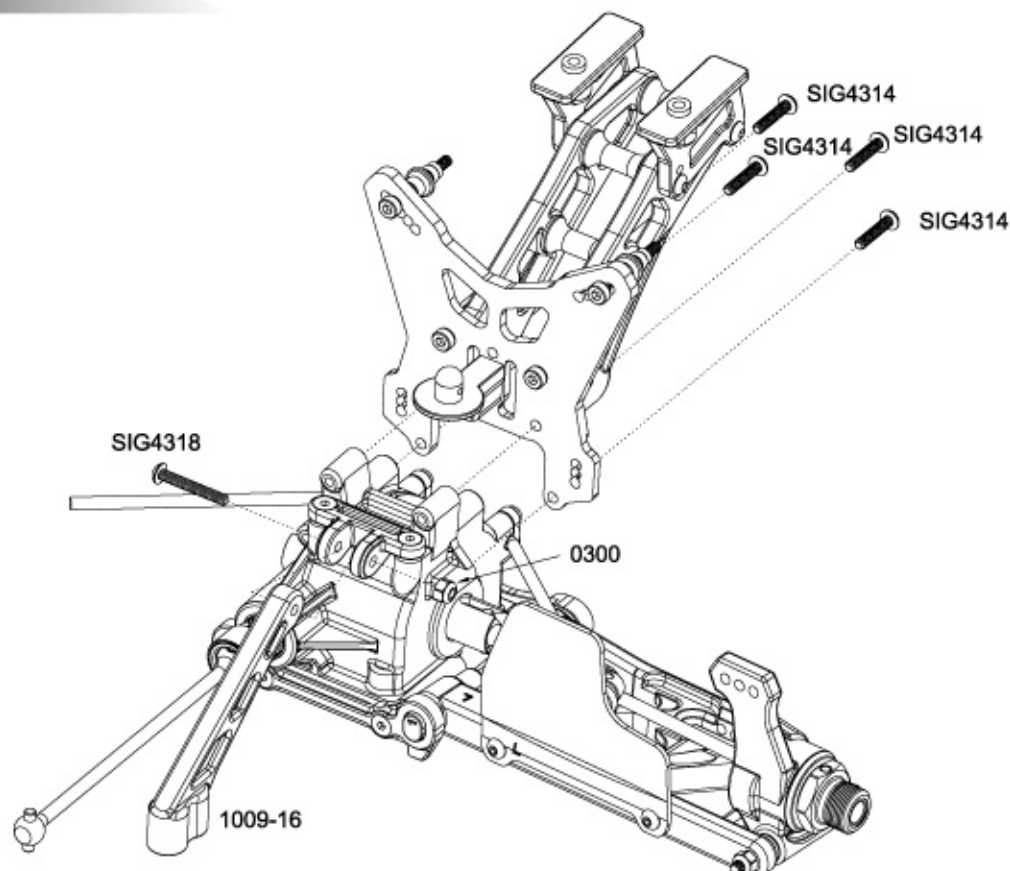


STEP F-7

Rear End Installation

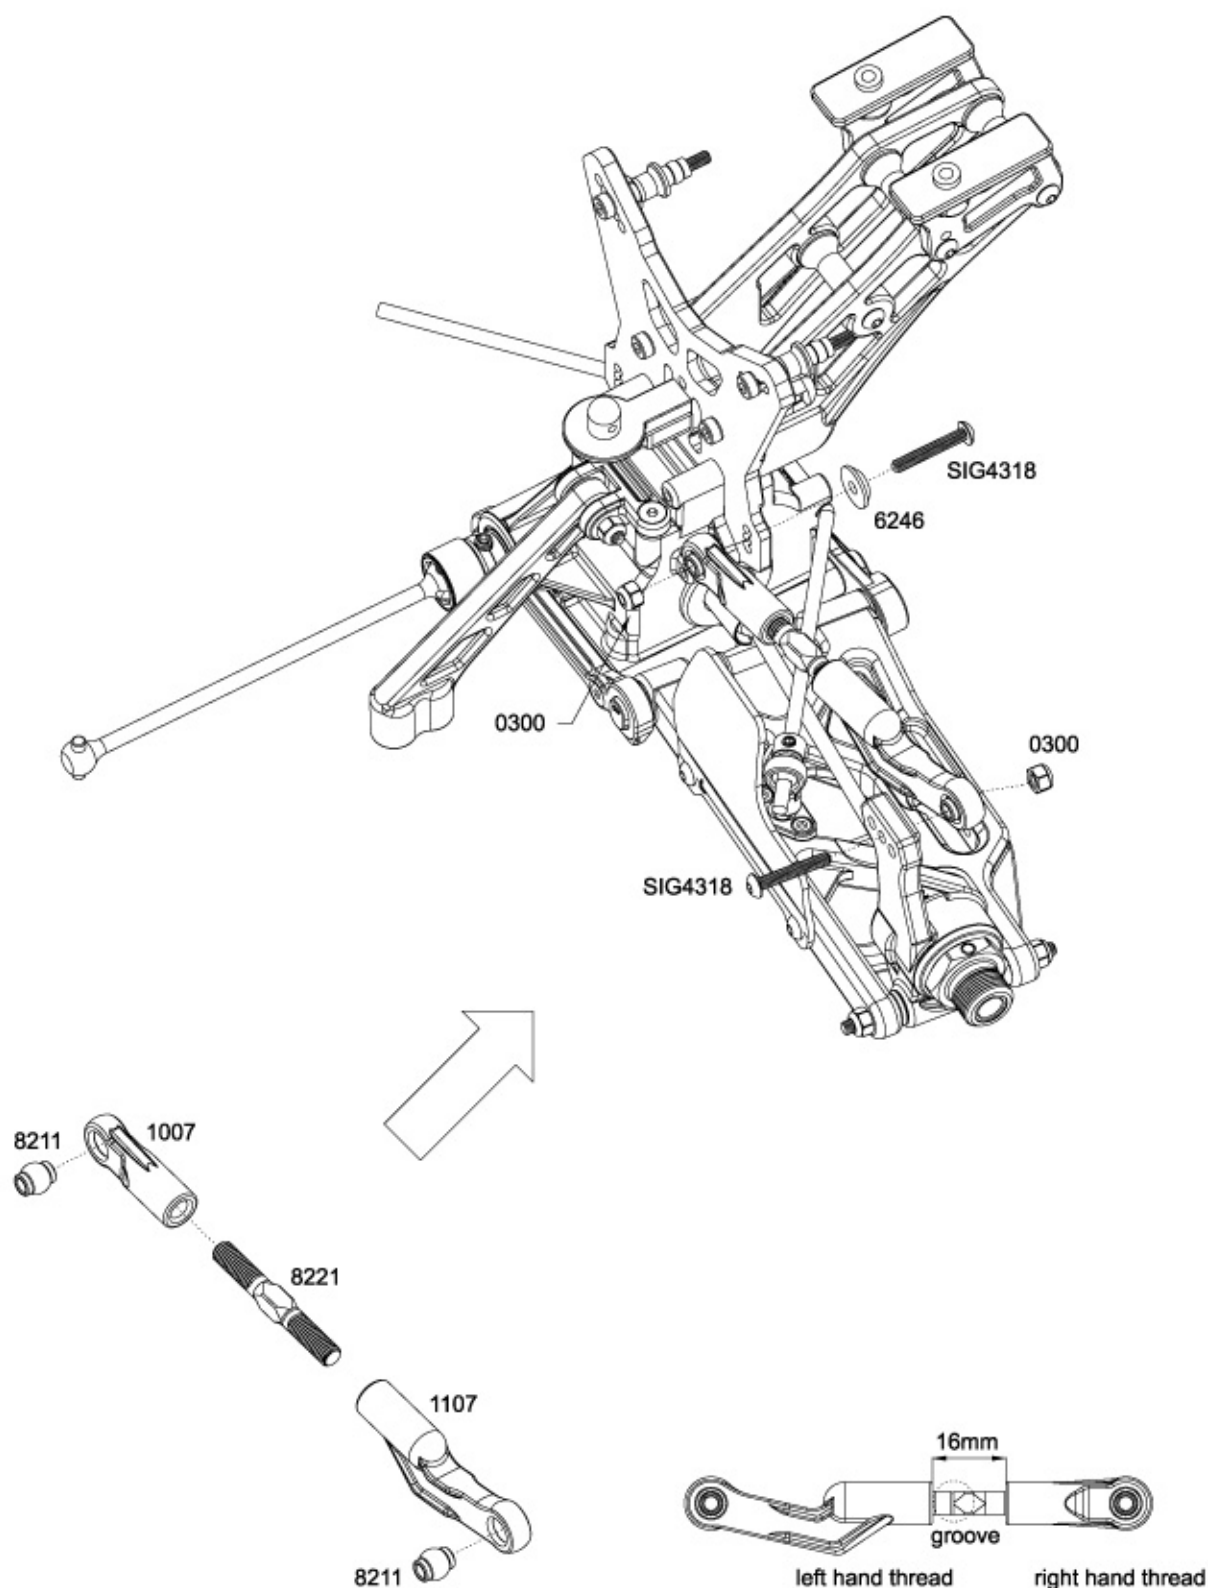


STEP G-1

Center Diff/Brake Installation

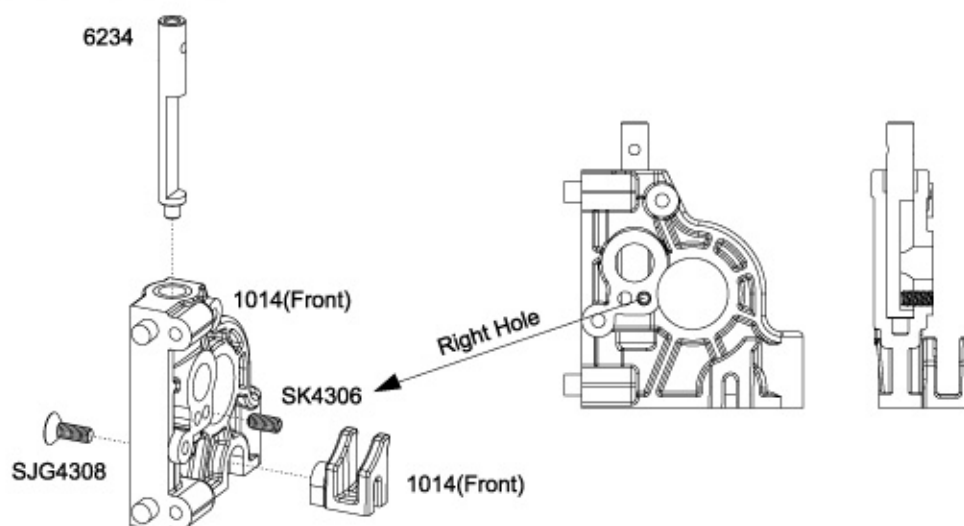


STEP G-2

Center Diff/Brake Installation

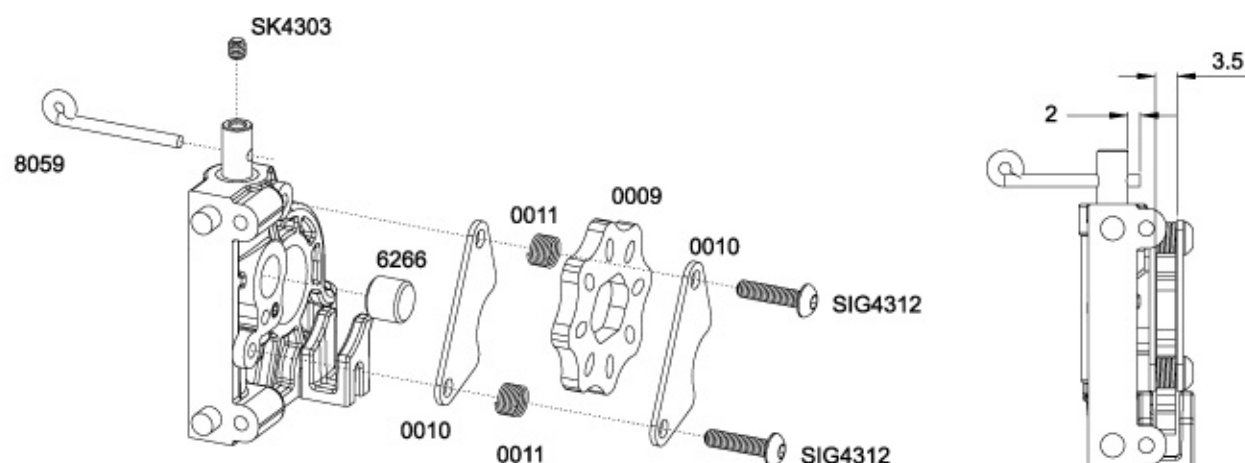


STEP G-3

Center Diff/Brake Installation

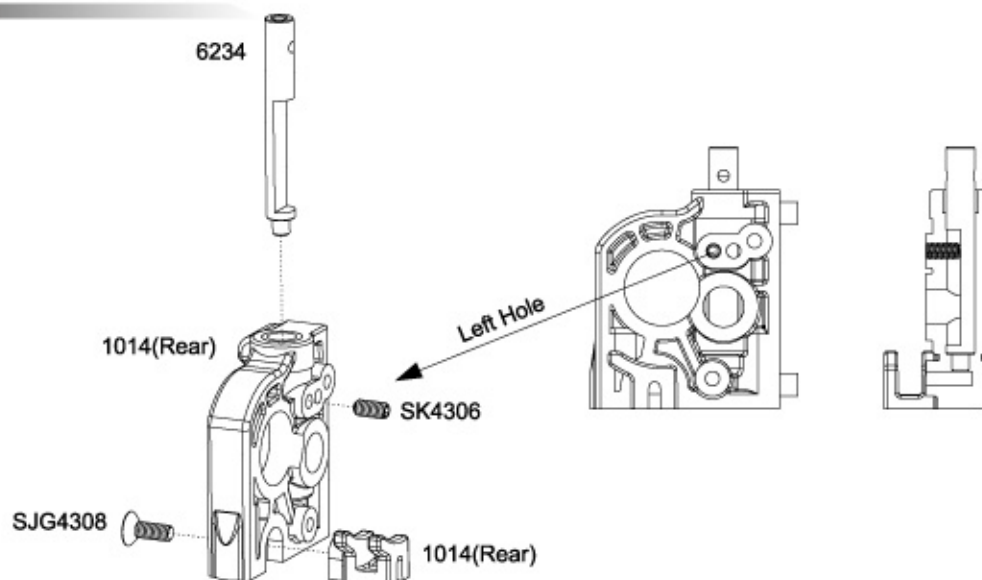


STEP G-4

Center Diff/Brake Installation

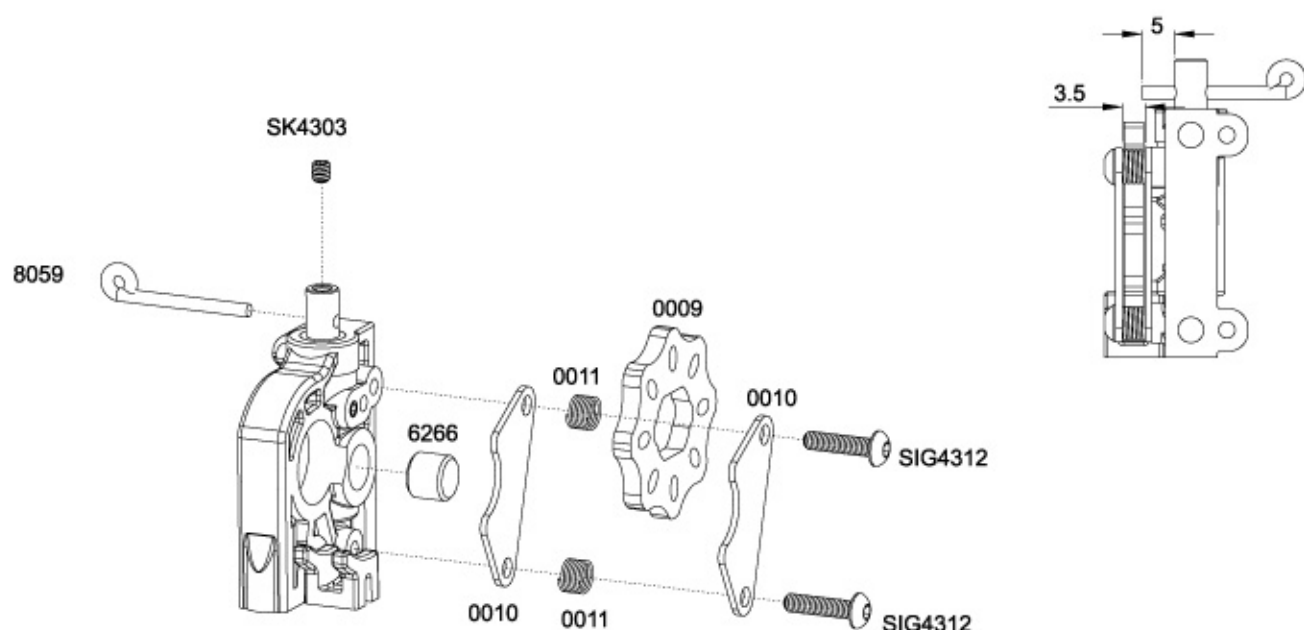


STEP G-5

Center Diff/Brake Installation

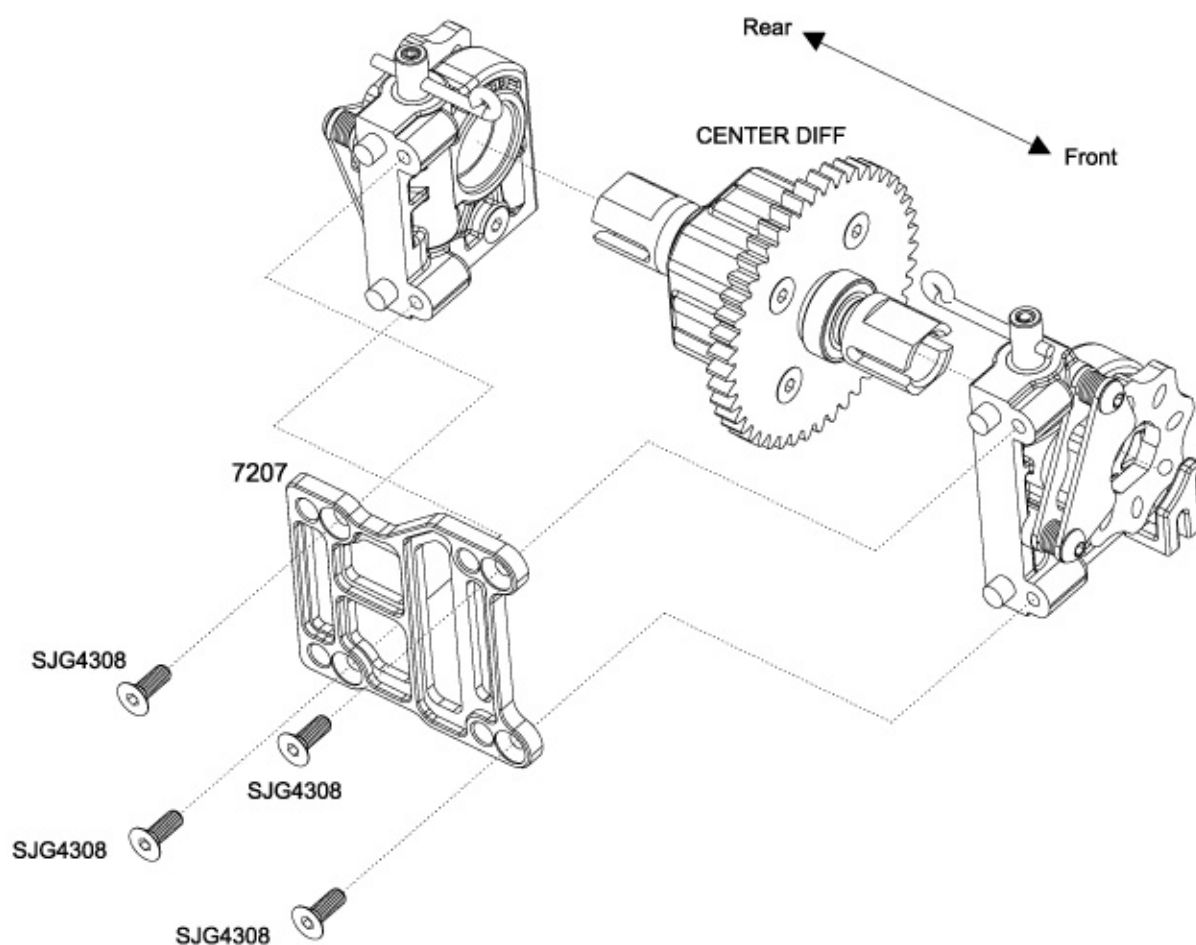

STEP H-6


Receiver/Battery Cover

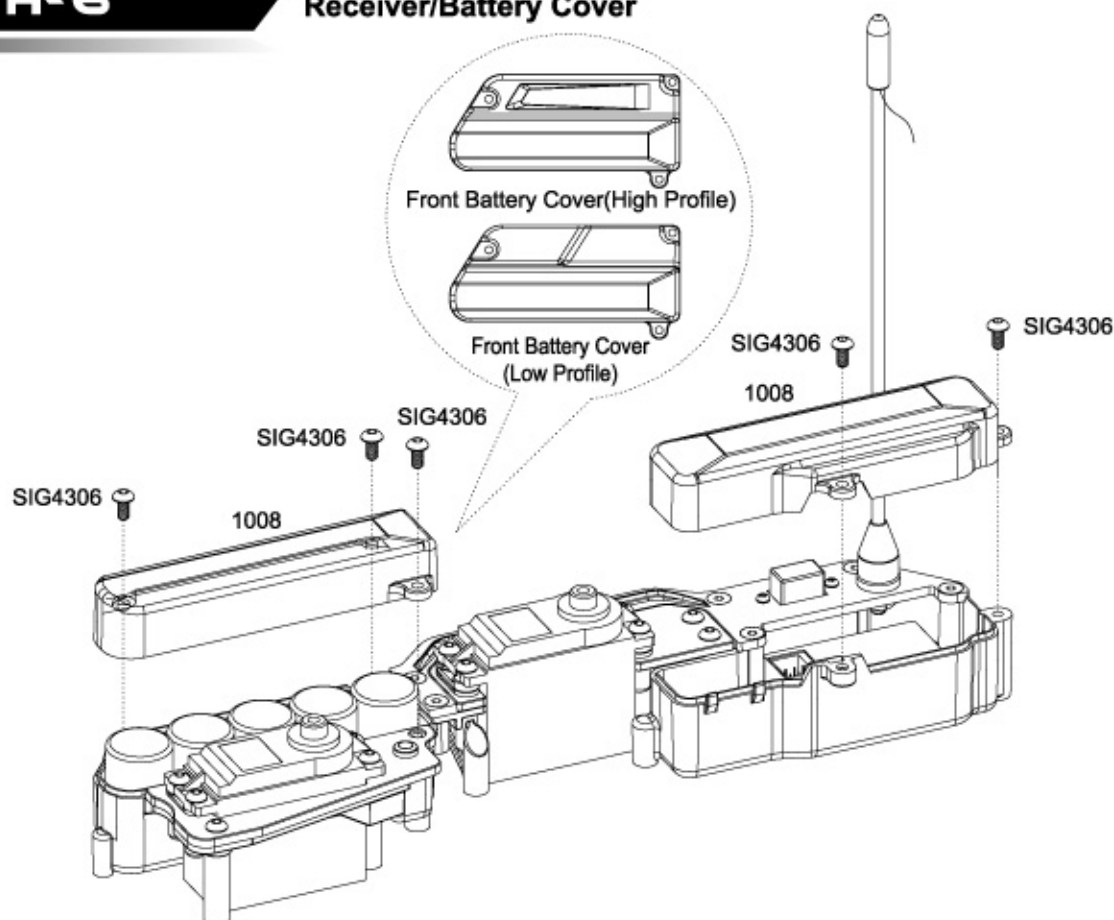

STEP H-7


Servo Horn Insert

- 23T  SANWA, Airtronics, JR,KO
- 24T  Hitec
- 25T  Futaba

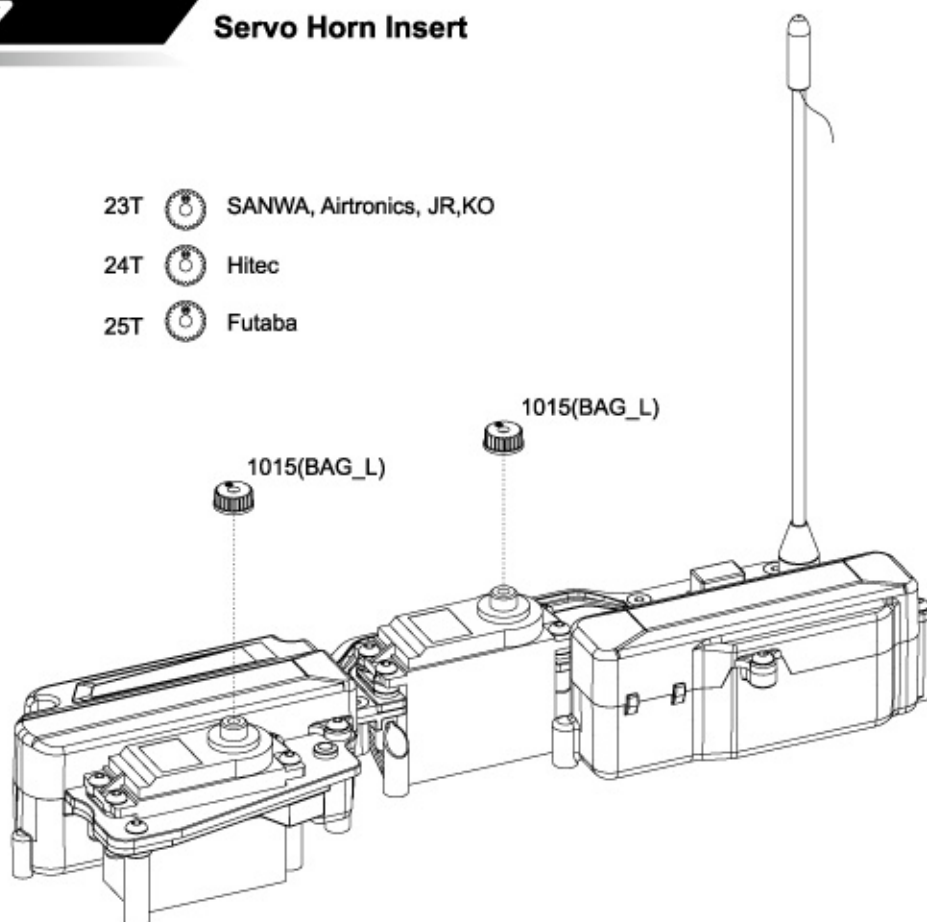

STEP H-8


Completed Radio Tray Assembly

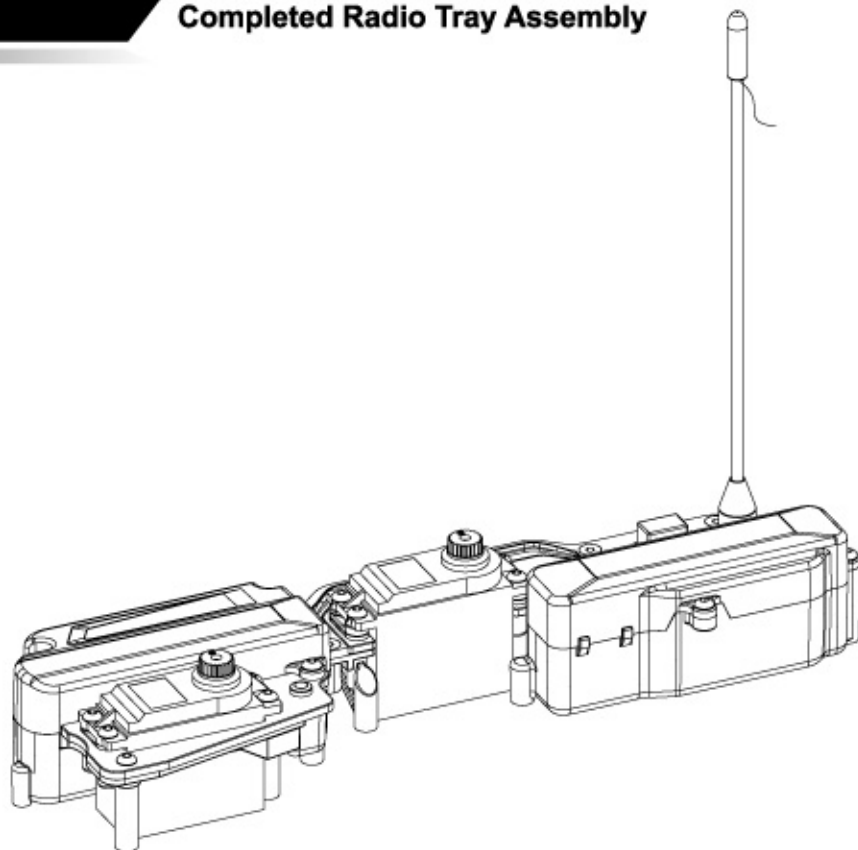

BAG I



STEP I-1

Clutch Assembly

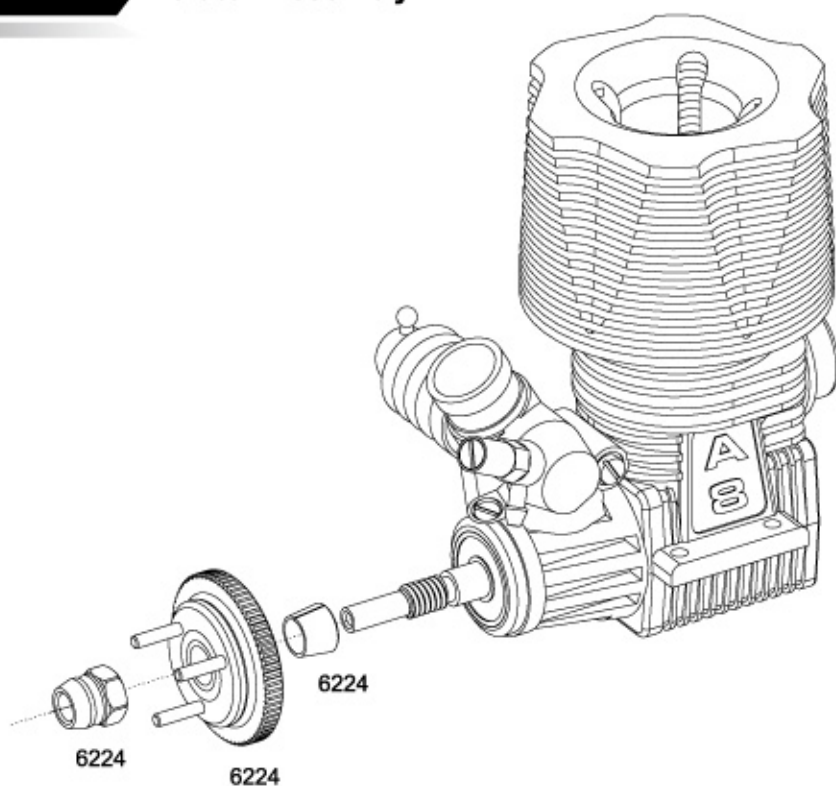


STEP 1-2

Clutch Assembly

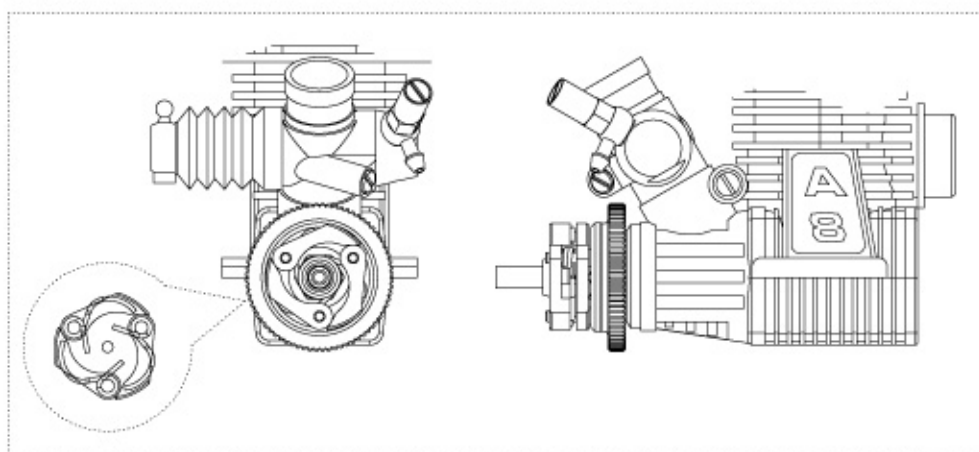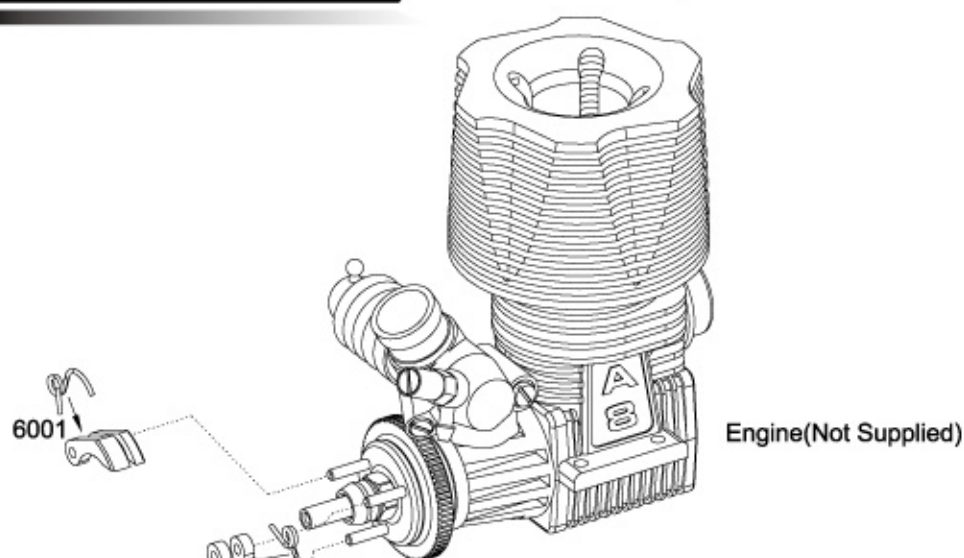


STEP 1-3

Clutch Bell Assembly

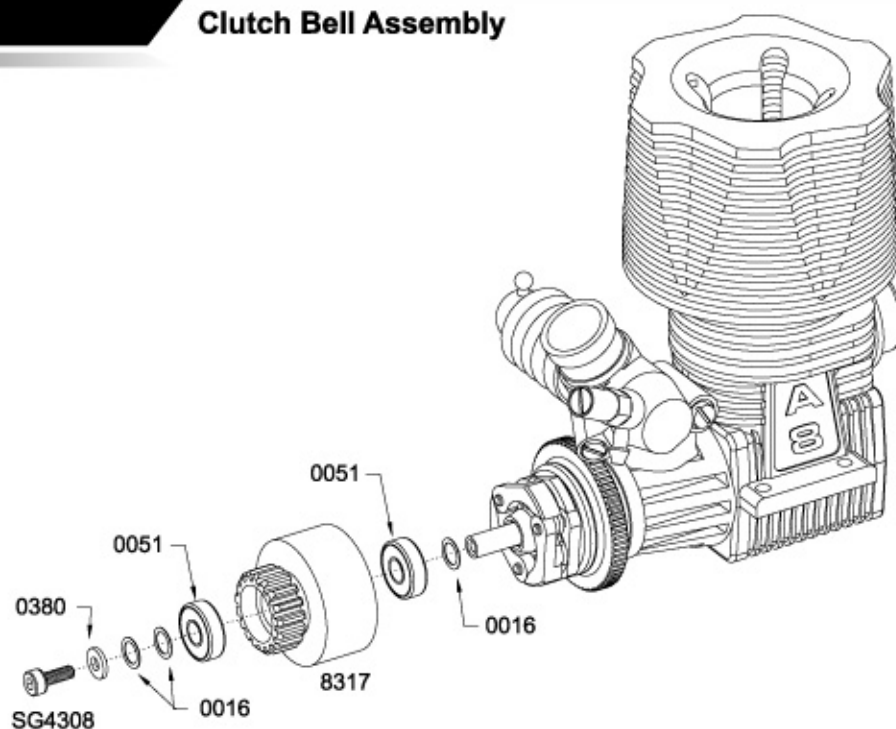


STEP 1-4

Engine Mount Assembly

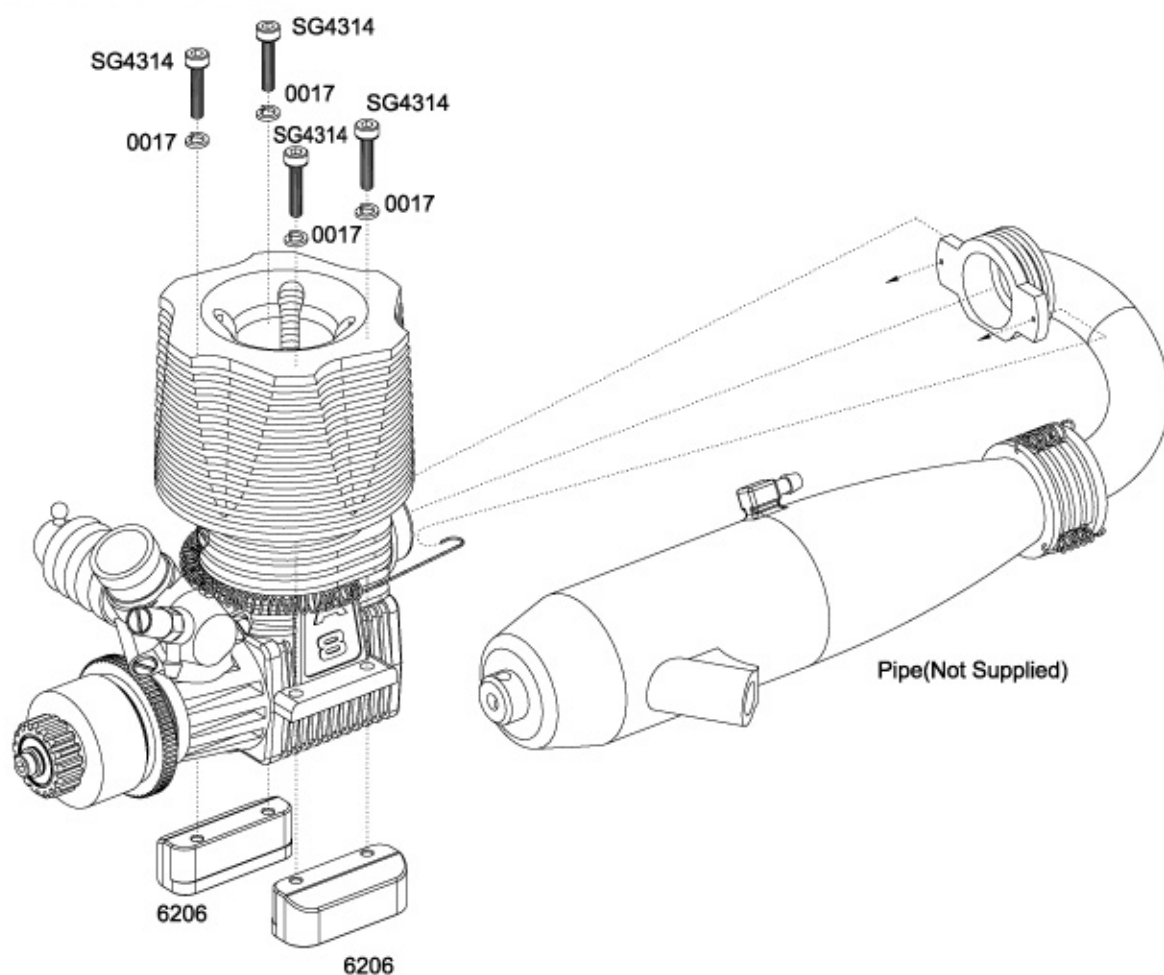


STEP 1-5

Engine Mount Assembly

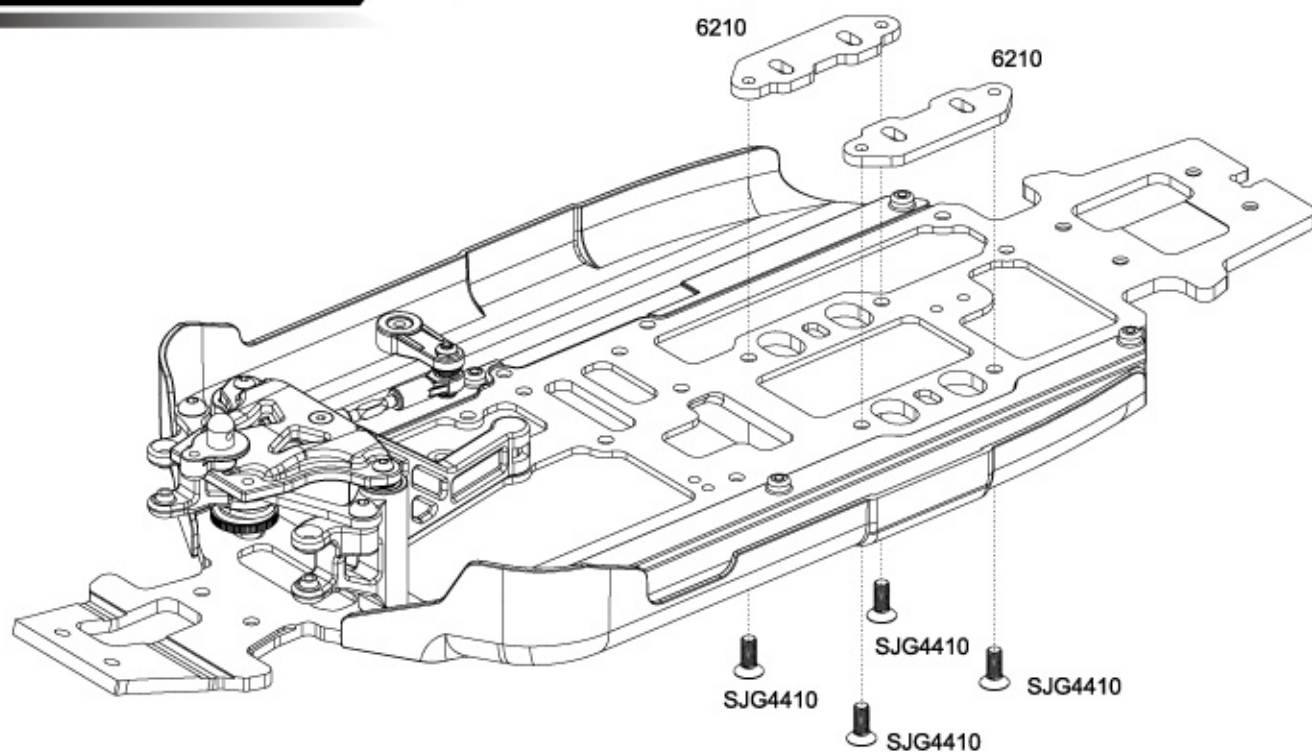


STEP J-1

Servo Saver Installation

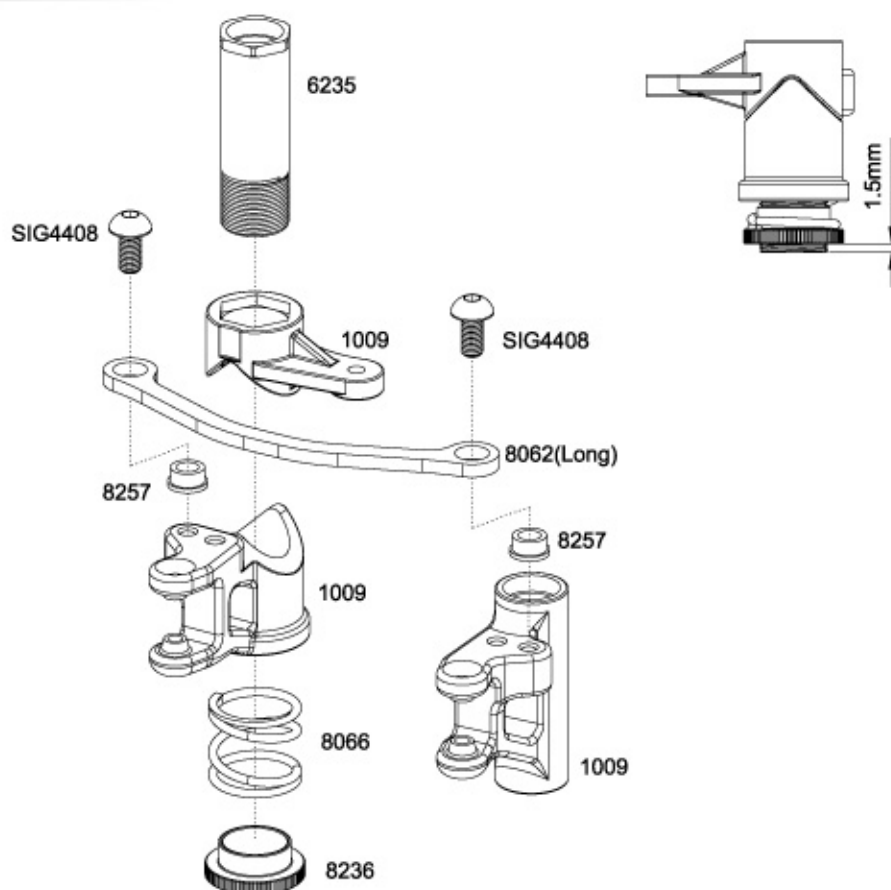


STEP J-2

Steering Servo Link Assembly

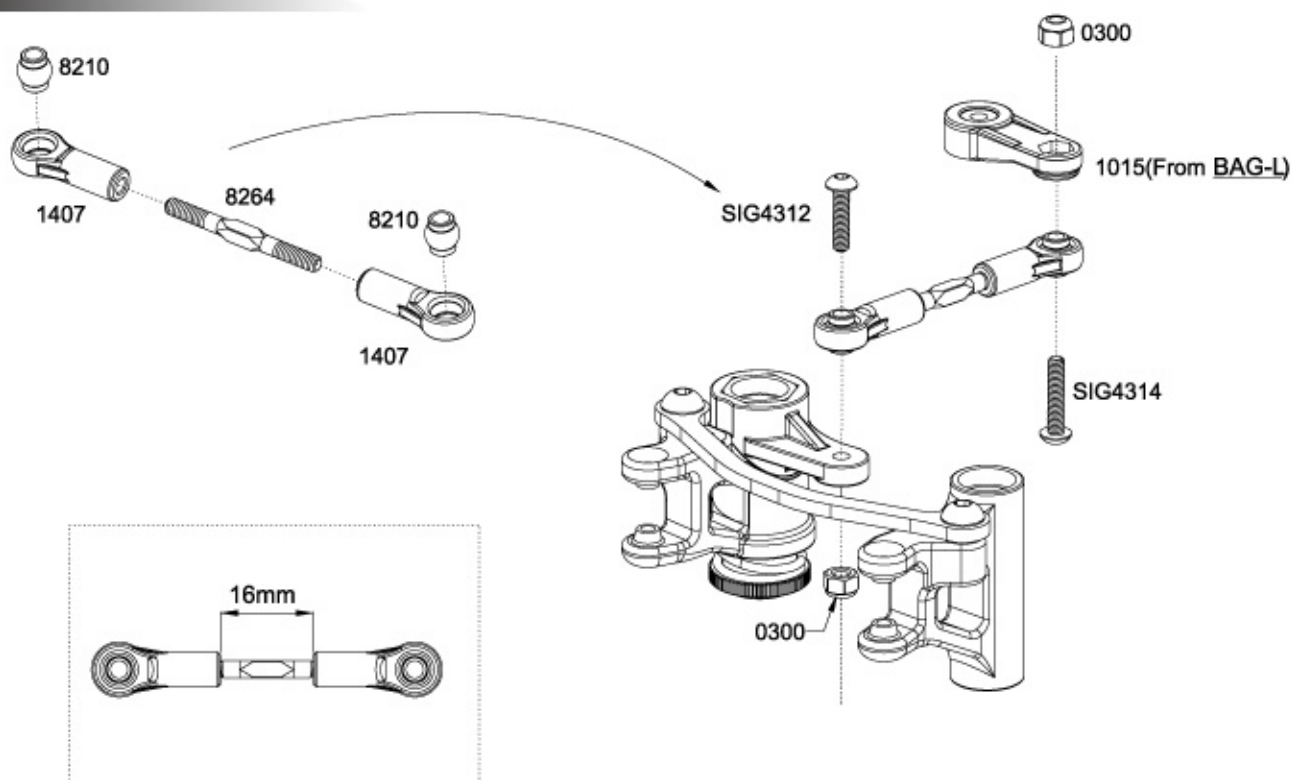


STEP J-3

Steering Post & Front Chassis Support Assembly

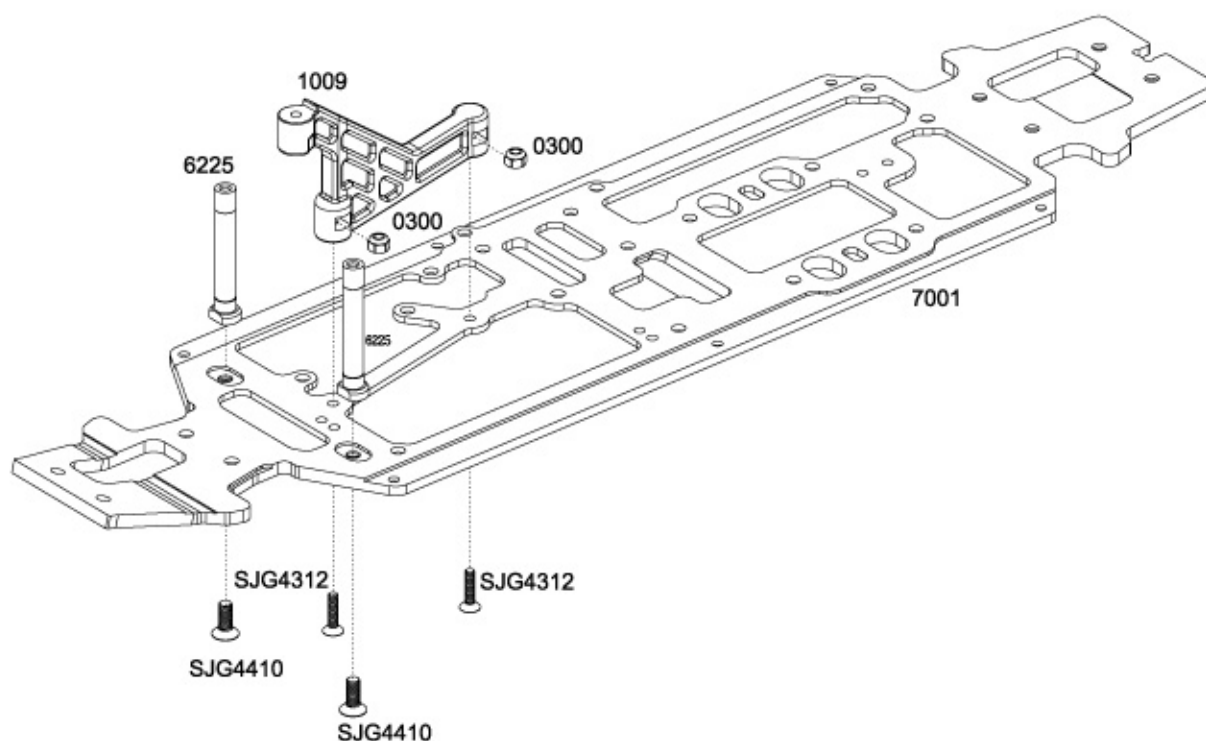


STEP J-4

Steering Saver & Front Chassis Brace Assembly

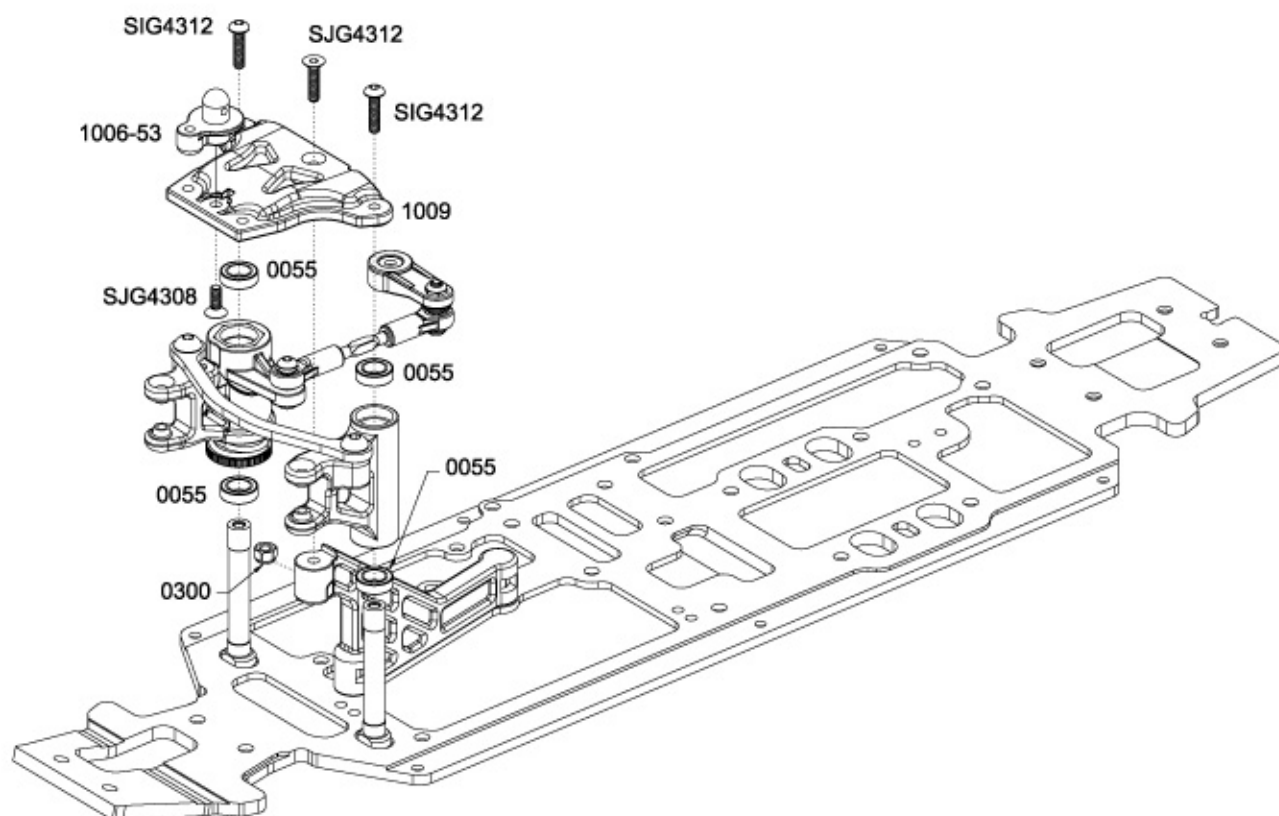

STEP J-5


Completed Steering Assembly

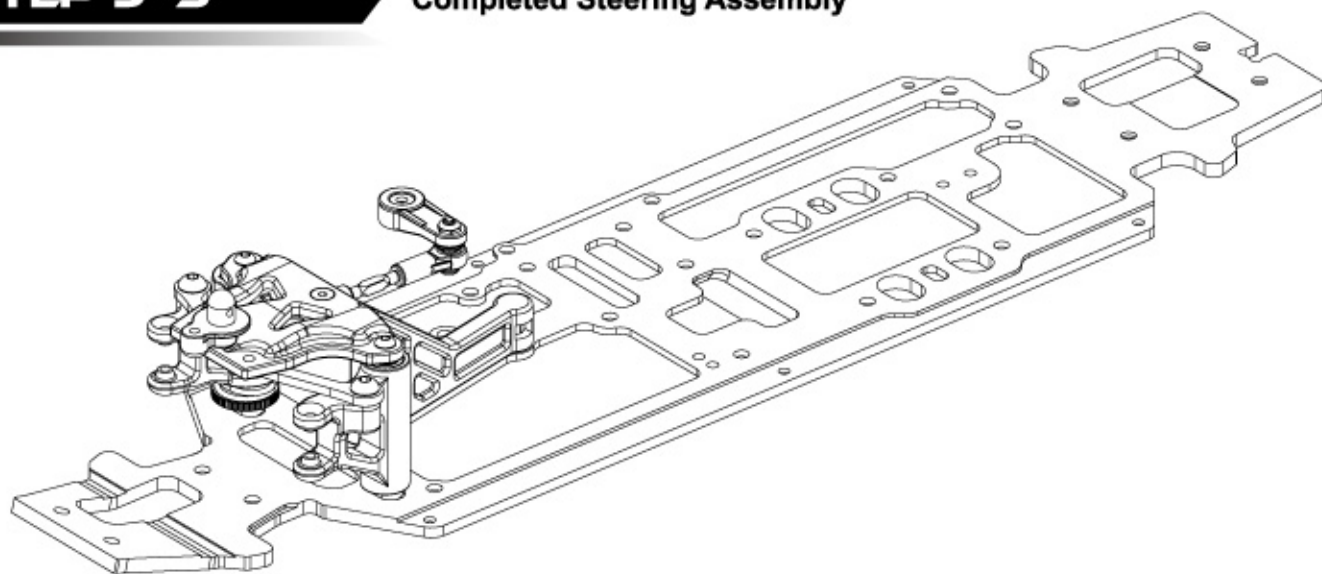

BAG K


STEP K-1

Chassis Guard Installation

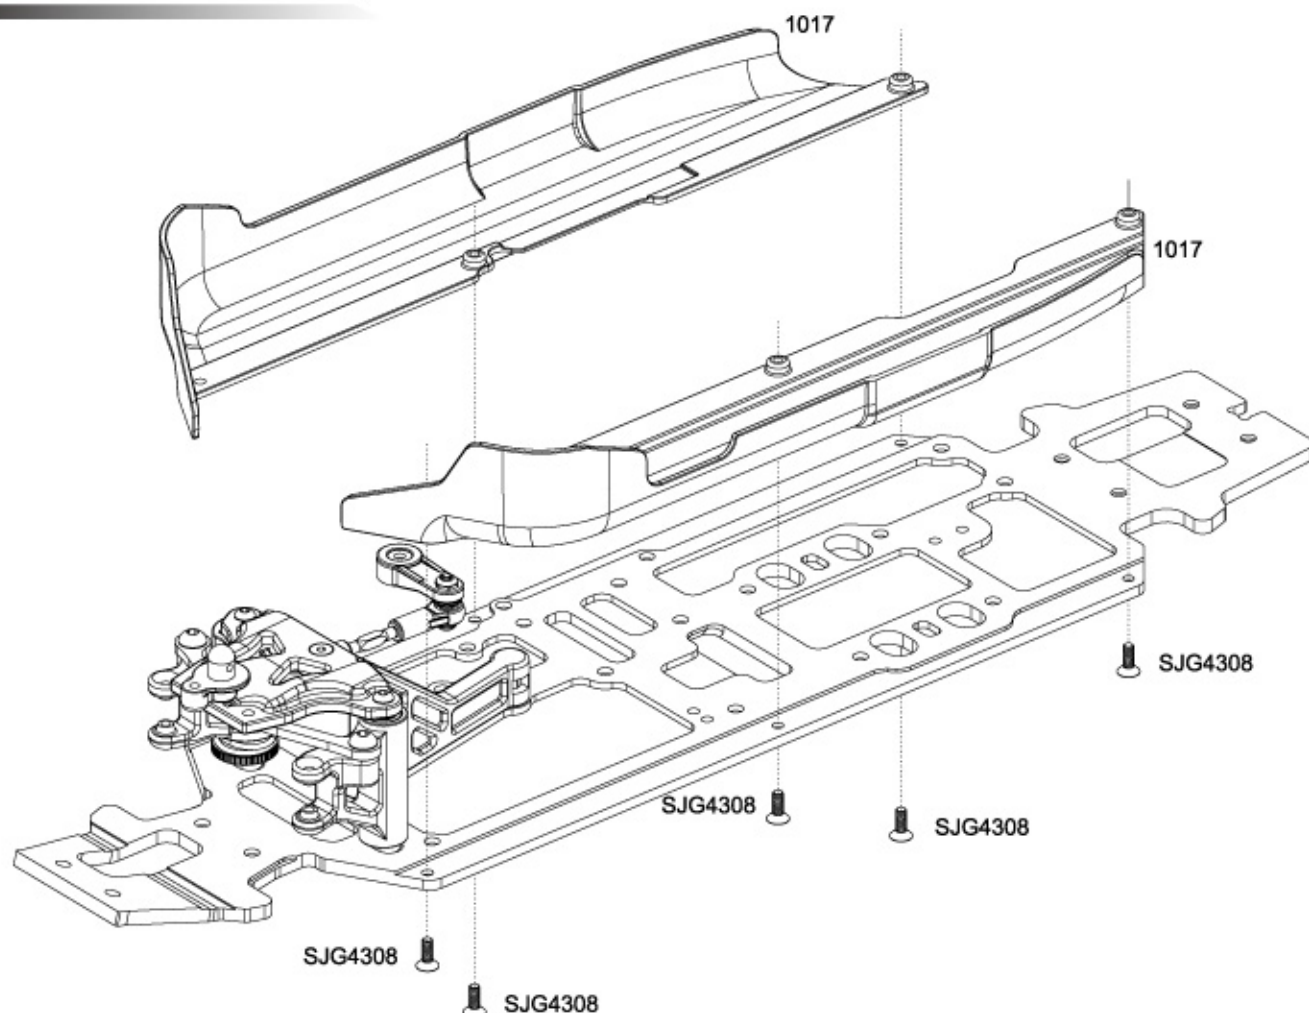


STEP L-1



Throttle/Brake Linkage Assembly

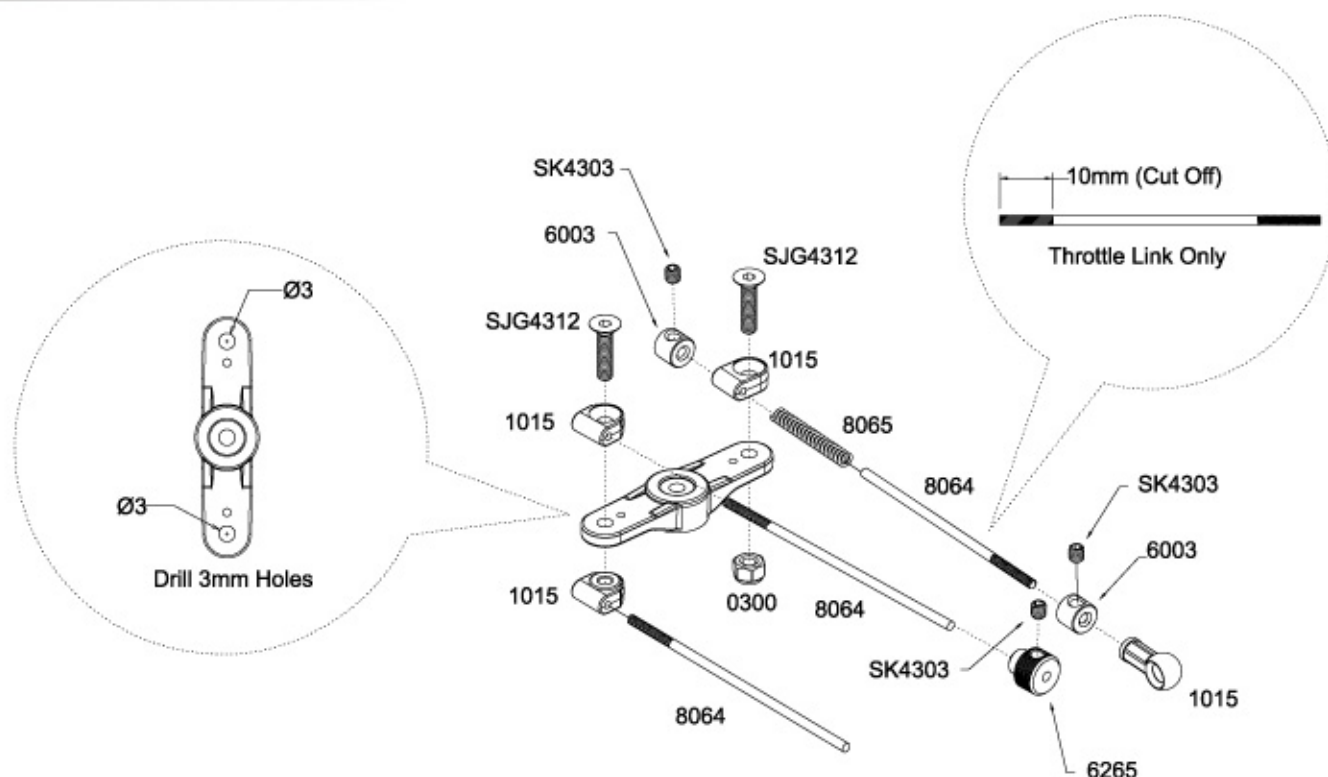

STEP L-2


Completed Throttle/Brake Assembly

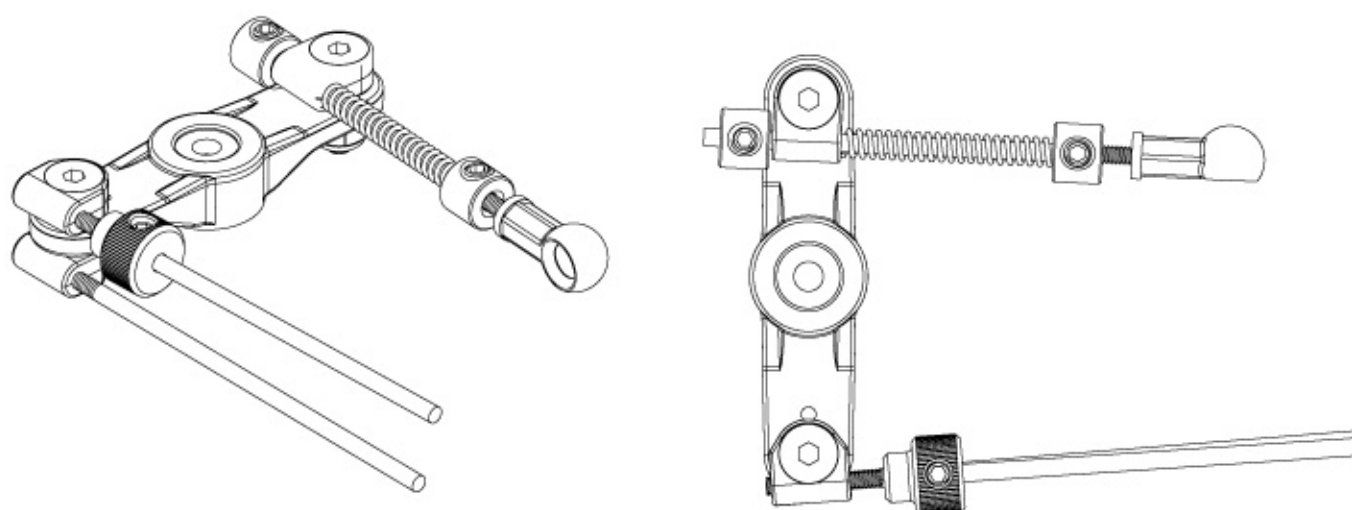

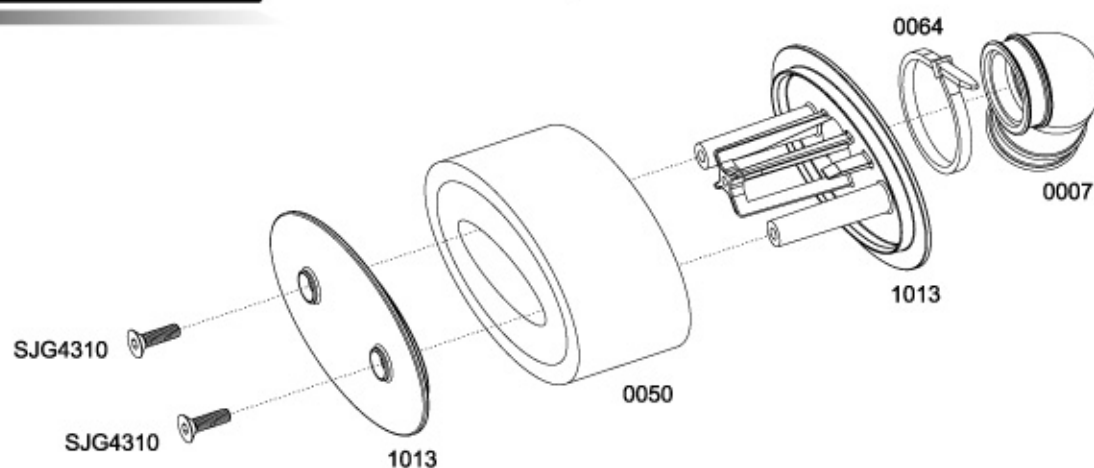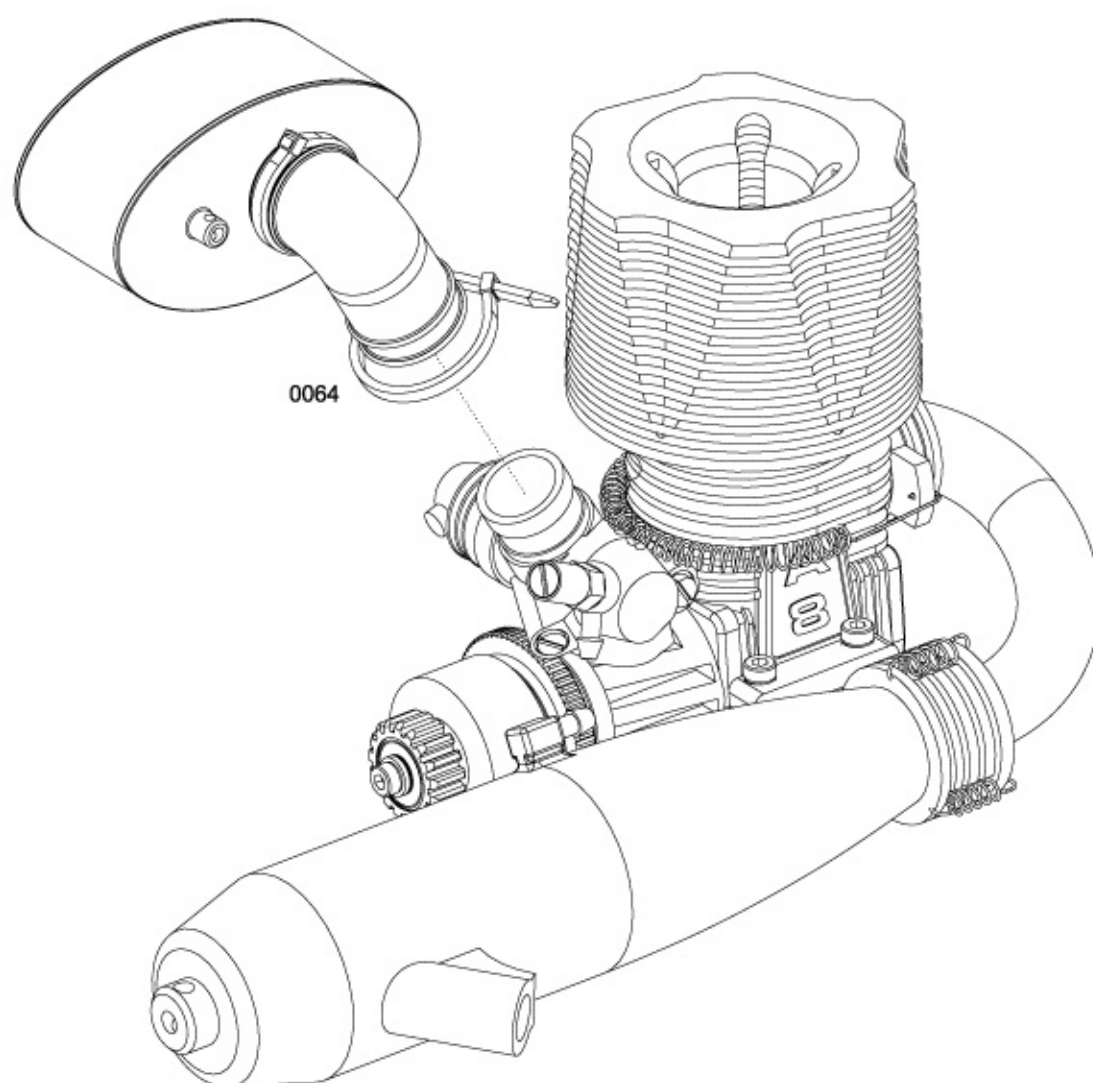STEP M-1**Air Filter Assembly****STEP M-2****Air Filter Assembly**


STEP -1

Center Diff Install

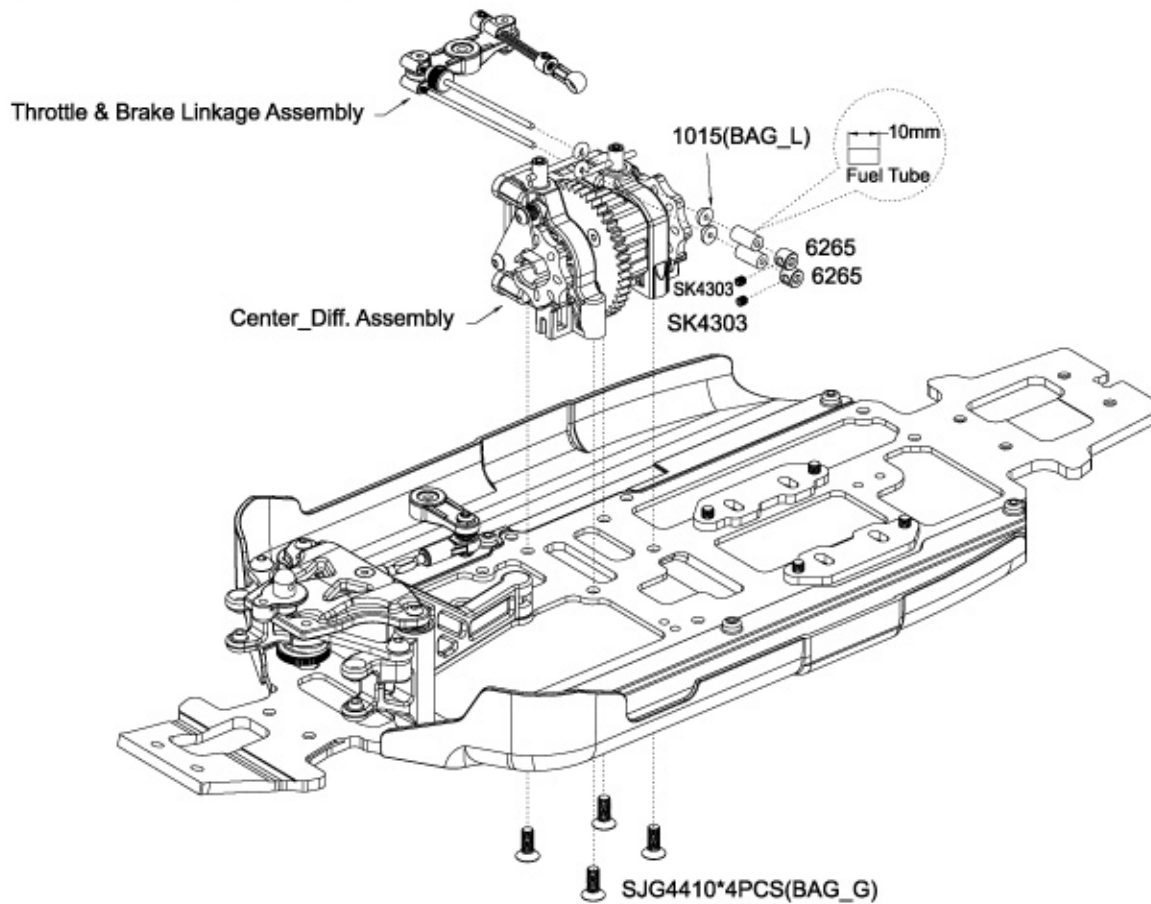


STEP -2

Front End Install

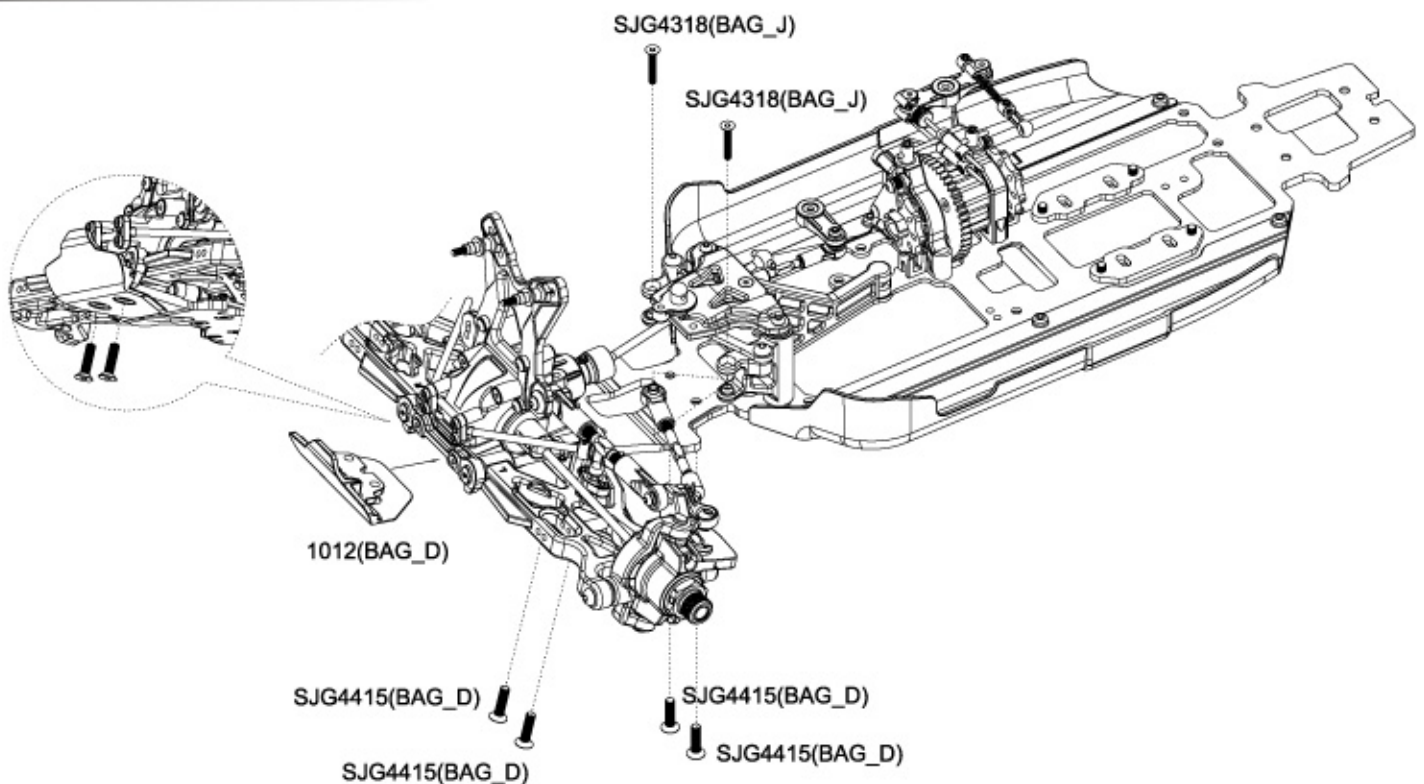


STEP - 3

Front End Installation

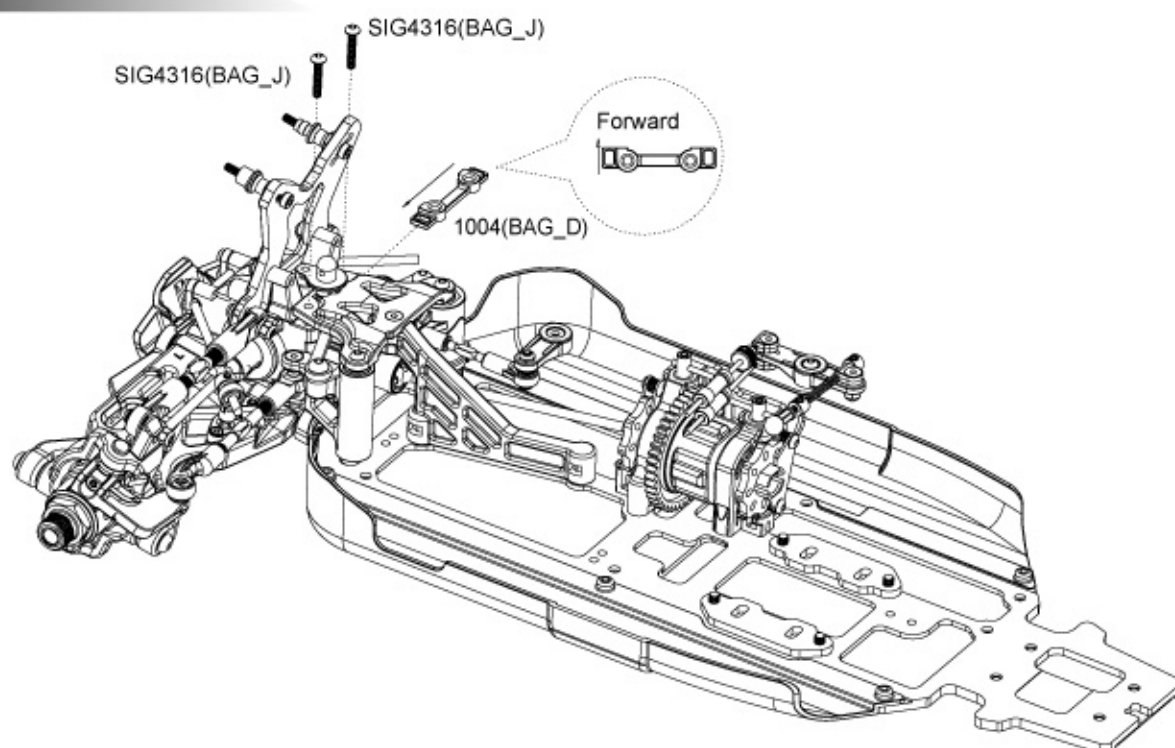


STEP - 4

Front End Installation

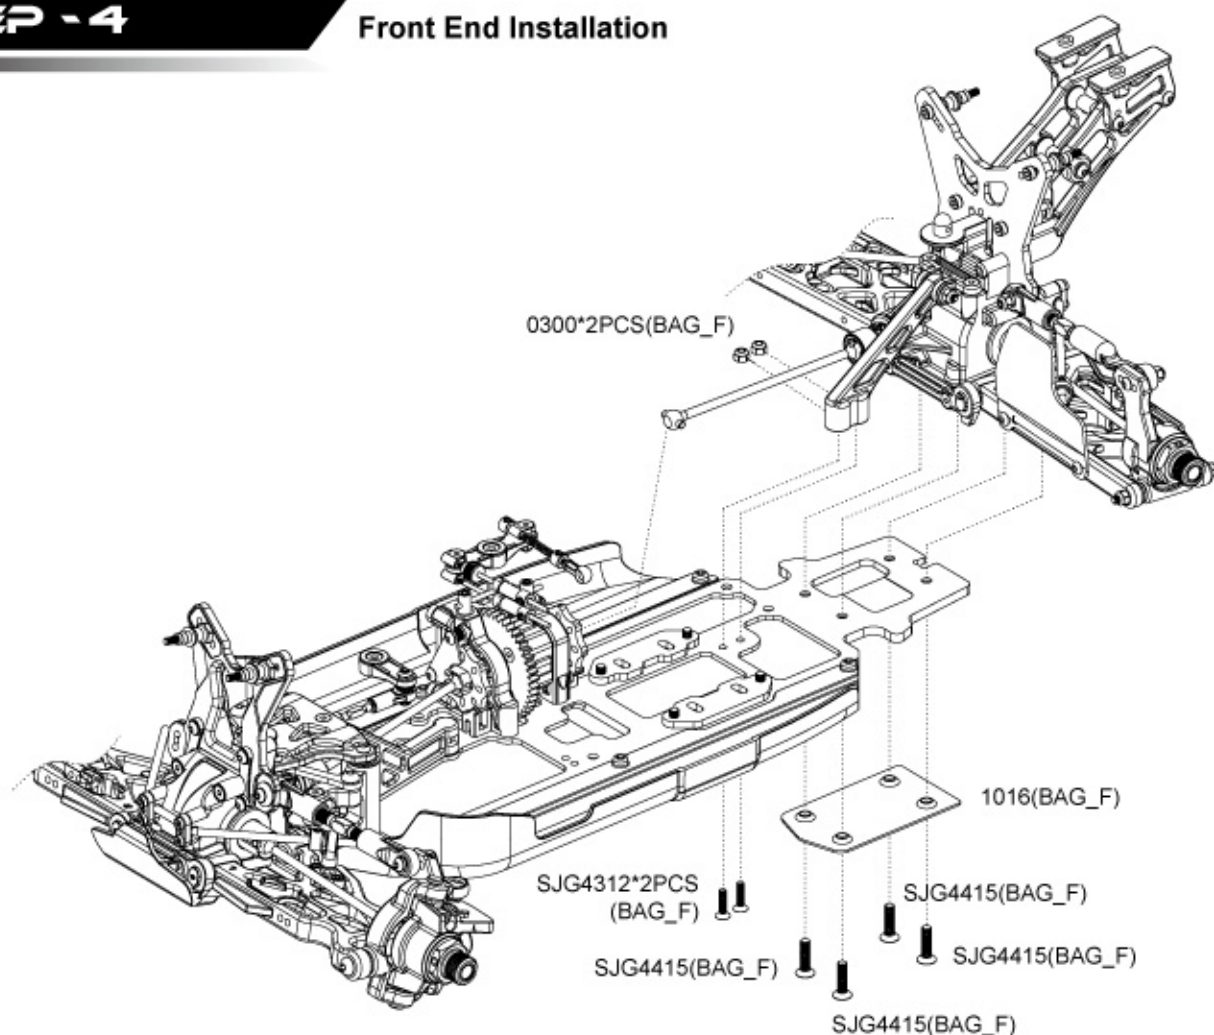


STEP -5

Radio Tray Install

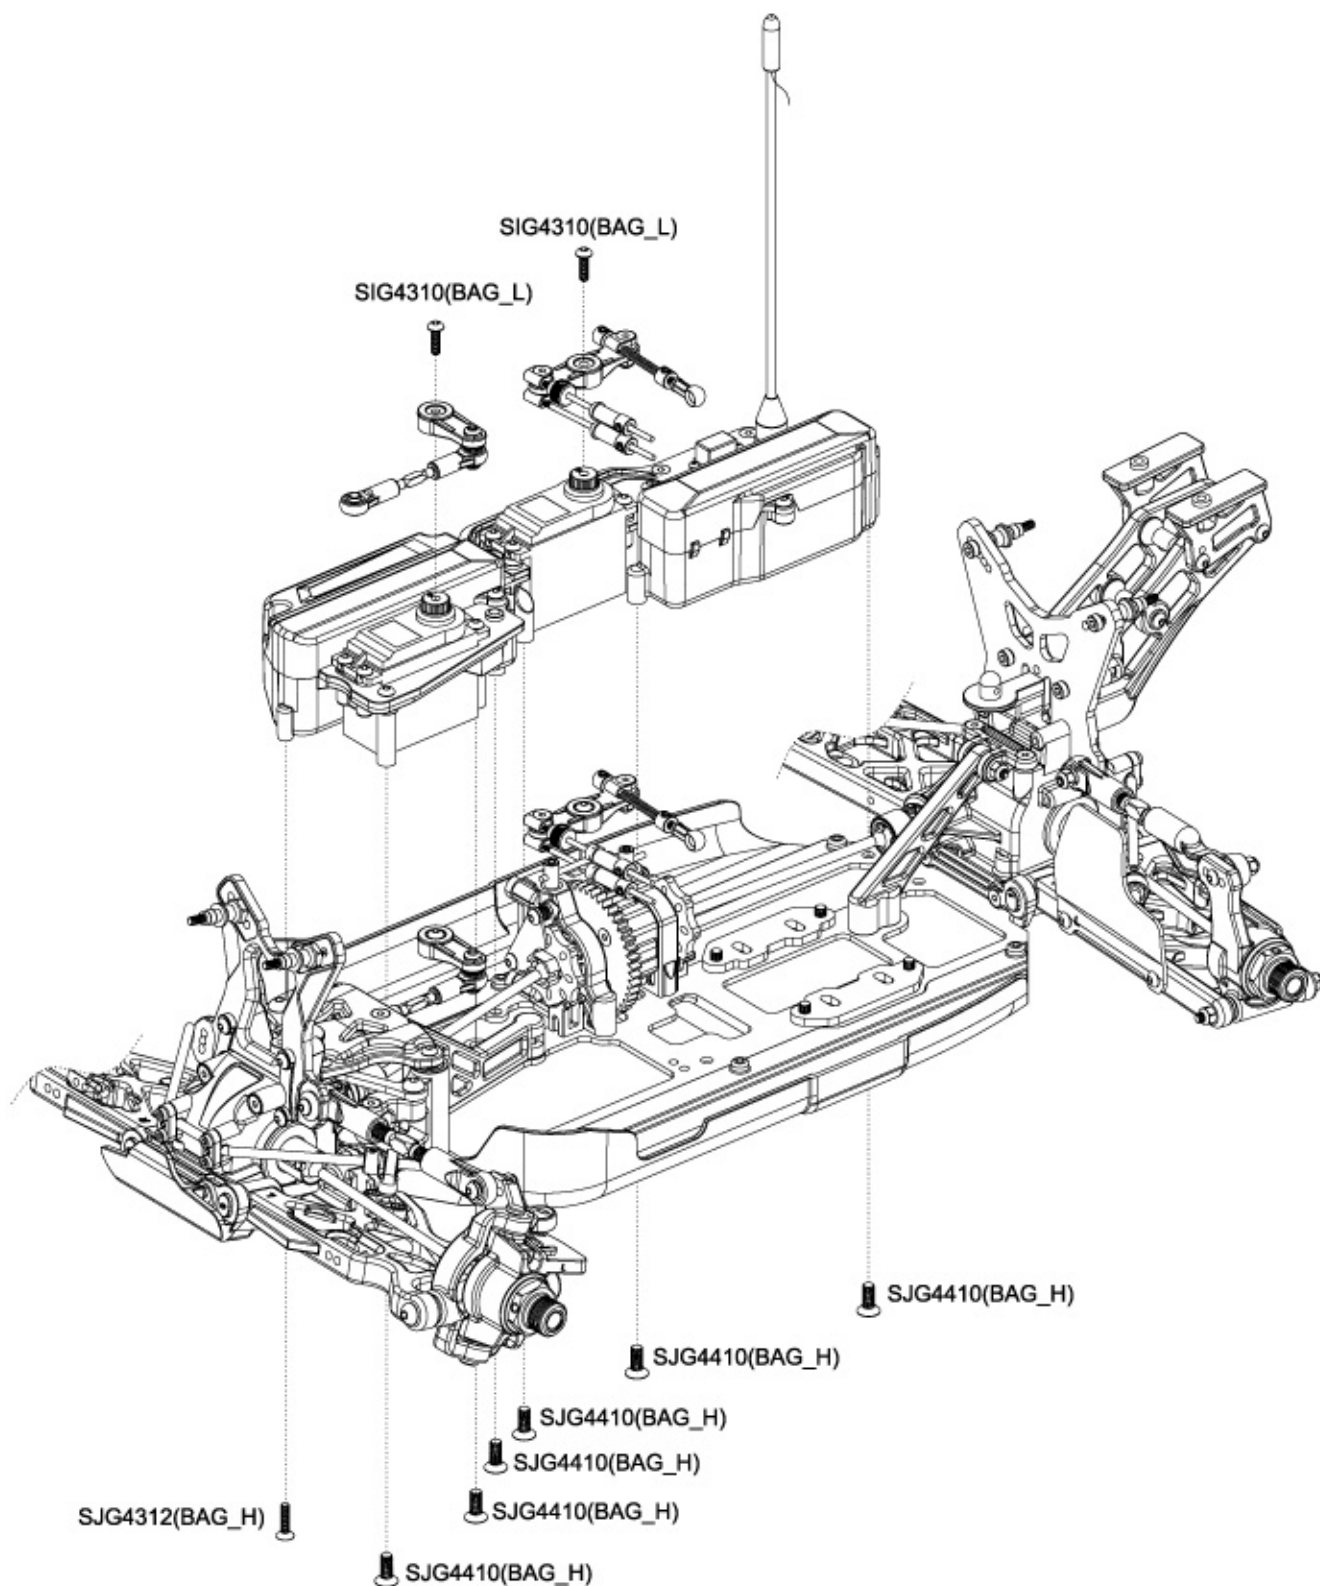


STEP - 6

Engine Set Install

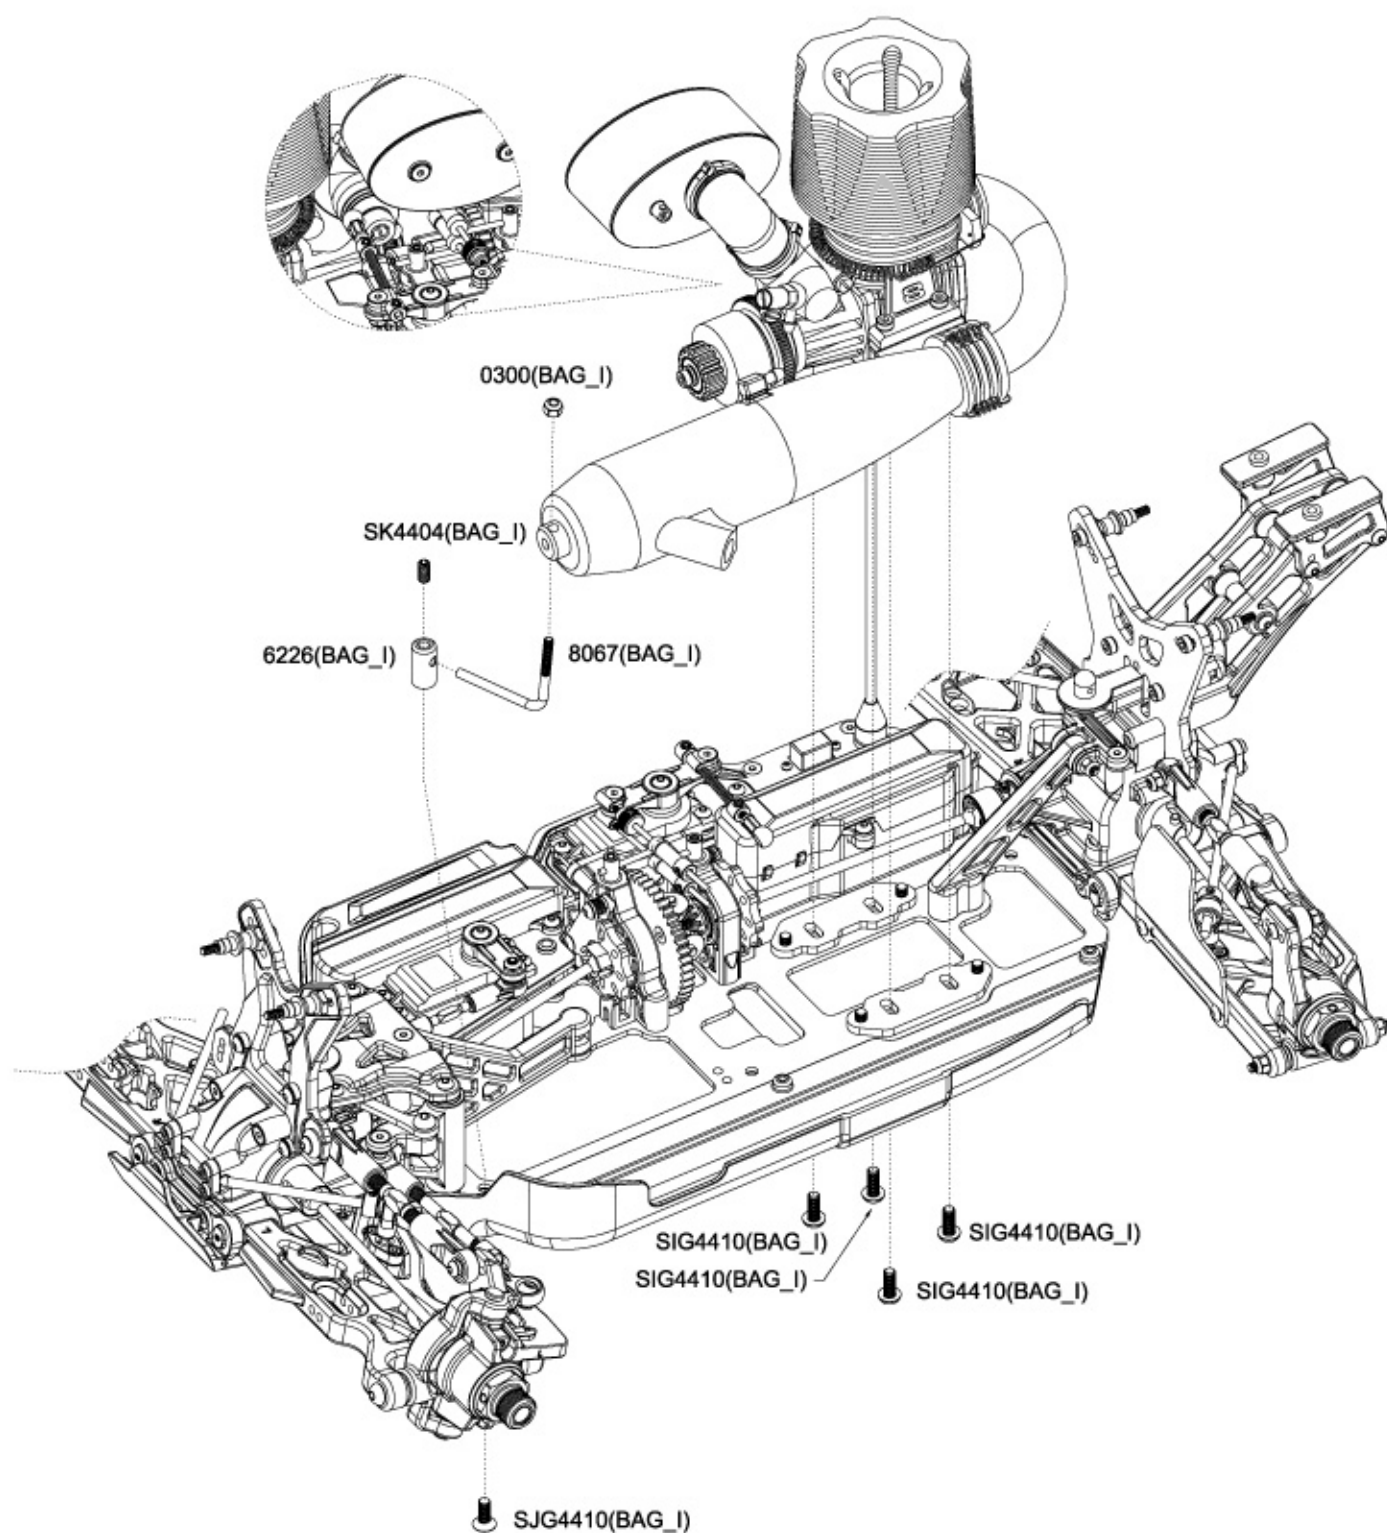


STEP -7

Fuel Tank Install

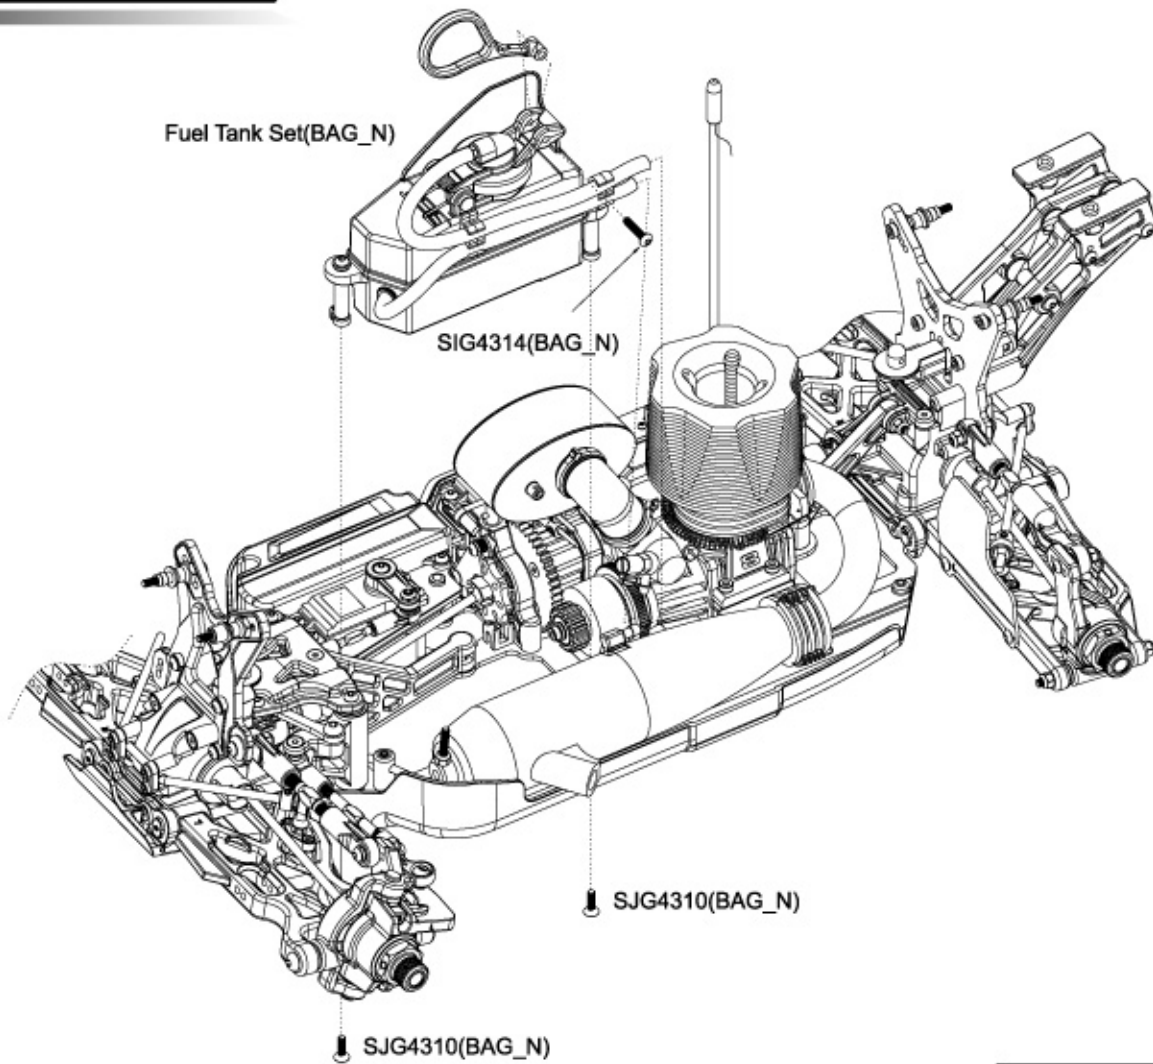


STEP -8

Front/Rear Shock Install

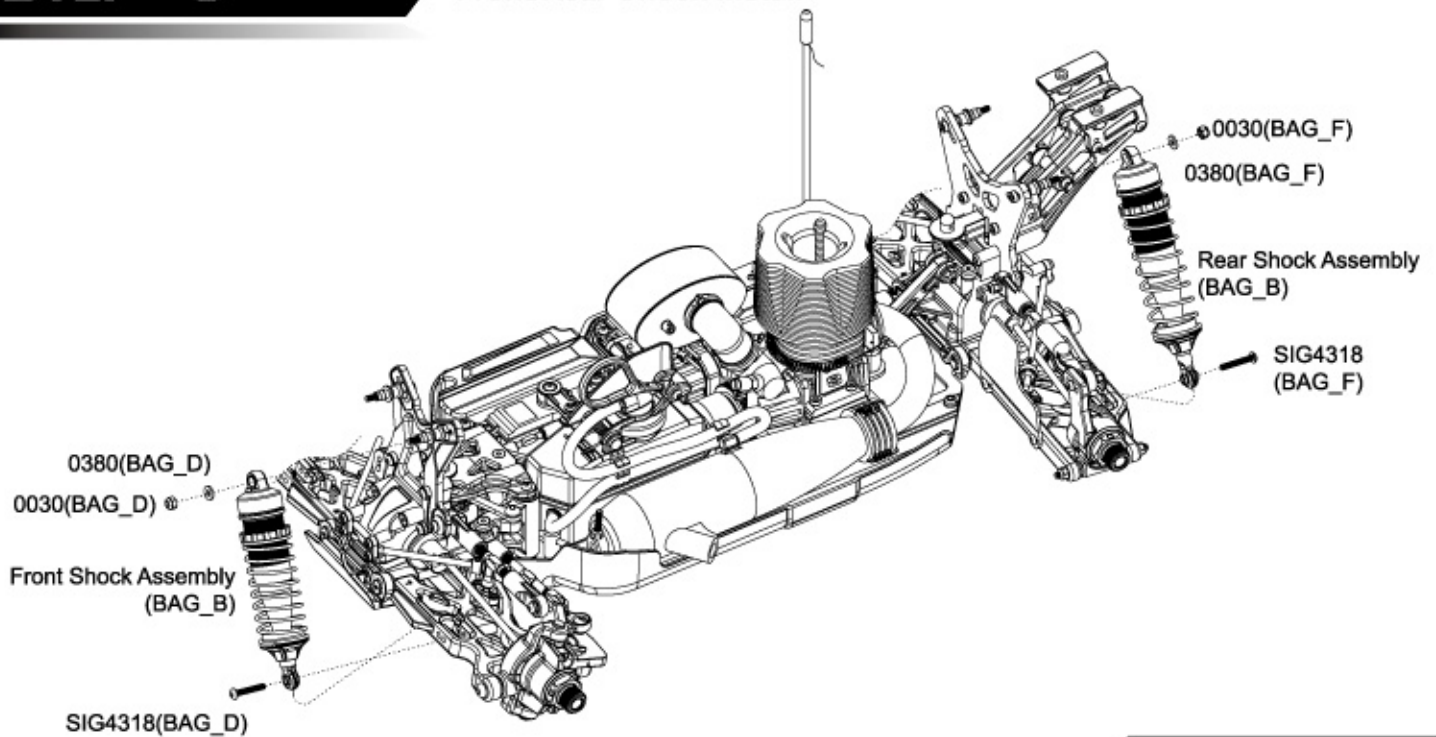



STEP - 9

Tire Install

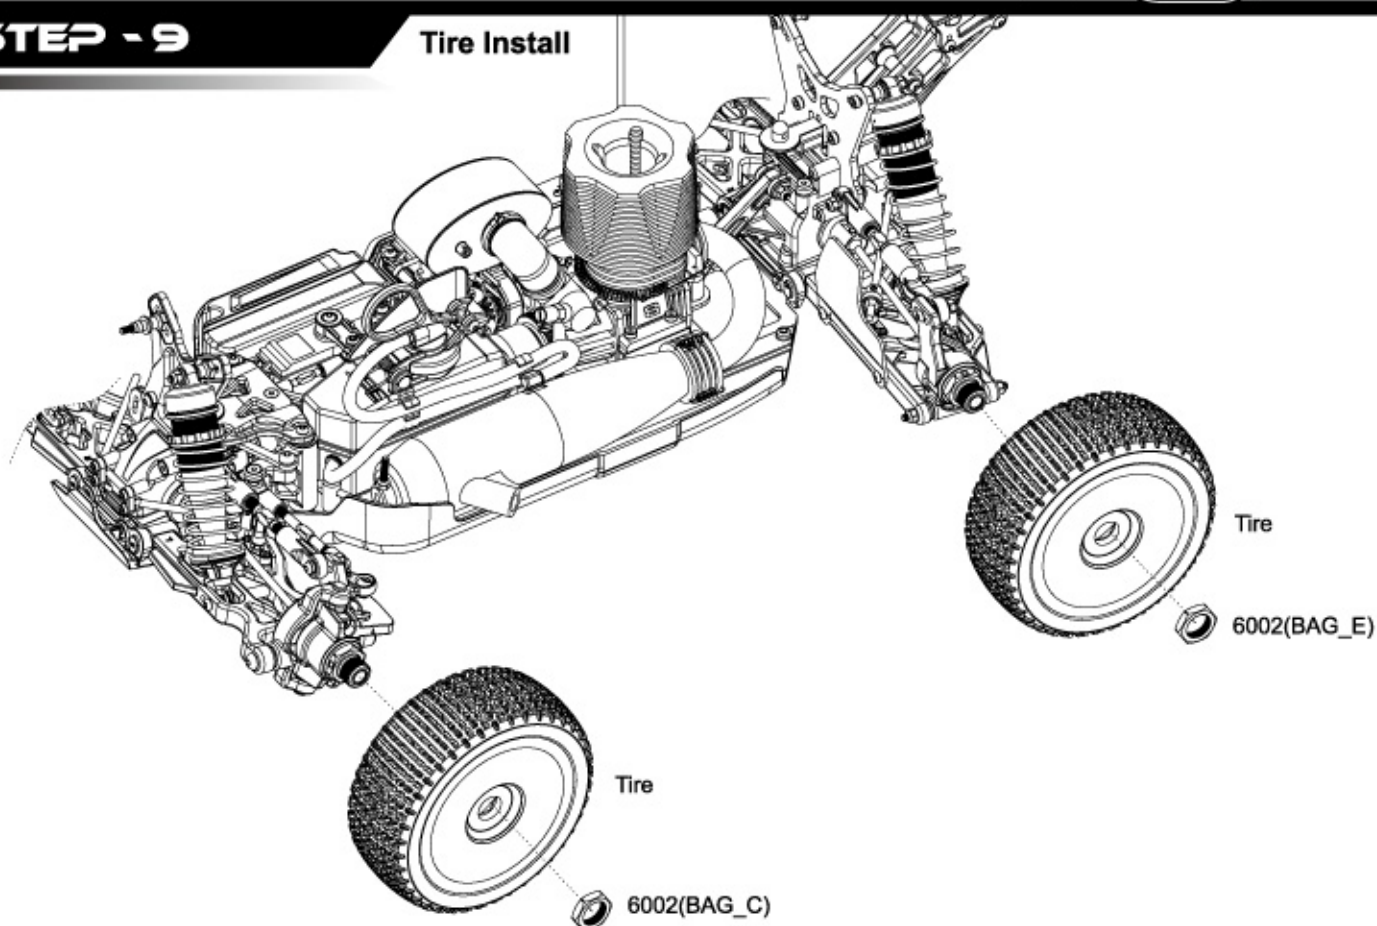


STEP - 10

Win Install

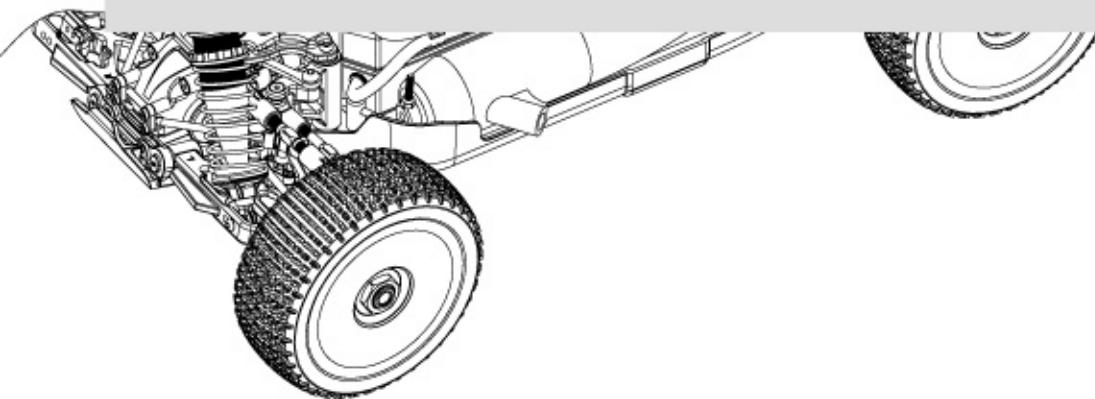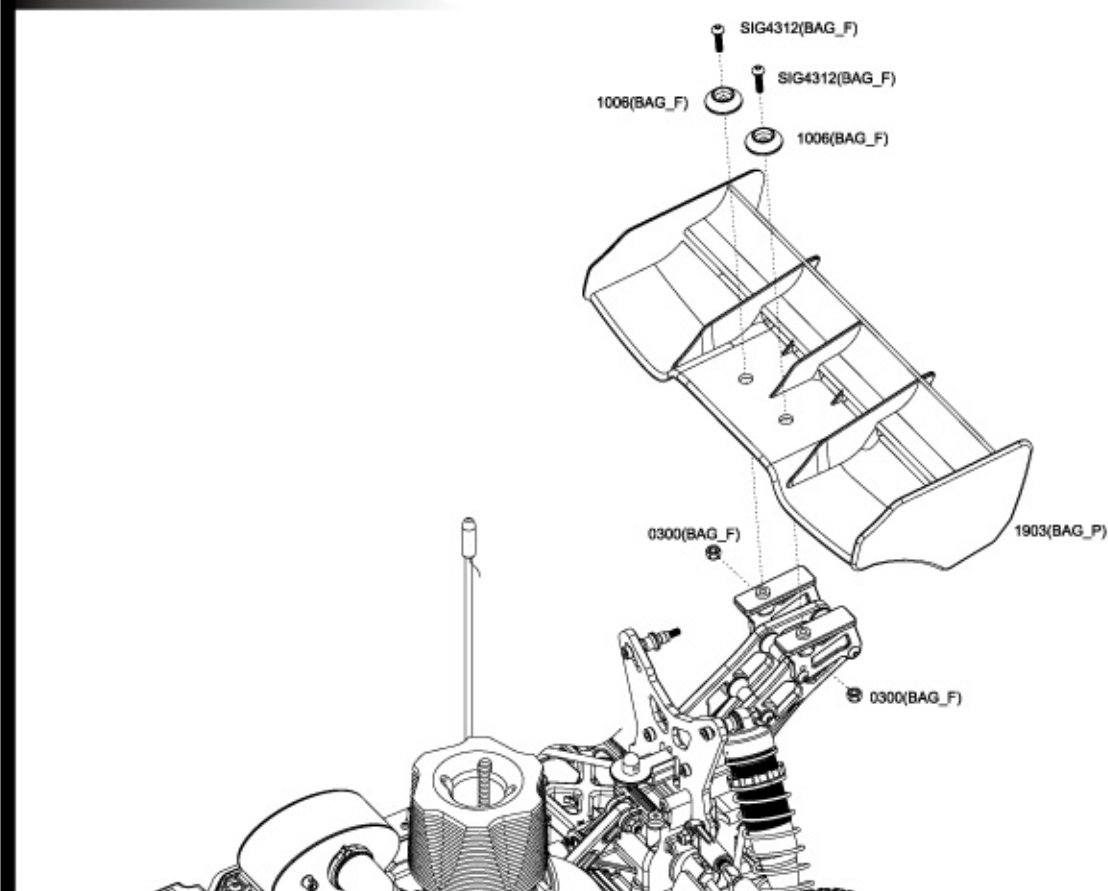


STEP - 11

Body Mounting

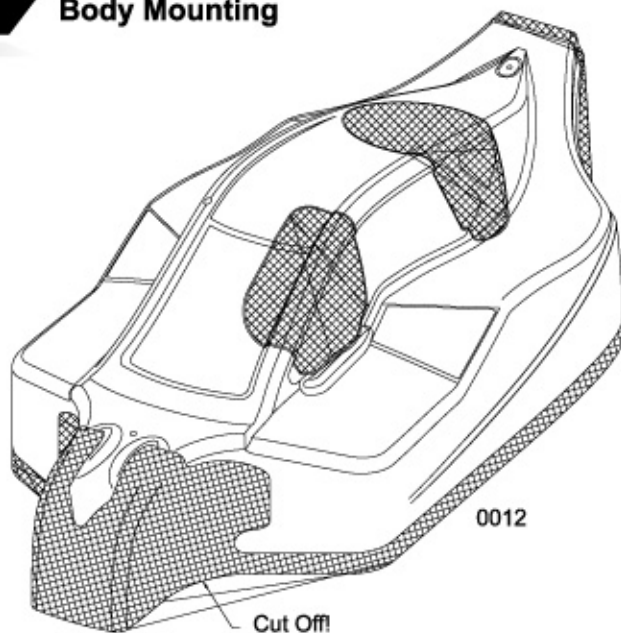

STEP - 12

Body Mounting

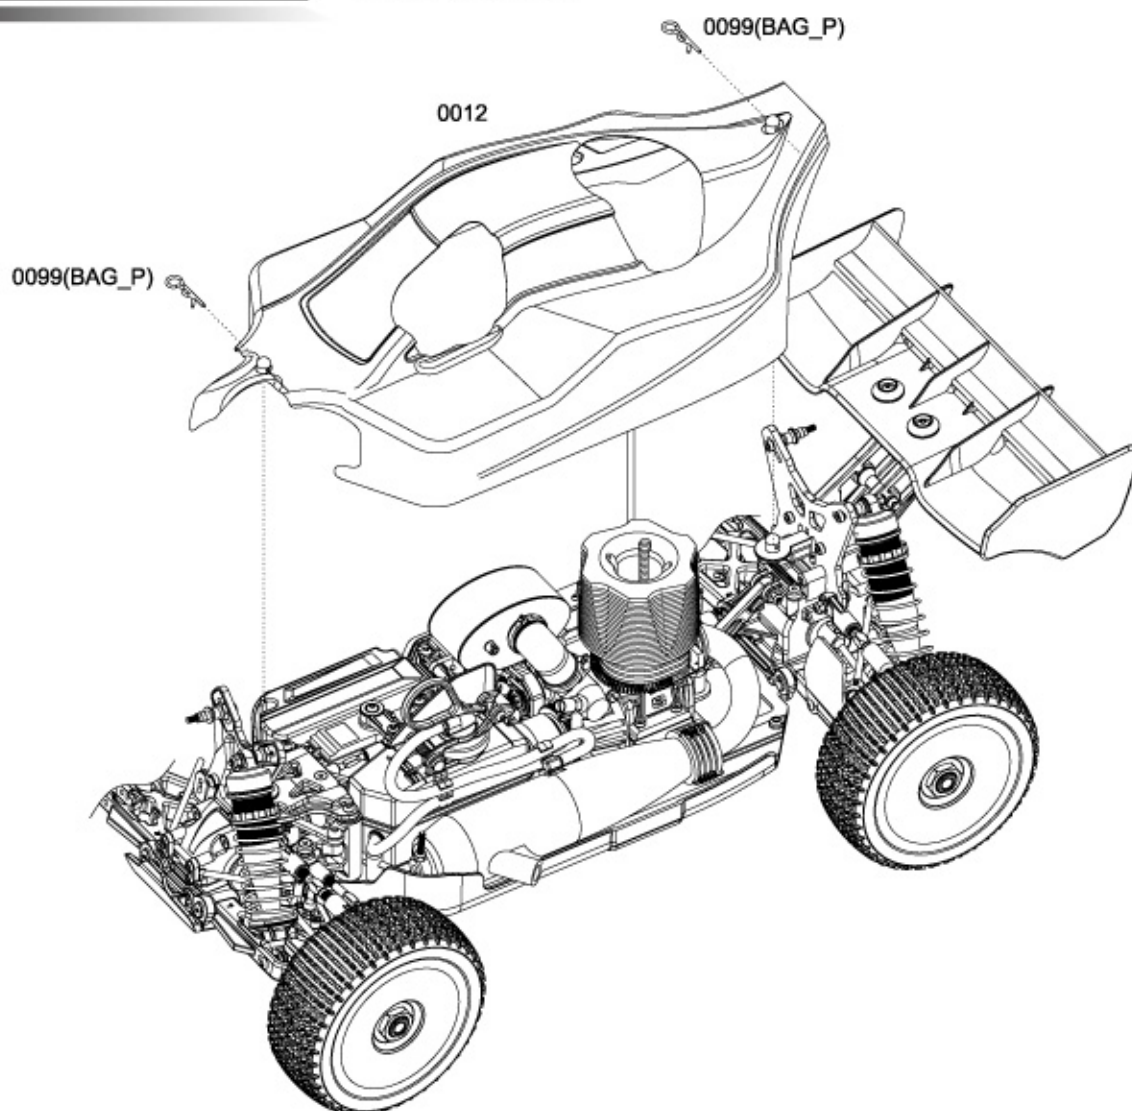

TRACK CONDITIONS

☐ Indoor ☐ Tight ☐ Smooth ☐ Hard Packed ☐ Blue Groove
☐ Wet ☐ Low Bite ☐ High Bite ☒ Outdoor ☒ Open ☒ Rough ☐ Loose/Loamy
☒ Dry ☐ Dusy ☐ Wed Bite ☐ Other

ENGINE

Gasket

mm Plug

Muffler


Fuel

Clutch bell ☐ 16T ☒ 17T ☐ 18T ☐ Other T Shoes ☒ 3 ☐ 4 Spring 1.1 mm


DIFF Front Oil # 5000 Center Oil # 5000 Rear Oil # 2000

T x T Spur gear 45 T T x T


FRONT SUSPENSION

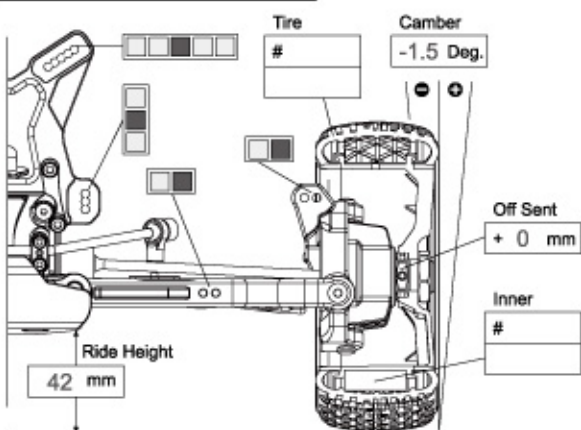

FRONT TOE ANGLE

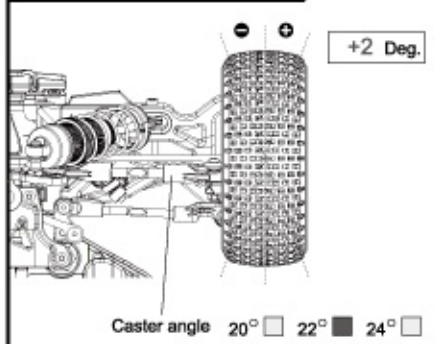


FRONT SHOCK

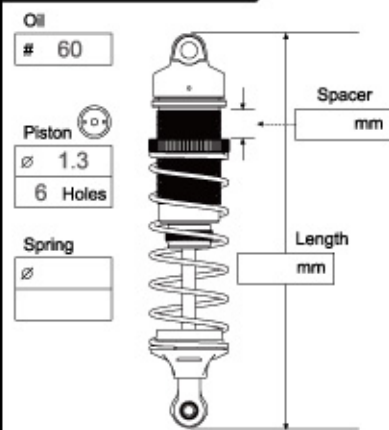

KICK UP



ANTI-ROLL BAR

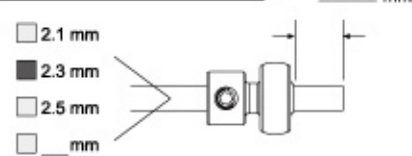


ANTI SQUAT


TOE ANGLE




WHEEL BASE

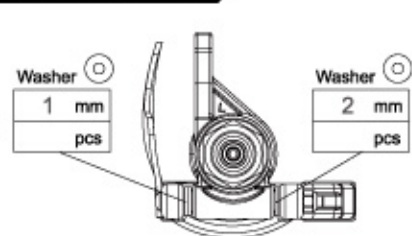

REAR SHOCK

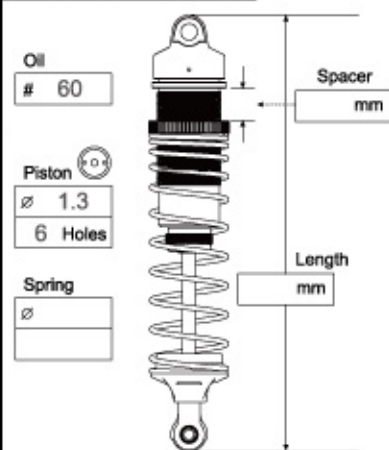


REAR SUSPENSION

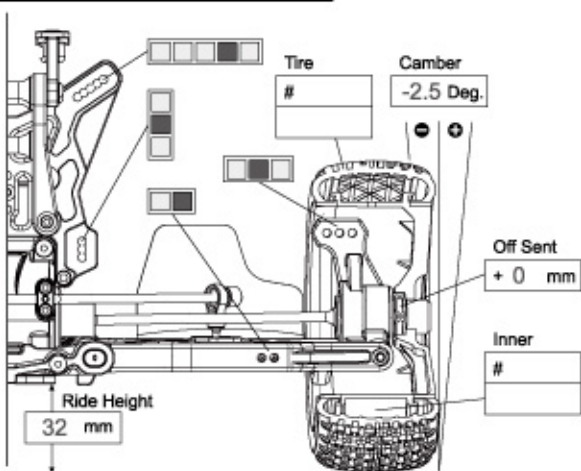


WING POSITION




ANTI-ROLL BAR

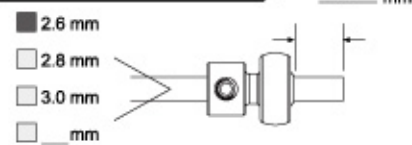


DOWNSTOP

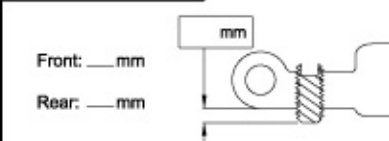


ACKERMAN

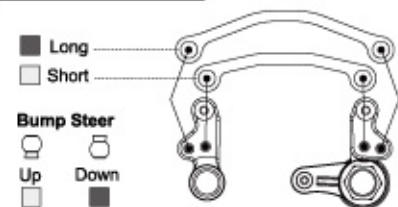

RECEIVER BATTERY

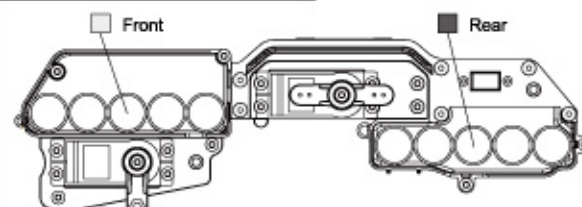

THROTTLE SERVO

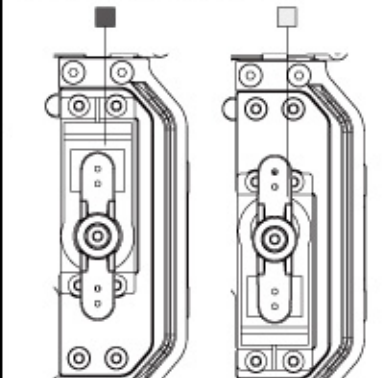

TRACK CONDITIONS

☐ Indoor ☐ Tight ☐ Smooth ☐ Hard Packed ☐ Blue Groove

☐ Wet ☐ Low Bite ☐ High Bite ☐ Outdoor ☐ Open ☐ Rough ☐ Loose/Loamy

☐ Dry ☐ Dusy ☐ Wed Bite ☐ Other

ENGINE

Gasket

mm Plug

Muffler

Fuel

Clutch bell ☐ 16T ☐ 17T ☐ 18T ☐ Other T Shoes ☐ 3 ☐ 4 Spring mm

DIFF

Front

Oil #

Center

Oil #

Rear


Oil #

T x T


Spur gear T

T x T


FRONT SUSPENSION

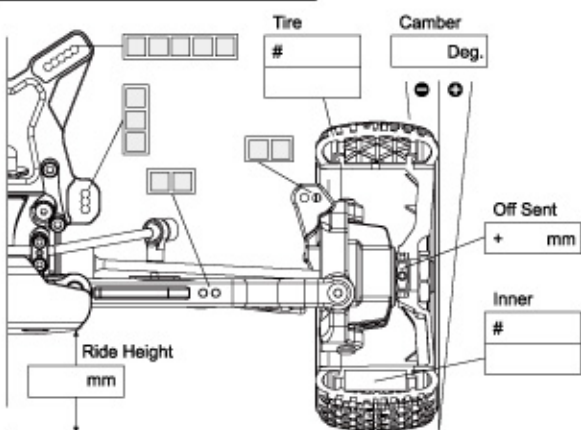

FRONT TOE ANGLE

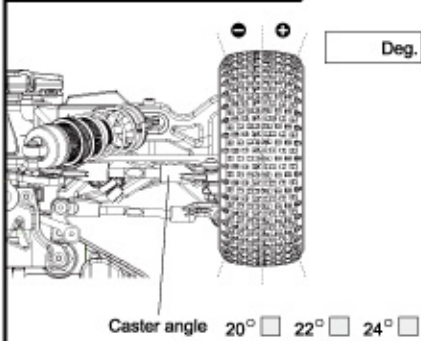


FRONT SHOCK

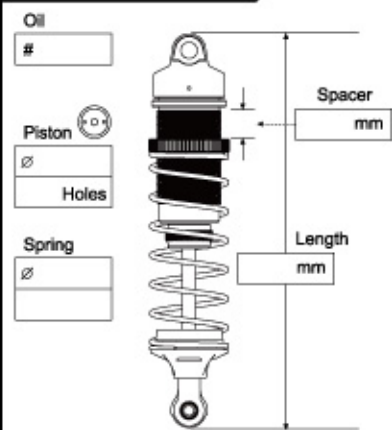

KICK UP



ANTI-ROLL BAR

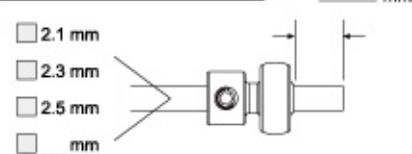


ANTI SQUAT


TOE ANGLE




WHEEL BASE

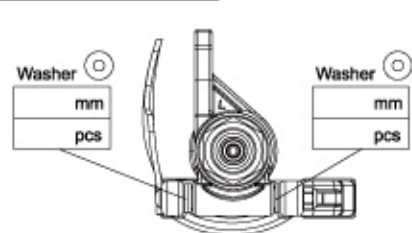

REAR SHOCK

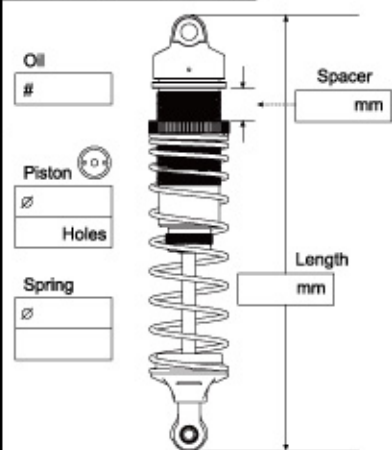


REAR SUSPENSION

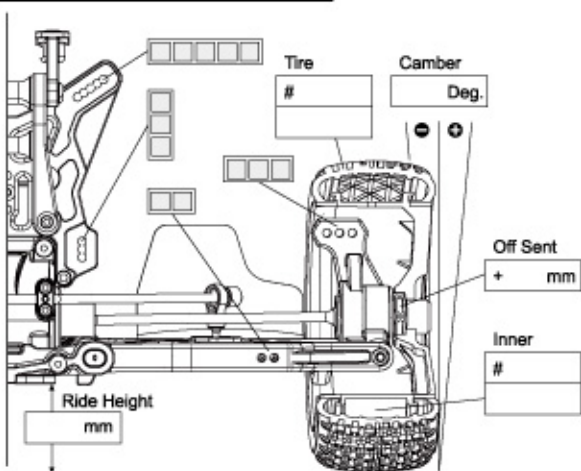


WING POSITION




ANTI-ROLL BAR

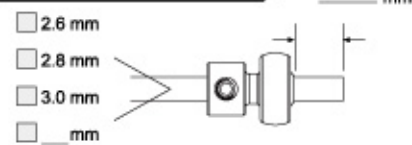


DOWNSTOP

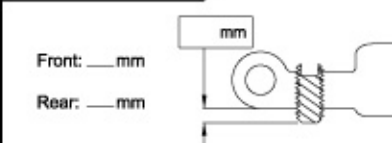


ACKERMAN

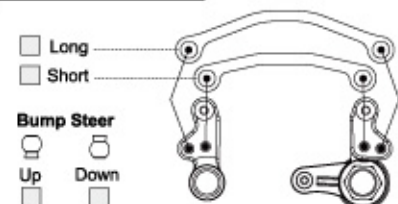

RECEIVER BATTERY

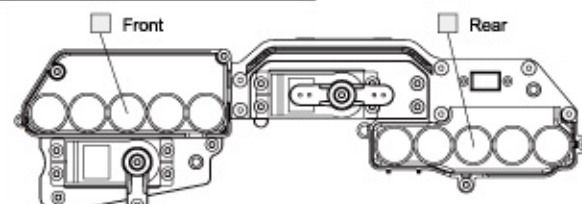

THROTTLE SERVO

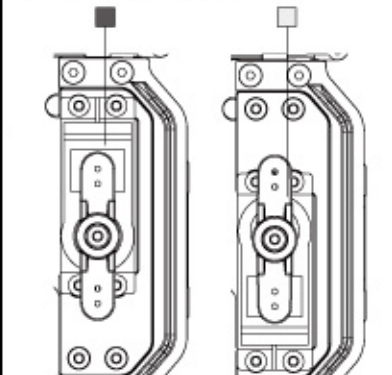

Item		Description	Item		Description	Item		Description
BAG A-1			6253	2	Shock caps bottom	1002	1set	Front lower arm
SJG4312	4	Screw 3*12	6254	2	Shock cap top	1207	2	Link for stabilizer
0001	1	Diff gasket	8060	2	Front spring	8215	2	Arm link ball
0002	2	Diff O-ring	8250	2	Shock shaft front	8224	4	Front suspension arm pushing
0013	2	washerØ6*12*0.2	BAG B-2			8214	2	Link ball for stabilizer
0053	2	Ball bearing 8*16*5	0004	2	Dust rubber	BAG D-1		
1200	1	Diff case	1112	4	Damper end parts	8910	1	F/R diff pinion gear 10T
8056	2	PINø2.5*11.8	1212	2	Shock end tray	0051	2	Ball bearing 5*13*4
8219	2	Cup joint	1312	2	Damper cap bush	1004	1set	Front gear box
8242	2	Shaft of planetary	6252	2	Shock adjuster nuts	8237	1	F/R diff pinion coupler caps
8710	4	Diff gear 10T	6253	2	Shock caps bottom	8243	1	F/R diff pinion couplers
8720	2	Diff gear 20 T	6254	2	Shock cap top	8057	1	Pin 2.5*12.6
8943	1	Front Diff. ring gear 43T	6249	2	Rear shock body	8216	1	CVD assy
BAG A-2			8061	2	Rear spring	8217	1	Center drive shaft
SJG4312	4	Screw 3*12	8251	2	Shock shaft rear	1012	1	Front bumper
0001	1	Diff gasket	BAG B-3			SK4406	1	Set screw 4*6
0002	2	Diff O-ring	0003	2	Diaphragm	SJG4415	4	Screw 4*15
0013	2	washerø6*12*0.2	0008	4	Shock O-ring	BAG D-2		
0053	2	Ball bearing 8*16*5	0060	2	Oil seal cap O-ring	SJG4320	2	Screw 3*20
1200	1	Diff case	0061	2	Damper O-ring	SIG4314	2	Screw 3*14
8056	2	PINØ2.5*11.8	0091	2	Shock piston guide set	0014	2	Washer 13.5*15.8*0.2
8219	2	Cup joint	0092	2	Shock piston guide set	SJG4314	4	Screw 3*14
8242	2	Shaft of planetary	0096	2	Piston	8227	2	Hinge pin 4mm
8710	4	Diff gear 10T	0300	2	3mm nylon nuts	1116	4	Hubs
8720	2	Diff gear 20 T	0360	2	Washer 3*6*0.5	7201	1	Front hinge pin brace
8843	1	Rear Diff. ring gear 43T	8210	2	Shock ends ball bearing	7202	1	Front-rear hinge pin brace
BAG A-3			BAG C-1			SK4303	4	Set screw 3*3
SJG4312	4	Screw 3*12	1011	2	Front spindles	SG4256	4	Screw 2.5*6
0001	1	Diff gasket	0053	2	Ball bearing 8*16*5	8051	1	Anti-roll barØ2.3
0002	2	Diff O-ring	0054	2	Ball bearing 1/2*3/4*5/32	BAG D-3		
0013	2	washerØ6*12*0.2	8217	2	Center drive shaft	7220	1	Shock tower front
0052	2	Ball bearing 8*14	8218	2	Wheel axles	SIG4314	4	Screw 3*14
1200	1	Diff case	8216	2	CVD assy	SIG4318	8	Screw 3*18
8045	1	center Diff. 45T spur gear	8057	2	Pin 2.5*12.6	6246	2	Aluminum washer
8056	2	Pin 2.5*11.8	8058	2	Pin 3*16.8	8232	2	Shock stand offset
8228	2	cup joint center	6229	2	Wheel hexagon	SG4325	2	Screw 3*25
8242	2	Shaft of planetary	SK4505	2	Set screw 5*5	0300	6	3mm nylon nuts
8710	4	Diff gear 10T	6002	2	Wheel nuts	1007	4	Upper arm link
8720	2	Diff gear 20T	BAG C-2			8211	4	Pivot ball Ø6.9mm
BAG B-1			1111	2	Front spindle carriers	8220	2	Front turnbuckles
0004	2	Dust rubber	8223	4	Suspension pin	0380	2	Washer 3*8*0.7
1112	4	Damper end parts	SK4306	4	Set screw 3*6	SK  SJG  SG  SIG 		
1212	2	Shock end tray	BAG C-3					
1312	2	Damper cap bush	SK4408	2	Set screw 4*8			
6248	2	Front shock body	SG4258	4	Screw 2.5*8			
6252	2	Shock adjuster nuts	SIG4414	4	Screw 4*14			

Item		Description	Item		Description	Item		Description
BAG D-4			SJG4310	2	Screw 3*10	BAG H		
8213	2	Pivot ball Ø6.9mm	SJG4314	2	Screw 3*14	1008	1set 16pcs	Radio box
1307	4	Rod end	7203	1	Rear-front hinge pin brace	6208	1	Rotate aluminum plate
8222	2	Rotate turnbuckles	1116	4	Hubs (0.5°*2) (1°*2)	6209	1	Carburetor aluminum plate
8212	2	Pivot ball Ø6.9mm	8227	2	Hinge pin 4mm	0062	1	Antenna pipe & cover
0300	2	3mm nylon nuts	SIG4306	4	Screw 3*6	0063	1	Antenna set & cover
SJG4318	2	Screw 3*18	SK4303	4	Set screw 3*3	0005	1	Switch cover
BAG E-1			8053	1	Anti-roll barØ2.6	6241	1set 3pcs	Antenna set
SK4505	2	Set screw 5*5	SG4256	4	Screw 2.5*6	SIG4316	8	Screw 3*16
6229	2	Wheel hexagon	BAG F-3			SIG4306	5	Screw 3*6
8058	2	Pin 3*16.8	SG4325	2	Screw 3*25	SJG 4308	4	Screw 3*8
0053	2	Ball bearing 8*16	SG4320	2	Screw 3*20	SJG4312	3	Screw 3*12
1010	1set	Rear upright	1006	1set	Wing stay	SJG 4410	6	Screw 4*10
0054	2	Ball bearing1/2*3/4*5/32	8232	2	Shock stand offset	SK 4303	1	Set Screw 3*3
8218	2	Wheel axles	0300	6	3mm nylon nuts	SIG 4310	3	Screw 3*10
8057	2	Pin 2.5*12.6	1507	3	Wing stay brace	BAG I-1		
8216	2	CVD assy	SIG4312	8	Screw 3*12	6001	1set	Clutch set
8217	2	Center drive shaft	0380	4	Washer 3*8*0.7	BAG I-2		
6002	2	Wheel nuts	SIG4310	2	Screw 3*10	6244	1set	Flywheel
BAG E-2			7221	1	Shock tower rear			Bushing
1003	1set	Rear lower arm	BAG F-4					Flywheel nut
0300	4	3mm nylon nuts	1009-16	1	F/R brace set	SG4308	1	Screw 3*8
8238	2	Hinge pin studs	SIG4318	7	Screw 3*18	0380	1	Washer 3*8*0.7
1207	2	Link for stabilizer	0300	7	3mm nylon nuts	0051	2	Ball bearing 5*13*4
8214	2	Link ball for stabilizer	SIG4314	4	Screw 3*14	0016	3	Washer 5*7*0.2
SG4258	4	Screw 2.5*8	6246	2	Aluminum washer	8317	1	Clutch bell 17T
8215	2	Arm link ball	8211	4	Pivot ball Ø6.9mm	BAG I-3		
SK4408	2	Set screw 4*8	1007	2	Upper arm link	6210	2	Engine mount retainer
BAG F-1			1107	2	L upper arm link	6206	2	Engine mount
8910	1	F/R diff pinion gear 10T	8221	2	Rear turnbuckles	SG4314	4	Screw 3*14
0051	2	Ball bearing 5*13*4	SJG4312	2	Screw 3*12	SIG 4410	4	Screw 4*10
1005	1set	Rear gear box	BAG G			SJG4410	6	Screw 4*10
8237	1	F/R diff pinion coupler caps	6234	2	Front brake cam		4	Gap washer 3*5
8243	1	F/R diff pinion couplers	1014	6	Center diff mount	BAG I-4		
8057	1	Pin 2.5*12.6	SK4306	2	Set screw 3*6	6226	1set	Muffler stay
SK4406	1	Set screw 4*6	SJG4308	2	screw 3*8	0300	1	3mm nylon nuts
8216	1	CVD assy	8059	2	Brake steel stick	8067	1	Steel stick
8217	1	Center drive shaft	SK4303	2	Set screw3*3	SJG4410	1	Screw 4*10
1016	1	Rear bumper	6266	2	Brake piston	SK4404	1	Set screw 4*4
SJG4415	4	Screw 4*15	0010	4	Brake clip			
BAG F-2			0011	4	Brake clip spring			
SJG4345	2	Screw 3*45	0009	2	Brake disk			
7204	1	Rear-rear hinge pin brace	SIG4312	4	Screw 3*12			
SJG4320	2	Screw 3*20	7207	1	Aluminum Diff mount			
0014	2	Washer 13.5*15.8*0.2	SJG4308	4	Screw 3*8			
1009-18	1	Front upper plate	SJG4410	4	Screw 4*10			

Item		Description	Item		Description	Item		Description
BAG J-1			0050	1	Air filter foam			
6235	1	Steering over-ride hardware	0064	2	Strap			
1019	3	Steering set	BAG N					
8066	1	Over-ride spring	1001	1	Fuel tank			
8236	1	Steering over-ride nuts		1	Ring pull for fuel tank			
8257	2	Bushing	SJG4310	2	Screw 3*10			
SIG4408	2	Screw 4*8	SIG4314	1	Screw 3*14			
8062	1	Steering rack (long)	BAG O					
8063	1	Steering rack (short)	7001	1	Chassis			
SJG4318	2	Screw 3*18	BAG P					
SIG4316	2	Screw 3*16		1	Wing			
BAG J-2			0099	2	R Pin			
8210	2	Shock ends ball bearing						
1407	2	Button head						
8264	1	Servo rotate turnbuckle						
0300	2	3mm nylon nuts						
SIG4312	1	Screw 3*12						
SIG4314	1	Screw 3*14						
BAG J-3								
6225	2	Bell crank shafts						
SJG4410	2	Screw 4*10						
SJG4312	3	Screw 3*12						
0300	3	3mm nylon nuts						
1009	2	Front upper plate & F/R brace set						
SJG4308	1	Screw 3*8						
0055	4	Ball bearing 6*10*3						
SIG4312	2	Screw 3*12						
BAG K								
1017	1 set	Stone guard						
SJG4308	5	Screw 3*8						
BAG L								
1015	1 set	Rotate servo set						
	2							
	1							
6003	4	Throttle/brake link						
6265	1	Throttle and brake linkage						
8064	3	Carburetor						
8065	1	Carburetor spring						
SK4303	5	Set screw 3*3						
SIG 4310	2	Screw 3*10						
0300	1	3mm nylon nuts						
SJG4312	2	Screw 3*12						
	2	Oil pipe 10 mm						
BAG M								
1013	2	Air clean set						
SJG4310	2	Screw 3*10						